



Toshiba AW-1170SM Owner's Manual

Fully automatic washing machine

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19

20

• PAGE

1

OF 20 GO

•

[Table of Contents](#)

•

Bookmarks

Quick Links

[1 Description of Parts](#)

[2 Control Panel](#)


[3 How to Operate](#)

[4 Maintenance](#)

[5 Error Indication List](#)

[6 Specifications](#)

[Download this manual](#)

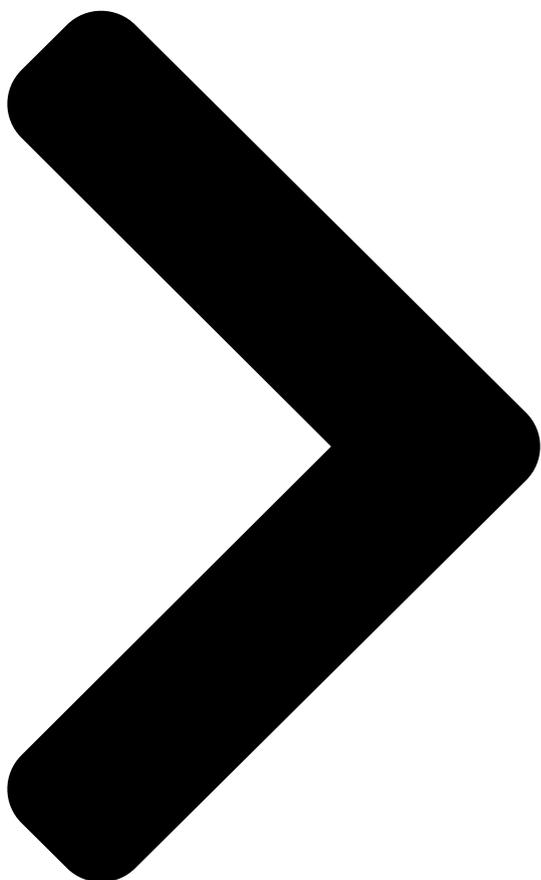

**FULLY AUTOMATIC
WASHING MACHINE**

AW-1170SM

AW-9770SM TOSHIBA

Leading Innovation >>>

Thank you for purchasing TOSHIBA Fully Automatic Washing Machine.

•

Please read this manual carefully in order to operate the machine properly.

•
Sometimes you may find some water remaining in the drainage hose at your first operation. This is caused by the production-line test and nothing to worry about.

OWNER'S MANUAL

TOSHIBA

CONTENTS

Leading Innovation >>>

| | |
|--|-------|
| WARNING | 2 |
| CAUTION | |
| DESCRIPTION OF PARTS | 3 |
| CONTROL PANEL | |
| DESCRIPTION | 4~5 |
| RECOMMENDED DETERGENT | |
| AMOUNT | 5 |
| HOW TO OPERATE | 6~7 |
| PRESET MODE | 7 |
| SUPER SPIN DRY (TUB DRY) | 8 |
| CUSTOM WASH CYCLES | 9 |
| CHILD PROOF MODE | 10 |
| WASHING PROCESS | 11 |
| OPTION MODE | 11~12 |
| LAUNDRY GUIDE | 12 |
| MAINTENANCE | 13~15 |
| INSTALLATION | 15~17 |
| BEFORE CALLING | |
| THE SERVICEMAN | 18~19 |
| HANDLING METHOD FOR | |
| EMERGENCY | 19 |
| SPECIFICATIONS | 19 |



[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba AW-1170SM

[Washer Toshiba AW-7480EM Owner's Manual](#)

Fully automatic washing machine (16 pages)

[Washer Toshiba AW-8570SM Owner's Manual](#)

Fully automatic washing machine (20 pages)

[Washer Toshiba AW-G9930S Service Manual](#)

Fully automatic washing machine (52 pages)

[Washer Toshiba AW-B1100GM User Manual](#)

(20 pages)

[Washer Toshiba AW-G9930S/G1130S Service Manual](#)

Fully automatic washing machine (53 pages)

[Washer Toshiba AW-J800A-PH Owner's Manual](#)

(22 pages)

[Washer Toshiba AW-DUM1000JS Owner's Manual](#)

Fully automatic washing machine (24 pages)

[Washer Toshiba AW-SD120SM Owner's Manual](#)

(36 pages)

[Washer Toshiba AW-SD150UBPE Owner's Manual](#)

Fully automatic washing machine (18 pages)

[Washer Toshiba AW-SD150SBA Service Manual](#)

Fully automatic washing machine (81 pages)

[Washer Toshiba AW-J800AH Owner's Manual](#)

Fully automatic (24 pages)

[Washer Toshiba AW-M1100PT Owner's Manual](#)

Fully automatic washing machine (24 pages)

[Washer Toshiba AW-8450SBE Owner's Manual](#)

Fully automatic washing machine (6 pages)

[Washer Toshiba aw-dc series Owner's Manual](#)

Fully automatic washing machine (37 pages)

[Washer Toshiba AW-DC1000CM Owner's Manual](#)

Fully automatic washing machine (36 pages)

[Washer Toshiba AW-J750APH Owner's Manual](#)

Fully automatic washing machine (24 pages)

Summary of Contents for Toshiba AW-1170SM

[Page 1: Table Of Contents](#)

INSTALLATION 15~17 BEFORE CALLING THE SERVICEMAN18~19 HANDLING METHOD FOR EMERGENCY19 SPECIFICATIONS 19 Thank you for purchasing TOSHIBA Fully Automatic Washing Machine. • Please read this manual carefully in order to operate the machine properly. •...

[Page 2: Warning](#)

WARNING WARNING: This indicates an important item which incorrect operation may lead to injury or death. Never attempt to touch laundry in the spin basket until the motion of the basket stops completely. Laundry in the basket may become wrapped around the hand, even when the

basket is only moving slowly.

[Page 3: Caution](#)

CAUTION CAUTION: This indicates an important item where incorrect operation may lead to injury or material damage. Do not pull the cord when unplug the appliance. Hold the plug body to unplug. It can cause electrical shock or malfunctions that lead to injuries. Do not use water with temperatures over 50°C.

[Page 4: Description](#)

CONTROL PANEL DESCRIPTION ■ Operation Panel of AW-1170SM and AW-9770SM. Digital Display Un • Following is the operation panel of AW-1170SM. • Apart from the displaying values of [WATER LEVEL], other items are common to • After starting the operation AW-1170SM and AW-9770SM.

[Page 5: Amount](#)

RECOMMENDED DETERGENT AMOUNT al Display Unit The estimated amount of washing Manual Water he operation Detergents Softener Detergent , the washer Level Setting guided deter-Concentrated Normal Display 1.4 spoon of the Powder Liquid Type Type detergent 1170SM 9770SM supply using the measure spoon Approx.

[Page 6: How To Operate](#)

HOW TO OPERATE Preparation Set drainage hose for drain. Set the water supply hose correctly. Turn the water faucet on. • Make sure that there are no sign of water leakage at water tap or inlet valve. Connect the power plug. "REGULAR"...

[Page 7: Preset Mode](#)

(180 cm x 230 cm or less) 100% synthetic fiber Type: Mayer, Tuft, Down cloth Weight: 5.0 kg or less (AW-1170SM) Put a large item placed in the blanket 4.2 kg or less (AW-9770SM) • washing net in the washing basket.

[Page 8: Super Spin Dry \(Tub Dry\)](#)

SUPER SPIN DRY (TUB DRY) Select "SUPER SPIN DRY" from the (WASH, RINSE, SPIN) cycle. ■ The amount of laundry/once of spin Less than 5.0 kg ■ Setting time for spinning • You can manually set the time of spinning according to the following guide: If you would like to shorten the time of drying clothes Turn the POWER on and put the laundry in the basket.

[Page 9: Custom Wash Cycles](#)

CUSTOM WASH CYCLES At first, the value for each cycle is the standard "REGULAR" "HEAVY WASH" cycles setting. The user can change the time of washing, of rinsing and of spinning on every cycle by pressing the buttons. The cycle can be set as you desire, e.g. spin only, reuse the washed water/detergent.

[Page 10: Child Proof Mode](#)

CHILD PROOF MODE (if you have small children) CHILD PROOF mode This model is equipped with CHILD PROOF mode. After this mode is set to ON, the washer will alarm if the lid is opened during the operation. If you find the accident such as children's falling into the wash tub, please take necessary safety action urgently.

[Page 11: Washing Process](#)

WASHING PROCESS The asterisk (*) mark means the initial setting. Cycle Water Level Wash (Approx.) Rinse Spin (Approx.) Required Time (Approx.) REGULAR (CONDENSED) 35~55 min Shower rinsing (2 times) BUBBLE) (35~55 min) *8 min Static rinsing (1 time) *5 min 8 min maximum 21L~79L (21L~77L) HEAVY WASH...

[Page 12: Option Mode](#)

OPTION MODE If you wish to turn off the end buzzer sound • You can turn off the buzzer sound by Press the "COURSE" button and hold. Then press the POWER button. After buzzer beeps 3 times, the end buzzer disabled. Follow this instruction when you want to reset to enable the buzzer.

[Page 13: Maintenance](#)

MAINTENANCE CASSETTE FILTER Clean the lint trap at the end of operation. Cassette filter How to remove How to set in Hold the upper side of the cassette filter, and push down Hold the filter case with its top side up. Put the lower side and pull it at the same time.

[Page 14: Cleaning The Tub](#)

MAINTENANCE Washing machine body and panel Before performing any maintenance on your washing machine, be sure to remove the electrical plug from its power source. The main body and control panel may be cleaned by wiping with a soft cloth soaked in water. (Hard-to-remove dirt may be cleaned by wiping with a soft cloth soaked in a mild detergent.) Caution: Never clean the body or control panel with benzene, thinner, cleanser, or other chemical cleaners.

[Page 15: Installation](#)

INSTALLATION Choosing an installation location Avoid place where the machine is exposed to direct sunlight. Install your washing machine in a level, stable place. • It is dangerous to place the washing machine in an unstable location since it may move during vibration. Plastic parts may become deformed or discolored.

[Page 16](#) INSTALLATION Installing the drainage hose Moving the hook Drainage hose extension • • When inserting the drainage hose into a wash pan or Pay close attention to the height of the drainage hose and onto a drain pipe, the hook may be moved to facilitate articles over which it passes.

[Page 17](#) INSTALLATION Attaching the water supply hose to the faucet If you attach the water supply hose completely, it may cause a water leakage. Branching Caution water pipe Faucet shape Wall-mounted faucets are best. • The old inlet hose should not be reused. •...

[Page 18: The Serviceman](#)

BEFORE CALLING THE SERVICEMAN WHEN CHECK TREATMENT • does not operate Is there a power outage? Please confirm whether a power failure or fuse • Is the circuit breaker or fuses cut off? breaker is cut. Then draw out power supply •...

[Page 19: Emergency](#)

HANDLING METHOD FOR EMERGENCY When the machine takes on abnormal operation, please disconnect the power plug and send it to our service agency for handling. Never disassemble the machine by yourself, for safety reasons. SPECIFICATIONS Model AW-1170SM AW-9770SM Model AW-1170SM AW-9770SM Regular cycle 55 min.

[Page 20](#) MANUFACTURED BY TOSHIBA CONSUMER PRODUCTS (THAILAND) CO., LTD.
6248090801-1...

This manual is also suitable for:

[Aw-9770sm](#)