



Whirlpool ACG 900 IX User Manual

Installation & servicing

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
Table Of Contents
25

--

•

•

Troubleshooting

•

Bookmarks

--

Quick Links

[1 General Information](#)

[2 To Use Electric Oven](#)

[3 Use of the Electric Grill](#)

[4 Troubleshooting](#)

[5 General Information](#)

[Download this manual](#)



Users Guide Installation & Servicing Model ACG 900 IX

NOTE TO INSTALLER: LEAVE THE OWNER'S GUIDE MANUAL WITH THE APPLIANCE.
(Keep For Future Reference)
AU

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Whirlpool ACG 900 IX

[Cookers Whirlpool ADN 612 Instructions For Installation Manual](#)

Gas kitchens with pilot (16 pages)

[Cookers Whirlpool AGB 501 Installation, Operating And Maintenance Instructions](#)

Electric cookers (47 pages)

[Cookers Whirlpool ACH 846/BB/WP Service Manual](#)

Gas cooker (6 pages)

[Cookers Whirlpool AGG540IX Instruction Manual](#)

(15 pages)

[Cookers Whirlpool ACG540IX Service Manual](#)

(9 pages)

[Cookers Whirlpool ACMT 6533/WH Instructions For Use Manual](#)

(76 pages)

[Cookers Whirlpool Gas Range User Manual](#)

Whirlpool gas range cooker (48 pages)

[Cookers Whirlpool AGB 405/WP Manual](#)

Electric tilting cooker (13 pages)

[Cookers Whirlpool Need For Speed WFG775H0HV Wiring Diagram](#)

(2 pages)

[Cookers Whirlpool ACMT 6533/IX/2 Instructions For Use Manual](#)

(32 pages)

[Cookers Whirlpool ADN 632 Instructions For Installation, Use And Maintenance Manual](#)

Gas fry top (12 pages)

[Cookers Whirlpool WL B4560 NE/W Manual](#)

(82 pages)

[Cookers Whirlpool W6 OS4 4S1 H BL Quick Start Manual](#)

(73 pages)

[Cookers Whirlpool WS Q5760 NE Manual](#)

(35 pages)

[Cookers Whirlpool AKR 951 Installation Sheet](#)

(20 pages)

Summary of Contents for Whirlpool ACG 900 IX

[Page 1](#) Users Guide Installation & Servicing Model ACG 900 IX NOTE TO INSTALLER: LEAVE THE OWNER'S GUIDE MANUAL WITH THE APPLIANCE. (Keep For Future Reference)

[Page 2: Dimensions](#)

WHEN YOU CALL FOR SERVICE RECORD HERE FOR EASY REFERENCE Costumer Service: 1300 363 344 Service call booking: 1300 361 166 Model Colour Whirlpool Europa S.r.l. Viale G. Borghi, 27 Serial Number Installation Date 21025 Comerio (VA) Italy Dealer's Name and Address...

[Page 3: Positioning](#)

INSTALLATION PROVISION FOR VENTILATION The room where the Cooker is installed should have permanent ventilation as follows: "Ventilation must be in accordance with AS5601/AG 601 - Gas Installations. In general, the appliance should have adequate BACK SIDE ventilation for complete combustion of gas, proper flueing and to maintain temperature of immediate surroundings within safe limits."...

[Page 4: Gas Connection](#)

GAS CONVERSION AND ADJUSTMENT GAS CONNECTION When used with natural gas all burners have been preset at our Should conform to gas utility regulations e.g. AS5601 Gas factory and further adjustment should not be necessary. Conversion installations; also refer to rangehood manufacturers kits to other gases are available from the place of purchase.

[Page 5](#) - change the injector (see Fig. 1A) and replace it with another 2nd SECTION FOR THE USER one suitable for the new type of gas (see tab. 1) WARNING: Children should be kept away while the oven or grill is in use since accessible parts become hot.

[Page 6: Automatic Electric Ignition](#)

The small flame indicates the 'low position'. - 1 Minute Tour - Turn the knob to it after the contents of a pan have boiled. Be safe Please read the rest of the instruction book which contains important information to help you use the appliance safely and efficiently.

[Page 7: To Use Electric Oven](#)

HOW TO USE YOUR ELECTRIC OVEN When you turn the control knob to this position, the light will be - Before cooking in the first time we recommend that the oven on for all the following operations. should be operated at 200° C for 30 minutes to remove any manufacturing greases and odours.

[Page 8](#) conventional oven, using one tray only. Cooking results are a smoking and may start a fire. matter of personal preference and may easily be adjusted to suit Remember do not place pan or items directly onto the oven base. individual requirements by slight adjustment of the temperature Never leave unit unattended at high heat settings.

[Page 9: Use Of The Electric Grill](#)

USE OF THE ELECTRIC GRILL CLEANING USING THE GRILL Before cleaning the appliance, close the gas stopcock and unplug Turn the oven knob to the right and place it on the grill position appliance or disconnect power at the main circuit breaker of the electrical system.

[Page 10: Replacement Of Supply Cable](#)

SERVICE INSTRUCTIONS IMPORTANT Do not use excessive water when cleaning the oven and avoid All service should be carried out by a authorised service water passing through the fan grill or ducts in the oven back . technician only. Avoid letting grease deposit collect around the upper heating REPLACEMENT OF THE SUPPLY CABLE element: it will cause smoking and may start a fire.

[Page 11: Oven Lights](#)

DISASSEMBLE OF WORK-TOP SOME SAFETY POINT In case it is necessary to repair or replace the inside components, act as follows: Do not use the appliance as a space heater. Remove the grids, remove burners and flame-spreaders (see fig).

[Page 12: Troubleshooting](#)

OVEN DOES NOT WORK AT ALL PROBLEM SOLVER First, when the oven is equipped with timer, check appliance is Any of the following are considered to be abnormal operation not programmed to turn on later. If it is, turn to manual setting (i.e. and may require servicing: hand symbol).

[Page 13](#) Users Guide Installation & Servicing Model ACG 900 IX...

[Page 14: Overall Dimensions](#)

WHEN YOU CALL FOR SERVICE RECORD HERE FOR EASY REFERENCE GENERAL INFORMATION ENVIRONMENTAL WARNING Waste packaging SECTION FOR THE QUALIFIED TECHNICIAN OVER

ALL DIMENSIONS Getting to know your new cooker Thank you for choosing one of our products.

[Page 15: Installation](#)

INSTALLATION Clearances to non-combustible materials PROVISION FOR VENTILATION POSITIONING Clearances to combustible materials Note: the cooker is fitted with a metallic rear hob protecting profile (□F□, see fig. 1) which must be assembled in following way: - put the profile (F) on the rear part of the cooker as in fig.

[Page 16: Special Note](#)

TO FIX THE COOKER TO THE REAR WALL WARNING - IT IS RECOMMENDED THAT A SERVICE TAP AND UNION BE FITTED ADJACENT TO THE APPLIANCE INLET TO FACILITATE FUTURE SERVICING. VERY IMPORTANT FOR THE INSTALLER Before Leaving GAS CONVERSION AND ADJUSTMENT Fig.

[Page 17: Electrical Connection](#)

2nd SECTION FOR THE USER WARNING: MINIMUM FLOW ADJUSTMENT FOR HOB-TOP TAPS Attention: WARNING - WARNING ELECTRICAL CONNECTION PROGRAMMER WITH COOKING END TIME WARNING: THIS APPLIANCE MUST BE EARTHED Connecting the mains cable IMPORTANT...

[Page 18](#) - 1 Minute Tour - Be safe Gas and Electricity on WARNING Automatic electric ignition...

[Page 19](#) HOW TO USE YOUR ELECTRIC OVEN Defrosting with fan MULTIFUNCTIONAL OVEN The oven is fitted with: Natural convection N.B.: Oven thermostat knob Fan oven Medium grill Oven commutator knob Total grill Fan assisted total grill Note: Air forced lower heating element Always use the oven with the oven door closed.

[Page 20](#) GUIDE FOR FORCED CONVECTION COOKING (Back rolled electric element with fan) Food Thermostat Shelf Position Cooking Time setting °C (Counted from Bottom) Food Thermostat setting °C Cooking Time PLATE WARMING Warning:...

[Page 21](#) USE OF THE ELECTRIC GRILL CLEANING USING THE GRILL Pan supports and burners Warning: burner cap notch for electrode in burner head electrode Oven Shelves To remove the shelves from the oven, To replace, Daily Bump Interior:...

[Page 22: Service Instructions](#)

SERVICE INSTRUCTIONS IMPORTANT All service should be carried out by a authorised service technician only. REPLACEMENT OF THE SUPPLY CABLE ALWAYS UNPLUG THE PLUG FROM THE CURRENT SOCKET OR SWITCH OFF THE CURRENT ON THE POWER SUPPLY LINE BY MEANS OF THE MAINS CIRCUIT SWITCH, BEFORE CARRYING OUT ANY MAINTENANCE ON THE OVEN.

[Page 23](#) DISASSEMBLE OF WORK-TOP SOME SAFETY POINT If you smell gas Open a window. Do not use any electrical switches. Immediately extinguish naked flames. Isolate appliance from gas mains supplies via the isolation stopcock. Contact local gas authority or emergency services as appropriate.

[Page 24: Problem Solver](#)

OVEN DOES NOT WORK AT ALL PROBLEM SOLVER LIGHT BULB DOESN'T COME ON Note: SMOKE COMING FROM OVEN THINGS TO TRY BEFORE CALLING FOR AN ENGINEER Burner does not burn well Burner does not ignite CLOCK/TIMER DOES NOT WORK If, after checking through this section, you cannot resolve your problem please call the number on the data plate fixed to the front cover of these instructions for service and spare parts.