

Using The Menus - Toshiba □TDP-MT8 User Manual

Home cinema dlp technology

1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42

--

•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



Using the menus

7R RSHQ WKH PHQXV PHVW WKH PHQX EXWWRQ RO WKH NHISDG RJ UHPRVH 7KH PHQXV DXWRPDWLDOOY .ORVH DIWHU [] VH.RQGV LI OR EXWWRQV DUH SUHVHVG 7KH 0DLQ.PHQX.DSSHUV [] 8VH WKH DUURZ EXWWRQV WR PRYH XS DQG GRZQ WR KLJK [] OJJKW WKH GHVLUHG VXEPHQX WKHQ SUHVW WKH Select EXWWRQ [] 7R .KDJR PHQX VHWWLQJ KUKOLJKW LW SUHVW Select WKHQ XVH WKH XS DQG GRZQ DUURZ EXWWRQV WR PRYH UP OR ER[HV [] 3UHVV Select WR .RQLLUP WRQV RU WXUQ WKH IHDWXUH RQ RU RII XVLOJ .KH.N ER[HV [] 3UHVV Select WR .RQLLUP [RXU .KDJR] 8VH WKH DUURZV WR ODYJDWH WR DOPWKHUV HWWLQJ.KHO BXU DGXVWPHQVV DUH .RPSOHVH ODYJDWH WR (LW WKHQ SUHVW Select WR JR WR WKH SUHYLRXV PHQX [] SUHVW Select WR WRQV DUURZV WR PRYH UP OR ER[HV [] 'RWV DSSHOU EHIRUH WKH PHQXV PHVW WKH PHQXV PHVW WKH PHQXV PHVW OYHYO UDQJLOJ IURP ROH WKH 0DLQ PHQX WR BXU WKH RYHU OHVWLG PHQX [] 7KH PHQXV DUH JURXS [] G E \ XVDJH []

Using the menus

To open the menu, press the menu button on the keypad or remote. (The menu automatically closes after 60 seconds if no buttons are pressed.) The Main menu provides the following options:

To change a menu setting, highlight it, press **Select**, then use the up and down arrow buttons to adjust the value, select an option using radio buttons, or turn the feature on or off using check boxes. Press **Select** to confirm your changes. Use the arrow buttons to navigate to another setting. When your adjustments are complete, navigate to Exit, then press **Select** to go to the previous menu; press the **Menu** button at any time to close the menus.

Dots appear before the menu name. The number of dots indicate the menu's nesting level. For example, the Picture menu is four levels deep (the most nested menu).

- The Picture menu provides image adjustments.
- The Settings menu provides set-up type adjustments that are not changed often.
- The About menu provides a read-only display of information about the projector and source.

Certain menu items may be hidden until a particular source is connected. For example, Tint is only available for NTSC video sources and will be hidden when other sources are active. Other menu items may be grayed out when they are not available. For example, Brightness is grayed out until an image is active.

Main menu
21 Menu button
 Keypad navigation buttons
 Picture menu
 Dots
 Settings menu
 About menu





Main menu



Picture menu



About menu

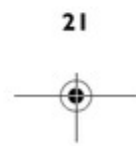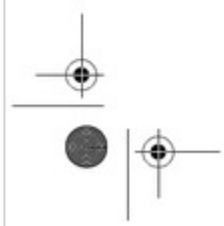

[Previous Page](#)
[Next Page](#)

1
...
18
19
20
21
22
23
24
25

Related Manuals for Toshiba □TDP-MT8

[Projector Toshiba TDP-MT8 Service Manual](#)

(97 pages)

[Projector Toshiba TDPMT8U User Manual](#)

Owners manual (42 pages)

[Projector Toshiba TDP-MT200 Owner's Manual](#)

Toshiba dlp projector owner's manual tdp-mt200 (44 pages)

[Projector Toshiba TDP- T80 Service Manual](#)

(93 pages)

[Projector Toshiba TDP-MT500 Owner's Manual](#)

Toshiba projector tdp-mt500 owner's manual (42 pages)

[Projector Toshiba TDP-MT500 Owner's Manual](#)

Home projector (40 pages)

[Projector Toshiba TDP-MT8U Specifications](#)

Digital light processing projector (2 pages)

[Projector Toshiba TDP TDP-MT700 Owner's Manual](#)

Toshiba owner's manual video projector tdp-mt700 (34 pages)

[Projector TOSHIBA TDP-MT700 Owner's Manual](#)

Home theater projector (36 pages)

[Projector Toshiba TDP-MT700 Service Manual](#)

(49 pages)

[Projector Toshiba mt200 Technical Data](#)

Contrast 2,500 : 1 true 16 : 9 wide screen truevision de-interlacing (2 pages)

[Projector Toshiba TDP MT200 Specifications](#)

Dlp projector (2 pages)

[Projector Toshiba TDP MT700 Specifications](#)

Hd dlp home theater projector (2 pages)

[Projector Toshiba TDP-MT5 User Manual](#)

(78 pages)

[Projector Toshiba TDP-S3 Service Manual](#)

(108 pages)

[Projector Toshiba Projector Manual](#)

(43 pages)

Related Content for Toshiba □TDP-MT8

[TDP490 Using The Menus](#)

Toshiba TDP490

[TDP-ST20E Using The Menus](#)

Toshiba TDP-ST20E

[TDP590 Using The On-Screen Menus](#)

Toshiba TDP590

[TDP-EX21 Using The Menus](#)

Toshiba TDP-EX21

[TDP-TW95E Using The Menus](#)

Toshiba TDP-TW95E

[TDP-TW300U Using The Menus](#)

Toshiba TDP-TW300U

[TLP-X2500C Using The Menus](#)

Toshiba TLP-X2500C

[TDP-S3 Using The On-Screen Menus](#)

Toshiba TDP-S3