

Maintenance; Cleaning The Lens - Toshiba □TDP-MT8 User Manual

Home cinema dlp technology

1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42

--

•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



Service [] WR XVH WKHVH IHDWXUHV KJJKLJKW WKHP DQG SUHVV Select []
Factory Reset [] UHVWRUHV DOO VHWVWLQJV H[.HSW /DPS +RXUV &HLQLQJ] DQG SHDU WR WKHLU GHIDXQW DJWHU GLVSODLQJ D .RQILUPDWLRQ GLDORJ ER []
Test Pattern [] GLVSOD\ V D WHVW SDWWHUQ ZKHQ WKH Blank EXWWRQ RQ WKH UHPRWH LV SUHVHG [] 7R VHOH.W WKH SDWWHUQV XVH WKH XS [] GRZQ DUURZV RQ WKH UHPRWH RU NH [] SDG []
Service Code [] RQO\ XVHG E\ DXWKRULJHG VHUYL.H SHUVRQQHO []

Maintenance

Service: to use these features, highlight them and press **Select**.

Factory Reset: restores all settings (except Lamp Hours, Ceiling, and Rear) to their default after displaying a confirmation dialog box.

Cleaning the lens

Test Pattern: displays a test pattern when the **Blank** button on the remote is pressed. To select the patterns, use the up/down arrows on the remote or keypad.

SSO\ D ORQ [] DEUDVLYH .DPHUD OHQV .OHDQHU WR D VRIW GU\ .ORWK []

1

\$YRLG XVLQJ DQ H[.HVVLYH DPRXQW RI .OHDQHU DQG GRQ-W DSSO\ WKH .OHDQHU GLUH.WO\ WR WKH OHQV [] SEUDVLYH .OHDQHU VROXHOWV RU RWKHU KDUVK .KPL.DOV PLJKW V.UDW.K WKH OHQV []

Service Code: only used by authorized service personnel.

2

GRQ-W LQWHQG WR XVH WKH SORMH.WRU LPPHGLDWHO\ UHSOD.H WKH OHQV .DS []
Service menu

clean the lens with a soft dry cloth and non-abrasive cleaner

30




Maintenance

Cleaning the lens

- 1 Apply a non-abrasive camera lens cleaner to a soft, dry cloth.

Avoid using an excessive amount of cleaner, and don't apply the cleaner directly to the lens. Abrasive cleaners, solvents or other harsh chemicals might scratch the lens.

- 2 Lightly wipe the cleaning cloth over the lens in a circular motion. If you don't intend to use the projector immediately, replace the lens cap.

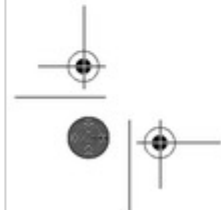

30



Service menu

clean the lens with a soft dry cloth and non-abrasive cleaner

[Previous Page](#)
[Next Page](#)

1
...
27
28
29
30
31
32
33
34

Related Manuals for Toshiba □TDP-MT8

[Projector Toshiba TDP-MT8 Service Manual](#)

(97 pages)

[Projector Toshiba TDPMT8U User Manual](#)

Owners manual (42 pages)

[Projector Toshiba TDP-MT200 Owner's Manual](#)

Toshiba dlp projector owner's manual tdp-mt200 (44 pages)

[Projector Toshiba TDP- T80 Service Manual](#)

(93 pages)

[Projector Toshiba TDP-MT500 Owner's Manual](#)

Toshiba projector tdp-mt500 owner's manual (42 pages)

[Projector Toshiba TDP-MT500 Owner's Manual](#)

Home projector (40 pages)

[Projector Toshiba TDP-MT8U Specifications](#)

Digital light processing projector (2 pages)

[Projector Toshiba TDP TDP-MT700 Owner's Manual](#)

Toshiba owner's manual video projector tdp-mt700 (34 pages)

[Projector TOSHIBA TDP-MT700 Owner's Manual](#)

Home theater projector (36 pages)

[Projector Toshiba TDP-MT700 Service Manual](#)

(49 pages)

[Projector Toshiba mt200 Technical Data](#)

Contrast 2,500 : 1 true 16 : 9 wide screen truevision de-interlacing (2 pages)

[Projector Toshiba TDP MT200 Specifications](#)

Dlp projector (2 pages)

[Projector Toshiba TDP MT700 Specifications](#)

Hd dlp home theater projector (2 pages)

[Projector Toshiba TDP-MT5 User Manual](#)

(78 pages)

[Projector Toshiba TDP-S3 Service Manual](#)

(108 pages)

[Projector Toshiba Projector Manual](#)

(43 pages)

Related Content for Toshiba □TDP-MT8

[TDP-EX21 Maintenance](#)

[Toshiba TDP-EX21](#)

[TDP-MT5 Maintenance & Troubleshooting](#)

[Toshiba TDP-MT5](#)

[P500DL Precautions For Use And Maintenance](#)

Toshiba P500DL

[TDP-S3 Maintenance And Troubleshooting](#)

Toshiba TDP-S3

[Projector Maintenance](#)

Toshiba Projector

[TDP-S2 Maintenance & Troubleshooting](#)

TOSHIBA TDP-S2

[TDP-P3-US Maintenance & Troubleshooting](#)

Toshiba TDP-P3-US

[TDP-B1-US Maintenance](#)

Toshiba TDP-B1-US