

Dimensions Of Snow Ducting - Sanyo R410A Installation Instructions Manual

W-3way eco-i system air conditioner

1

2

3

4

5

Table Of Contents

6

7

8

9

10

11

12

13

14

15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54

--

•

[Table of Contents](#)


•

Bookmarks



2-4. Dimensions of Snow Ducting

Reference diagram for snow-proof ducting (field supply)

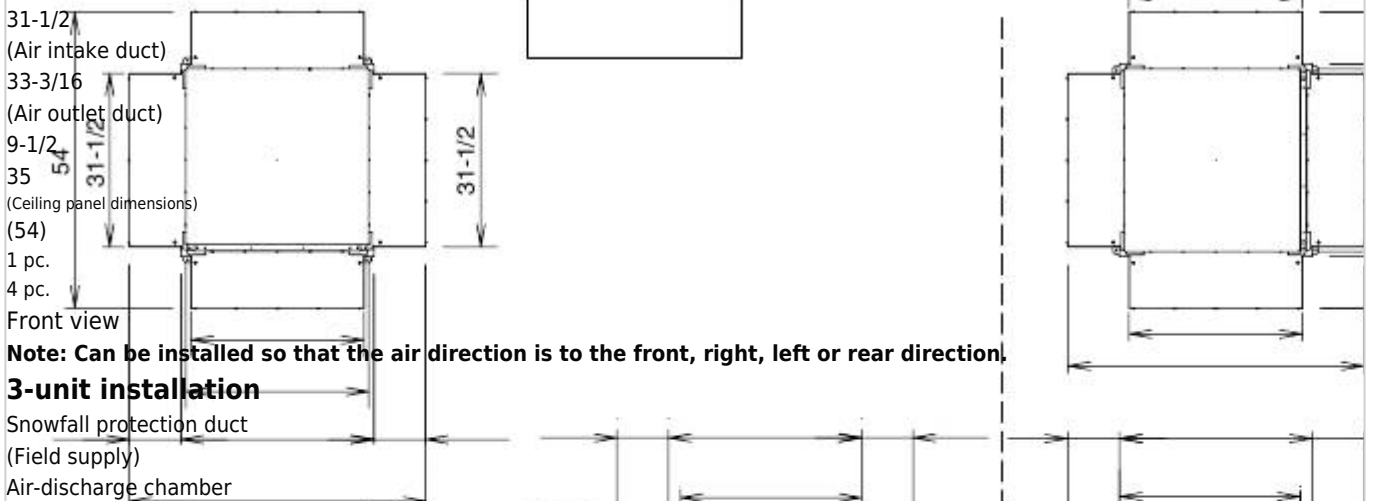

(Field supply)
 Snowfall protection
 duct (Field supply)

Air direction:
 Front direction
 Ceiling panel

9-1/2
 9-1/2
 35
 (Ceiling panel dimensions)
 32-7/8

Right side view

113
 35
 35
 35
 4
 4
 3

31-1/8
 31-1/8
 31-1/8
 7-7/8
 7-7/8

Board (Field supply)
 Board
 Air-discharge chamber (Field supply)
 (Field supply)

131-3/4
 Front view

9-1/2 9-1/2
 (Ceiling panel dimensions)

1
 1

Front view
 Top view (Before installation of snowfall protection duct)

Snowfall protection duct
 (Field supply)
 Ceiling panel
 9-1/2

Snowfall protection
 duct (Field supply)

23

31-1/2
 31-1/2
 54
 9-1/2
 35
 32-7/8
 35

(Ceiling panel dimensions)

9-1/2
 2-1/8
 7/8




Air-discharge chamber
 (Field supply)

Snowfall protection duct
 (Field supply)

Right side view

Air direction:
 Right direction

Ceiling panel
 unit: in.

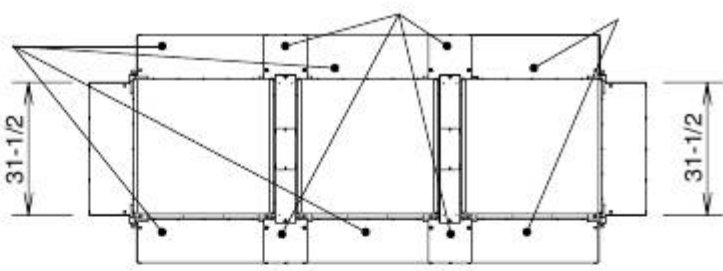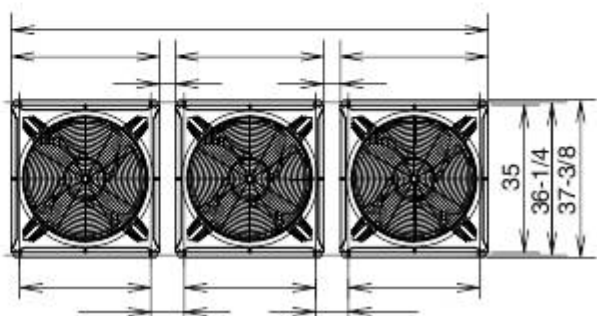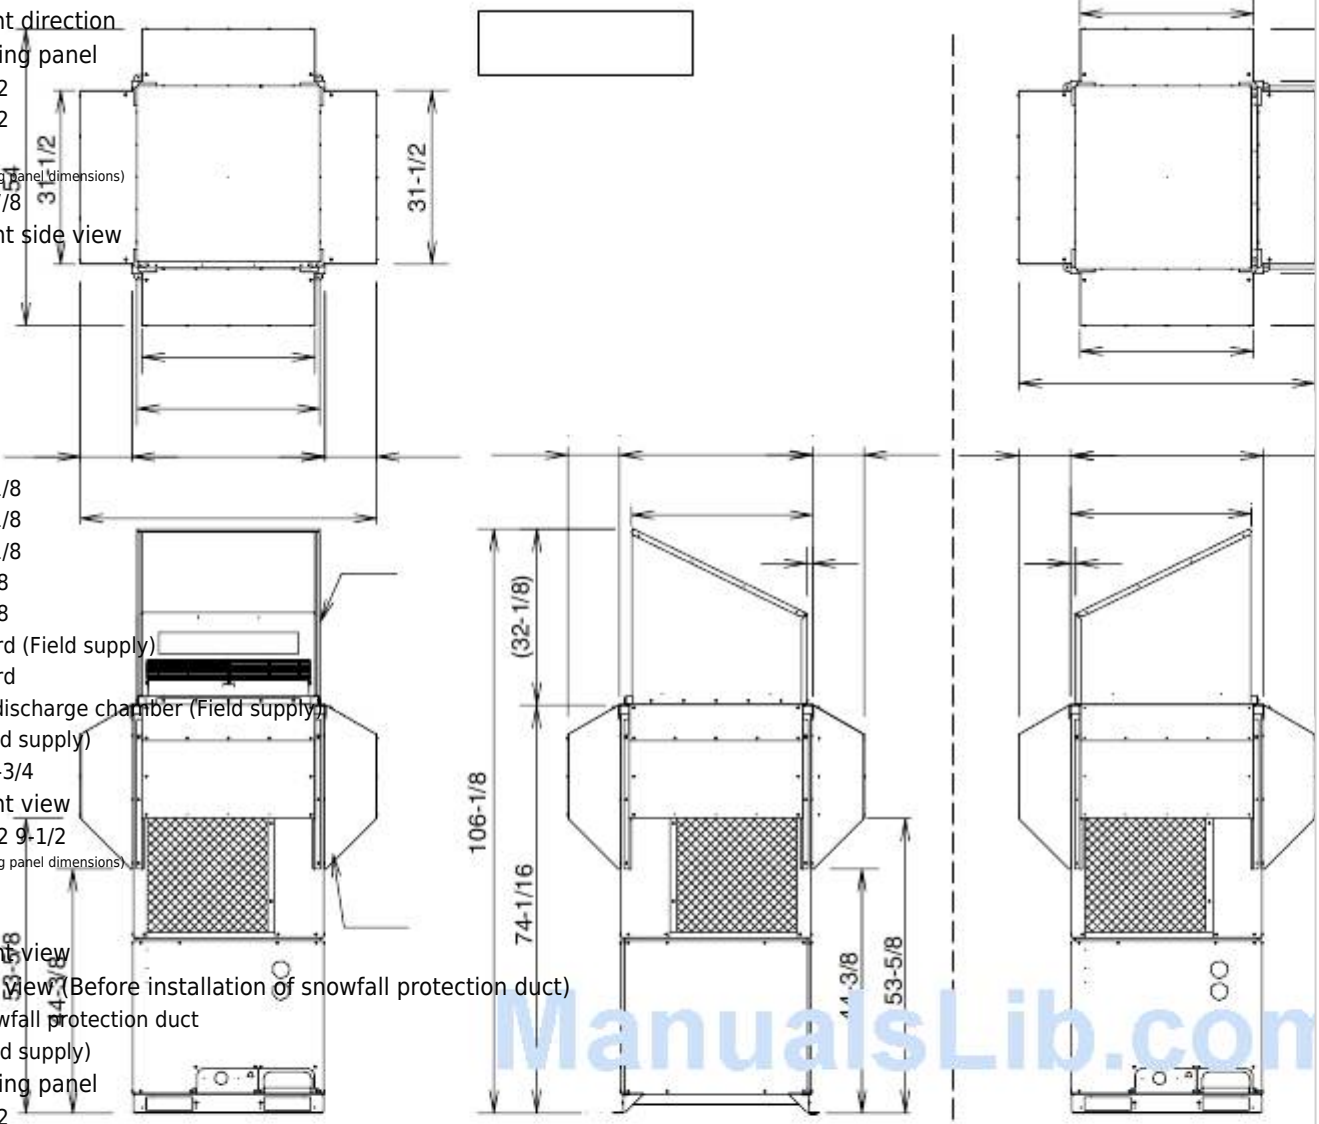

Right side view
unit: in.

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
20
21
22
23
24
25
26
27

Quick Links:

[Remote Controller Test Run Settings](#)

[Meaning of Alarm Messages](#)

Related Manuals for Sanyo R410A

[Air Conditioner Sanyo PW-UMR184EXH56 Installation And Operation Manual](#)

Eco-i system air conditioner (36 pages)

[Air Conditioner Sanyo ECO-i AHX0752 Technical Data Manual](#)

(265 pages)

[Air Conditioner Sanyo MINI ECO-i XHX1252 Service Manual & Test Run Service Manual](#)

(190 pages)

[Air Conditioner Sanyo ECO-i CHDZR07263 Series Service Manual](#)

(146 pages)

[Air Conditioner Sanyo CHDXR09663* Service Manual](#)

2-way eco-i multi system (142 pages)

[Air Conditioner Sanyo CHDZ07263 Service Manual](#)

(128 pages)

[Air Conditioner Sanyo AHX0752 Service Manual](#)

W-2way eco-i multi system (114 pages)

[Air Conditioner Sanyo W-3WAY ECO-i 85464369098000 Installation Instructions Manual](#)

W-3way eco-i system air conditioner (106 pages)

[Air Conditioner Sanyo 85464359982001 Installation Instructions Manual](#)

W-2way system air conditioner (96 pages)

[Air Conditioner Sanyo Mini ECO-i CHXR03652 Service Manual](#)

(93 pages)

[Air Conditioner Sanyo Mini ECO-i 85464359981002 Installation Instructions Manual](#)

Sanyo air conditioner installation instructions (90 pages)

[Air Conditioner Sanyo XM18AAB Installation Instructions Manual](#)

W-2way system air conditioner (50 pages)

[Air Conditioner Sanyo ECO R410A Installation Instructions Manual](#)

Eco-i system air conditioner (48 pages)

[Air Conditioner Sanyo THX2452 User Manual](#)

(4 pages)

[Air Conditioner Sanyo DHX4852 Manual](#)

Indoor unit (4 pages)

[Air Conditioner Sanyo THX1852 Manual](#)

Indoor unit (4 pages)

Related Content for Sanyo R410A

[85464359982001 Dimensions Of Snow Ducting](#)

Sanyo 85464359982001

[SPW-C256VH Dimensions Of Snow-Proof Duct](#)

Sanyo SPW-C256VH

[Big PACi 18 Series Dimensions Of Snow-Proof Duct](#)

Sanyo Big PACi 18 Series

[SAP-CMRV1426EH Outer Dimensions Of Outdoor Unit](#)

Sanyo SAP-CMRV1426EH

[SAP-KMRV74EH Outer Dimensions Of Outdoor Unit](#)

Sanyo SAP-KMRV74EH

[SPW-C0705DZH8 Dimensions Of Snow Ducting](#)

Sanyo SPW-C0705DZH8

[SPW-CR365GXH56 Dimensions Of Snow Ducting Reference Diagram](#)

[For Snow-Proof Vents \(Field Supply\) Stk-Bdr140U For Spw-Cr365/485/605Gx\(H\)56\(A/B\)](#)

Sanyo SPW-CR365GXH56

[C4272R Dimensions Of Snow Ducting](#)

Sanyo C4272R

This manual is also suitable for:

[Xhx1252Xhx1852Xhx2452Xhx3652Xmhx1252Xmhx1852](#) ... [Show all](#)