

Prepare The Tubing; Connect The Tubing - Sanyo R410A Installation Instructions Manual

W-3way eco-i system air conditioner

1

2

3

4

5

Table Of Contents

6

7

8

9

10

11

12

13

14

15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54

--

•

[Table of Contents](#)

•


Bookmarks



3-5. Prepare the Tubing

- Material: Use C1220 phosphorous deoxidized copper as described in JIS H3300, "Copper and Copper Alloy Seamless Pipes and Tubes."
(For tubes that are $\varnothing 1"$ ($\varnothing 25.4$ mm) or larger, use 1/2H material or H material. For all others use O material.)

- Tubing size
Use the tubing size indicated in the table below.

-  When cutting the tubing, use a tube cutter, and be sure to remove any burrs.
(The same applies to distribution tubing (optional).)

● When bending the tubes, bend each tube using a radius that is at least 4 times the outer diameter of the tube.
When bending, use sufficient care to avoid crushing or damaging the tube.

● For flaring, use a flare tool, and be sure that flaring is performed correctly.

CAUTION

Refrigerant tubing (Existing tubing can be used.)

Outer dia.

Thickness

ø1/4" (ø6.35)

t1/32" (t0.8)

ø3/8" (ø9.52)

 

t1/32" (t0.8)

ø1/2" (ø12.7)

t1/32" (t0.8)

ø5/8" (ø15.88)

t5/128" (t1.0)

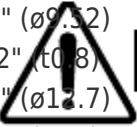

3-6. Connect the Tubing

● Use the supplied connector tubing. (See figure below.)

07263 type (8 horsepower)

4

3

2

1

09663 type (10 horsepower)

2

4

3

1

Refrigerant tube port

● Use caulking, putty, or a similar material to fill any gaps at the refrigerant tube port (prevent rainwater, dust or foreign substances from entering the unit.)

* Perform this work even if the tubing is routed out in a downward direction.

Use sufficient caution during preparation of the tubing. Seal the tube ends by means of caps or taping to prevent dust, moisture, or other foreign substances from entering the tubes.



Tubing size (mm)

Outer dia.

ø3/4" (ø19.05)

ø7/8" (ø22.22)

ø1-1/8" (ø28.58)

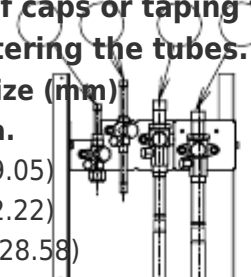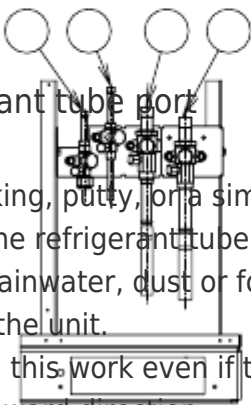

ManualsLib.com

○			→
○			
○			

○			→
○			→

Ø1-3/8" (Ø34.92)

Refrigerant

Connection method
tubing

1

Brazed connection

Suction tube

2

Discharge tube

Brazed connection

3

Liquid tube

Brazed connection

4

Flared connection

Balance tube

Refrigerant

Connection method
tubing

1

Brazed connection

Suction tube

2

Discharge tube

Brazed connection

3

Liquid tube

Brazed connection

Flared connection

4

Balance tube

) in order to

Thickness

over t5/128" (t1.0)

t5/128" (t1.0)

t5/128" (t1.0)

over t3/64" (t1.1)

Use supplied
connector tube?

Yes (Ø3/4"

Ø7/8")

No

No

No

Use supplied

connector tube?

Yes (Ø3/4"

Ø7/8")

 
Yes (Ø5/8"

Ø3/4")

No



No

Tubing routed out forward



Brazed connection			
Suction tube			
2			
Discharge tube			
Brazed connection			
3			
Liquid tube			
Brazed connection			
Flared connection			
4			

ManualsLib.com

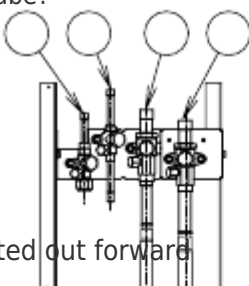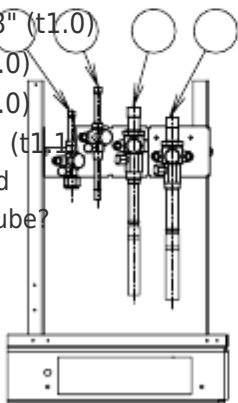

○			→
○			
○			
○			

○			→
○			→
○			

26

Tubing
cover

Tubing routed out downward

Base plate

[Table of Contents](#)

[Previous Page](#)

[Next Page](#)

1
...
23
24
25
26
27
28
29
30

Quick Links:

[Remote Controller Test Run Settings](#)

[Meaning of Alarm Messages](#)

Related Manuals for Sanyo R410A

[Air Conditioner Sanyo PW-UMR184EXH56 Installation And Operation Manual](#)

Eco-i system air conditioner (36 pages)

[Air Conditioner Sanyo ECO-i AHX0752 Technical Data Manual](#)

(265 pages)

[Air Conditioner Sanyo MINI ECO-i XHX1252 Service Manual & Test Run Service Manual](#)

(190 pages)

[Air Conditioner Sanyo ECO-i CHDZR07263 Series Service Manual](#)

(146 pages)

[Air Conditioner Sanyo CHDXR09663* Service Manual](#)

2-way eco-i multi system (142 pages)

[Air Conditioner Sanyo CHDZ07263 Service Manual](#)

(128 pages)

[Air Conditioner Sanyo AHX0752 Service Manual](#)

W-2way eco-i multi system (114 pages)

[Air Conditioner Sanyo W-3WAY ECO-i 85464369098000 Installation Instructions Manual](#)

W-3way eco-i system air conditioner (106 pages)

[Air Conditioner Sanyo 85464359982001 Installation Instructions Manual](#)

W-2way system air conditioner (96 pages)

[Air Conditioner Sanyo Mini ECO-i CHXR03652 Service Manual](#)

(93 pages)

[Air Conditioner Sanyo Mini ECO-i 85464359981002 Installation Instructions Manual](#)

Sanyo air conditioner installation instructions (90 pages)

[Air Conditioner Sanyo XM18AAB Installation Instructions Manual](#)

W-2way system air conditioner (50 pages)

[Air Conditioner Sanyo ECO R410A Installation Instructions Manual](#)

Eco-i system air conditioner (48 pages)

[Air Conditioner Sanyo THX2452 User Manual](#)

(4 pages)

[Air Conditioner Sanyo DHX4852 Manual](#)

Indoor unit (4 pages)

[Air Conditioner Sanyo THX1852 Manual](#)

Indoor unit (4 pages)

Related Content for Sanyo R410A

[SAP-CMR2428E For Tubing Installation Procedures](#)

Sanyo SAP-CMR2428E

[SAP-CMRV1426EH Tubing Installation Procedures](#)

Sanyo SAP-CMRV1426EH

[SPW-CR1503GDYH8 Method Of Gas Leak Inspection After Completing The Tubing](#)

Sanyo SPW-CR1503GDYH8

[SAP-KMV91G-S Tubing Check Function](#)

Sanyo SAP-KMV91G-S

[SAP-DMRV93GJ Embedding The Tubing And Wiring](#)

Sanyo SAP-DMRV93GJ

[SAP-CMRV3143GJ Tubing Installation Procedures](#)

Sanyo SAP-CMRV3143GJ

[SAP-CMRV1923GJ Tubing Installation Procedures](#)

Sanyo SAP-CMRV1923GJ

[SAP-KRV91EH Refrigerant Tubing](#)

Sanyo SAP-KRV91EH

This manual is also suitable for:

[Xhx1252Xhx1852Xhx2452Xhx3652Xmhx1252Xmhx1852](#) ... [Show all](#)