

Test Run.; Length - Sanyo R410A Installation Instructions Manual

W-3way eco-i system air conditioner

1

2

3

4

5

Table Of Contents

6

7

8

9

10

11

12

13

14

15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54


--

•

[Table of Contents](#)

•

Bookmarks

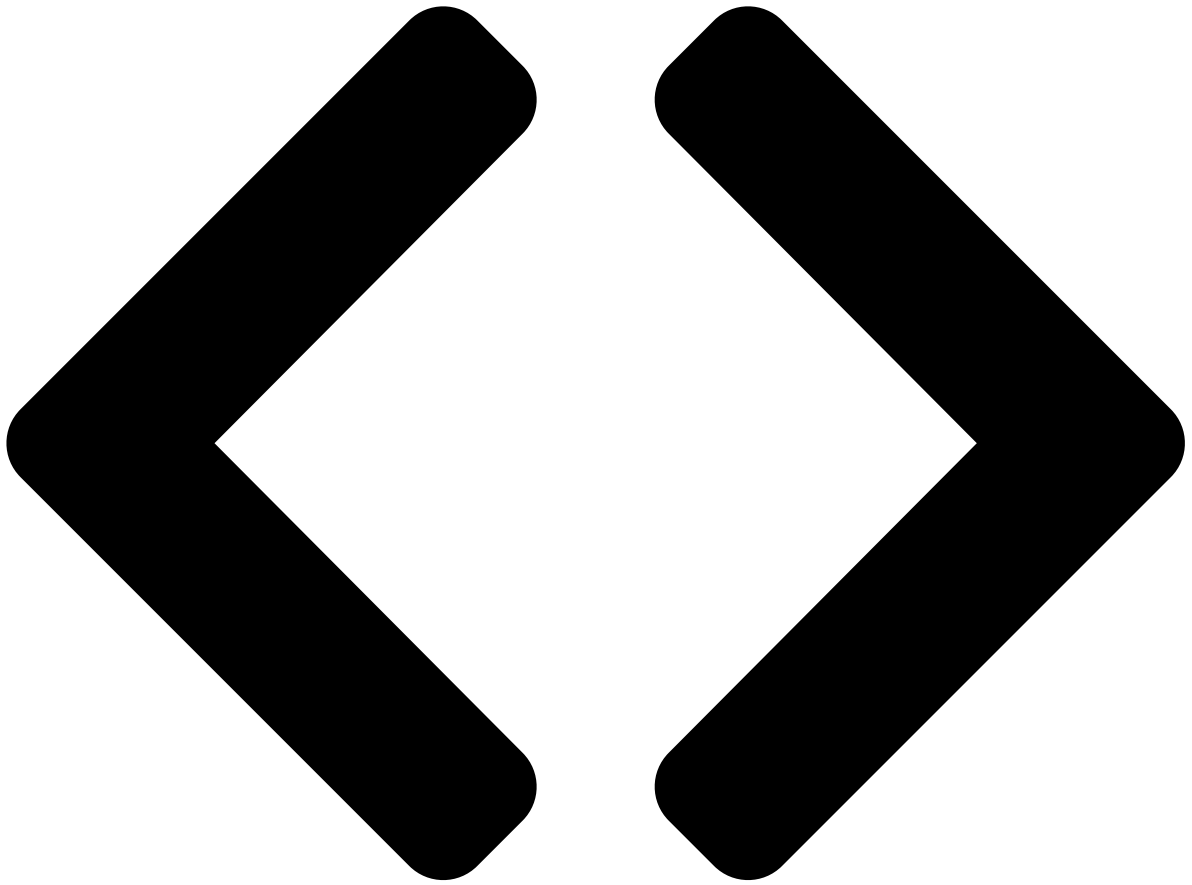



Enlarged version

The **required time** in the above table is calculated based on the assumption that the ideal (or target) vacuum condition is less than -14.7 psig (-755 mm Hg, 5 Torr).
(2) When the desired vacuum is reached, close the "Lo" knob of the manifold valve and turn off the vacuum pump. Please confirm that the gauge pressure is under -14.7 psig (-755 mm Hg, 5 Torr) after 4 to 5 minutes of vacuum pump operation.

Charging additional refrigerant

CAUTION

 - Charging additional refrigerant (calculated from the liquid tube length as shown in Section 1-8 "Additional

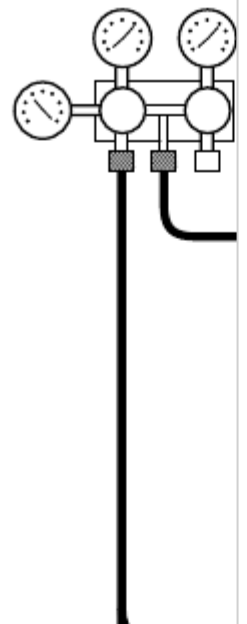

Refrigerant Charge") using the liquid tube service valve. (Fig. 6-5)

- Use a balance or scale to measure the refrigerant accurately.
- If the additional refrigerant charge amount cannot be charged at once, charge the remaining refrigerant in liquid form by using the suction tube service valve with the system in Cooling mode at the time of test run. (Fig. 6-6)
- Close the valve on the cylinder containing R410A.

Finishing the job

- (1) With a flathead screwdriver, turn the liquid tube service valve counter-clockwise to fully open the valve.
- (2) Turn the all service valve counter-clockwise to fully open the valve.
- (3) Close all stop valves and loosen the "LO" knob of the manifold valve.
- (4) Loosen the charge hose connected to all service port, then remove the hose.
- (5) Replace all valve caps at all service ports and fasten them securely.

This completes air purging with a vacuum pump. The air conditioner is now ready for a test run.

Use a cylinder designed for use with R410A.

Manifold valve

Pressure

Lo

gauge

Suction

tube

Discharge

tube

Liquid

tube

Balance

tube

Suction

tube

Discharge

tube

Liquid

tube

Balance


tube

38

Hi

Valve

Liquid

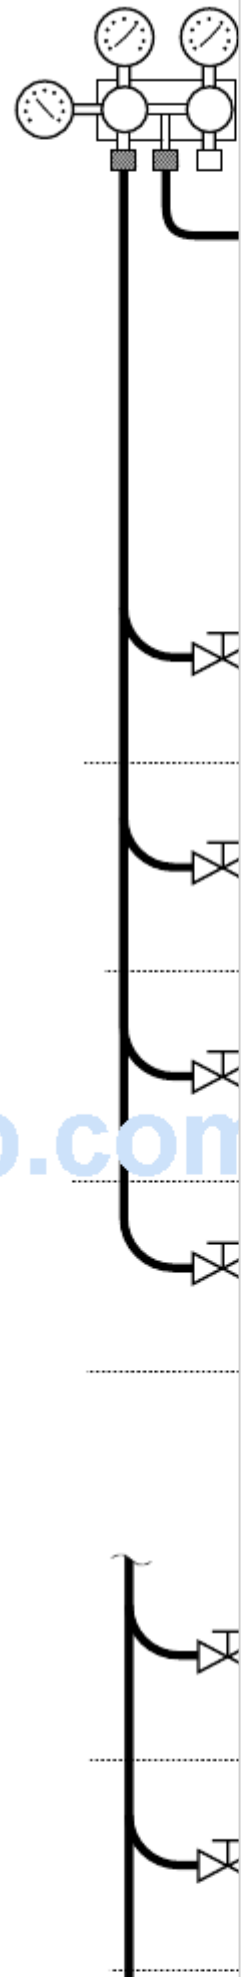

ManualsLib.com


R410A

- Close
- Close
- Close
- Outdoor unit
- Close
- Open
- Close
- Close
- Close

Fig. 6-5

- Open
- Open
- Close
- Outdoor unit
- Open
- Close
- Open
- Close
- Open

Fig. 6-6

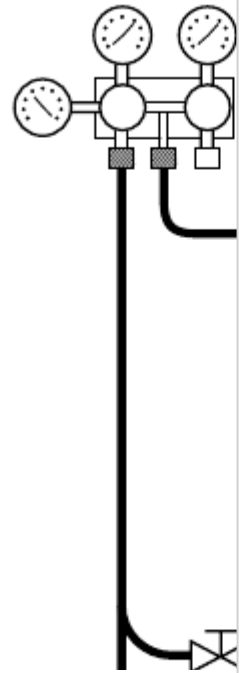

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
35
36
37
38
39
40
41
42

Quick Links:

[Remote Controller Test Run Settings](#)

[Meaning of Alarm Messages](#)

Related Manuals for Sanyo R410A

[Air Conditioner Sanyo PW-UMR184EXH56 Installation And Operation Manual](#)

Eco-i system air conditioner (36 pages)

[Air Conditioner Sanyo ECO-i AHX0752 Technical Data Manual](#)

(265 pages)

[Air Conditioner Sanyo MINI ECO-i XHX1252 Service Manual & Test Run Service Manual](#)

(190 pages)

[Air Conditioner Sanyo ECO-i CHDZR07263 Series Service Manual](#)

(146 pages)

[Air Conditioner Sanyo CHDXR09663* Service Manual](#)

2-way eco-i multi system (142 pages)

[Air Conditioner Sanyo CHDZ07263 Service Manual](#)

(128 pages)

[Air Conditioner Sanyo AHX0752 Service Manual](#)

W-2way eco-i multi system (114 pages)

[Air Conditioner Sanyo W-3WAY ECO-i 85464369098000 Installation Instructions Manual](#)

W-3way eco-i system air conditioner (106 pages)

[Air Conditioner Sanyo 85464359982001 Installation Instructions Manual](#)

W-2way system air conditioner (96 pages)

[Air Conditioner Sanyo Mini ECO-i CHXR03652 Service Manual](#)

(93 pages)

[Air Conditioner Sanyo Mini ECO-i 85464359981002 Installation Instructions Manual](#)

Sanyo air conditioner installation instructions (90 pages)

[Air Conditioner Sanyo XM18AAB Installation Instructions Manual](#)

W-2way system air conditioner (50 pages)

[Air Conditioner Sanyo ECO R410A Installation Instructions Manual](#)

Eco-i system air conditioner (48 pages)

[Air Conditioner Sanyo THX2452 User Manual](#)

(4 pages)

[Air Conditioner Sanyo DHX4852 Manual](#)

Indoor unit (4 pages)

[Air Conditioner Sanyo THX1852 Manual](#)

Indoor unit (4 pages)

Related Content for Sanyo R410A

[SPW-D253GH56 Items To Check Prior To Test Run](#)

Sanyo SPW-D253GH56

[SAP-CMRV1426EH I Air Purging With A Vacuum Pump \(For Test Run\)](#)

Sanyo SAP-CMRV1426EH

[SPW-XR253GH56 Items To Check Prior To Test Run](#)

Sanyo SPW-XR253GH56

[SAP-K77GHAX How To Test Run The Air Conditioner](#)

Sanyo SAP-K77GHAX

[SPW-CR363GVH8 \(B\) Use The Test Run Procedure](#)

Sanyo SPW-CR363GVH8

[W MULTI SGP-EW120M2G2W Test Run Procedure](#)

Sanyo W MULTI SGP-EW120M2G2W

[SPW-CR1503GDYH8 \(B\) Use The Test Run Procedure](#)

Sanyo SPW-CR1503GDYH8
[SAP-DMRV93GJ Test Run](#)
Sanyo SAP-DMRV93GJ

This manual is also suitable for:

[Xhx1252Xhx1852Xhx2452Xhx3652Xmhx1252Xmhx1852](#) ... [Show all](#)