



# Turning The Tv On; Switching On The Tv; Switching Off The Tv - Toshiba 42WL55A Owner's Manual

Lcd color tv



1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44

---

•

[Table of Contents](#)

•

Troubleshooting

•

## Bookmarks







## Getting started

# Turning the TV on

- Plug the power cord to a wall outlet.

### TV top view

CALL

1

2

3

4

5



| 1

⏻/⏻

6  
7  
8  
9  
0

MENU  
EXIT  
P  
DVD  
MENU  
OK  
P  
TV  
VTR  
DVD

**Note:**

If you watch black and white programs when the color system mode is set to Auto, color noise may appear on the screen. In this case, select the appropriate Color system (For the system of each country or region, refer to pages 17 and 42).

Press the Power button on the TV or press the on the remote control.

the TV


Press the Power button on the TV or press the on the remote control to switch to the standby mode.

**Notes:**


- When the TV will not be used for a long period of time, such as during vacation or travel, remove the power plug from the wall outlet.
- The TV will automatically turn off after approximately 15 minutes if it is tuned to a vacant channel or a station that completes its broadcast for the day. This function does not work in external input or PC input mode.
- If power is cut off while you are viewing the TV, the Last Mode Memory function turns on the TV automatically when power is applied again. If power is going to be off for a long time and you are going to be away from your TV, unplug the power cord to prevent the TV from turning on in your absence.

button  
Mono  
button

**13**

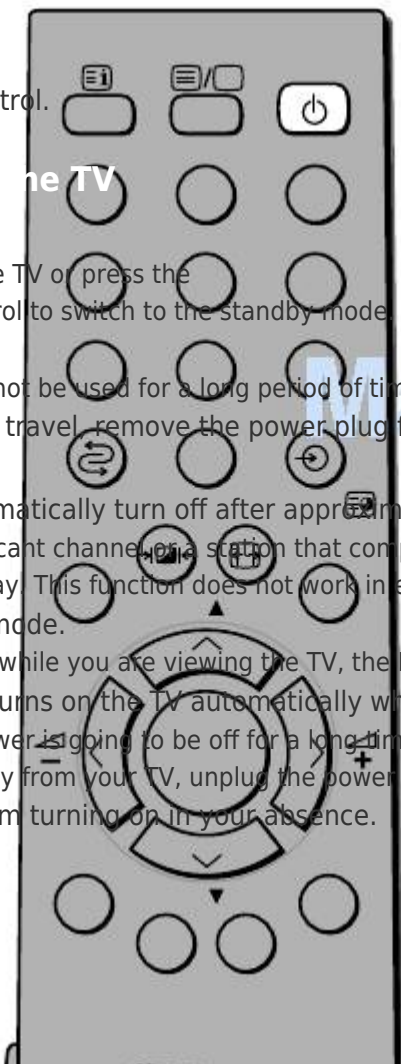

1

 

1



[Previous Page](#)  
[Next Page](#)

1  
...  
10  
11  
12  
13  
14  
15  
16  
17

Quick Links:

[Installation](#)

[Connecting an Antenna](#)

[Tv Back](#)

## Related Manuals for Toshiba 42WL55A

[LCD TV Toshiba 42WL55A Service Manual](#)

Lcd color television (37 pages)

[TV Toshiba 32WL55A Service Manual](#)

Lcd color television (91 pages)

[TV Toshiba 32WL55A Schematic Diagram](#)

(53 pages)

[Monitor Toshiba 27WL55A Schematic Diagrams](#)

(52 pages)

[LCD TV Toshiba 27WL55A Schematic Diagram](#)

(52 pages)

[LCD TV Toshiba 32WLT66A Owner's Manual](#)

Integrated digital lcd tv (44 pages)

[LCD TV Toshiba 42WL68A Owner's Manual](#)

Toshiba lcd color tv owner's manual (32 pages)

[LCD TV Toshiba 26WL66A Owner's Manual](#)

Toshiba lcd colortv owner's manual (32 pages)

[LCD TV Toshiba 42WL58A Service Manual](#)

(44 pages)

[LCD TV Toshiba Regza Owner's Manual](#)

Regza wlg66 series (116 pages)

[LCD TV Toshiba 42WLG66 Service Manual](#)

(26 pages)

[LCD TV Toshiba WLT66 Series Owner's Manual](#)

Toshiba crt television user manual (40 pages)

[LCD TV Toshiba 42WLT66 Service Manual](#)

(191 pages)

[LCD TV Toshiba 42WP48A Owner's Manual](#)

(52 pages)

[LCD TV Toshiba WLT68 Owner's Manual](#)

Wlt68 series (40 pages)

[LCD TV Toshiba WL56 Series Service Manual](#)

(111 pages)

## Related Content for Toshiba 42WL55A

[24PS10E Turning The Tv On](#)

Toshiba 24PS10E

[24L365 Series Turning The Tv For The Rst Time](#)

Toshiba 24L365 Series

[32P2400 Series Turning The Tv On](#)

Toshiba 32P2400 Series

[26WL36P Turning The Tv On](#)

Toshiba 26WL36P

[42WP48A Turning The Tv On](#)

Toshiba 42WP48A

[55RZ1 Series Turning The Tv On](#)

Toshiba 55RZ1 Series

[32L5400 Series Turning The Tv On](#)

Toshiba 32L5400 Series

[32P1400 Series Turning The Tv On](#)

Toshiba 32P1400 Series



This manual is also suitable for:

[42wI55t42wI55e37wI55a37wI55t37wI55e32wI55a ...](#) [Show all](#)