

Toshiba RAS-13SKV-E Service Manual

page 31

Indoor/outdoor unit, split type air conditioner

 
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118

119

120



•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



9-2. Operation Description

[1. Basic operation](#)

..... 32

[1. Operation control](#)

..... 32

[2. Cooling/Heating operation](#)

..... 33

[3. AUTO operation](#)

..... 33

[4. DRY operation](#)

..... 33

2. Indoor fan motor control	34
3. Outdoor fan motor control	36
4. Capacity control	37
5. Current release control	37
6. Release protective control by temperature of indoor heat exchanger	38
7. Defrost control (Only in heating operation)	39
8. Louver control	40
1) Louver position	40
2) Air direction adjustment	40
3) Swing	40
9. ECO operation	41
10. Temporary operation	42
11. Air purifying control [Detection of abnormality]	42
12. Discharge temperature control	43
13. Pulse Modulating valve (P .M.V.) control	44
14. Self-Cleaning function	45
15. Self-Cleaning function release	46
16. Remote-A or B selection	47
17. QUIET mode	

.....	48
18. COMFORT SLEEP mode	48
.....	48
19. Short Timer	48
.....	48
20. One-Touch Comfort	49
.....	49
21. Hi-POWER Mode	49
.....	49
FIL TER Indicator	
.	
22	
9-3. Auto Restart Function	50
.....	50
9-3-1. How to Set the A uto Restart Function	50
.....	50
9-3-2. How to Cancel the Au to Restar t Function	51
.....	51
9-3-3. Power Failure During Timer Operation	51
.....	51
9-4. Remote Controller and Its Fuctions	52
.....	52
9-4-1. Parts Name of Remote Contr oller	52
.....	52
9-4-2. Operation of remote control	52
.....	52
9-4-3. Name and Functions of Indications on Remote Contr oller	55
.....	55

[Previous Page](#)
[Next Page](#)

1
...
28
29
30
31
32
33
34
35

Quick Links:

[Service Manual](#)

[Specifications](#)

[How to Diagnose the Trouble](#)

Chapters

[Service Manual 2](#)

[Auto Restart Function/Remote Controller and Its Functions 31](#)

Related Manuals for Toshiba RAS-13SKV-E

[Air Conditioner Toshiba RAS-13SKV-E Service Manual](#)

Split type indoor/outdoor unit (121 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type air conditioner (119 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type air conditioner (91 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(19 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(148 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(120 pages)

[Air Conditioner Toshiba RAS-16SKVP-ND Owner's Manual](#)

(230 pages)

[Air Conditioner Toshiba RAS-10 SKV Series Owner's Manual](#)

(8 pages)

[Air Conditioner Toshiba RAS-10 SKV Series Owner's Manual](#)

Air conditioner (split type) (4 pages)

[Air Conditioner Toshiba RAS-13SKHP-E Service Manual](#)

Split wall type air conditioner (70 pages)

[Air Conditioner Toshiba RAS-10SKH-ES Service Manual](#)

Split wall type (68 pages)

[Air Conditioner Toshiba RAS-B10 Series Installation Manual](#)

(68 pages)

[Air Conditioner Toshiba RAS-10S3KV-E Owner's Manual](#)

(7 pages)

[Air Conditioner Toshiba RAS-13S3KV-E Service Manual](#)

(108 pages)

[Air Conditioner Toshiba RAS-24S3KHS-EE Owner's Manual](#)

(8 pages)

[Air Conditioner Toshiba RAS-10SKP Series Owner's Manual](#)

(8 pages)

Related Products for Toshiba RAS-13SKV-E

[Toshiba RAS-13SKVP-ND](#)

[Toshiba RAS-13SKVP2 Series](#)

[Toshiba RAS-13SKHP-E](#)

[Toshiba RAS-13SKHP-ES](#)

[Toshiba RAS-13SK-E](#)

[Toshiba RAS-13SKX](#)

[Toshiba RAS-13SKV2-E](#)

[Toshiba RAS-13SKVP2-E](#)

[Toshiba RAS-13SKVR-E2](#)

[Toshiba RAS-13SKH-E](#)

[Toshiba RAS-13SKP Series](#)

[Toshiba RAS-13SKP-E](#)

[Toshiba RAS-13SAVP-E](#)

[Toshiba RAS-13SAVP-ND](#)

[Toshiba RAS-13SAVSeries](#)

[Toshiba RAS-13 SAV Series](#)

This manual is also suitable for:

[Ras-13sav-eRas-16skv-eRas-10savr-eRas-13skvr-eRas-13savr-eRas-16sav-e](#) ... [Show all](#)