



# Outdoor Fan Motor Control - Toshiba RAS-13SKV-E Service Manual

Indoor/outdoor unit, split type air conditioner



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67  
68

69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117  
118

119

120



•

[Table of Contents](#)

- 

Troubleshooting



•

## Bookmarks





Item

3. Outdoor fan

The blowing air volume at the outdoor unit side is controlled.

motor control

Receiving the operation command from the controller of indoor unit, the controller of outdoor unit controls fan speed.

\* For the fan motor, a DC motor with non-stage variable speed system is used. However, it is limited to 8 stages for reasons of controlling.

Air conditioner ON

(Remote controller)

Indoor unit controller

1) Outdoor unit

operation command

(Outdoor fan control)













650  
700  
700  
800  
800  
800  
900


[Table of Contents](#)

1  
...  
33  
34  
35  
36  
37  
38  
39  
40

Quick Links:

[Service Manual](#)

[Specifications](#)

[How to Diagnose the Trouble](#)

## Chapters

[Service Manual 2](#)

[Auto Restart Function/Remote Controller and Its Functions 31](#)

## Related Manuals for Toshiba RAS-13SKV-E

[Air Conditioner Toshiba RAS-13SKV-E Service Manual](#)

Split type indoor/outdoor unit (121 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type air conditioner (119 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type air conditioner (91 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(19 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(148 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(120 pages)

[Air Conditioner Toshiba RAS-16SKVP-ND Owner's Manual](#)

(230 pages)

[Air Conditioner Toshiba RAS-10 SKV Series Owner's Manual](#)

(8 pages)

[Air Conditioner Toshiba RAS-10 SKV Series Owner's Manual](#)

Air conditioner (split type) (4 pages)

[Air Conditioner Toshiba RAS-13SKHP-E Service Manual](#)

Split wall type air conditioner (70 pages)

[Air Conditioner Toshiba RAS-10SKH-ES Service Manual](#)

Split wall type (68 pages)

[Air Conditioner Toshiba RAS-B10 Series Installation Manual](#)

(68 pages)

[Air Conditioner Toshiba RAS-10S3KV-E Owner's Manual](#)

(7 pages)

[Air Conditioner Toshiba RAS-13S3KV-E Service Manual](#)

(108 pages)

[Air Conditioner Toshiba RAS-24S3KHS-EE Owner's Manual](#)

(8 pages)

[Air Conditioner Toshiba RAS-10SKP Series Owner's Manual](#)

(8 pages)

## Related Content for Toshiba RAS-13SKV-E

[RAS-25S4KVDG-ND Outdoor Fan Motor Control](#)

Toshiba RAS-25S4KVDG-ND

[RAS-B22PKVSG-TR Outdoor Fan Motor Control](#)

Toshiba RAS-B22PKVSG-TR

[RAS-25S4KVPG-ND Outdoor Fan Motor Control](#)

Toshiba RAS-25S4KVPG-ND

[RAS-18S3KV-E Outdoor Fan Motor Control](#)

Toshiba RAS-18S3KV-E

[RAS-5M34U2AVG-E Outdoor Fan Motor Control](#)

Toshiba RAS-5M34U2AVG-E

[RAS-25G3KVSG-ND Outdoor Fan Motor Control](#)

Toshiba RAS-25G3KVSG-ND

[RAS-25E2KVG-ND Outdoor Fan Motor Control](#)

Toshiba RAS-25E2KVG-ND

[RAS-13S3KV-E Outdoor Fan Motor Control](#)

Toshiba RAS-13S3KV-E

This manual is also suitable for:

[Ras-13sav-eRas-16skv-eRas-10savr-eRas-13skvr-eRas-13savr-eRas-16sav-e](#) ... [Show all](#)