



# Self-Cleaning Function - Toshiba RAS-13SKV-E Service Manual

Indoor/outdoor unit, split type air conditioner



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67  
68

69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117  
118

119

120



•

[Table of Contents](#)

- 

Troubleshooting



•

## Bookmarks





Item

#### 14. Self-Cleaning

function

Unit now performing cooling or dry operation

Only timer indicator lights, and Self-Cleaning operation starts

- During Self-Cleaning operations: The louver opens slightly. The indoor fan operates continuously at a speed of 500 rpm.

Self-Cleaning operation times

Cooling: Auto (cooling) Dry

 
 
Heating: Auto (heating)

Auto (fan only)

Shutdown

- To stop an ongoing Self-Cleaning operation at any time

Press the start/stop button on the remote controller twice during the Self-Cleaning operation. (After pressing the button for the first time, press it for the



second time without delay (within 10 minutes).)

Operation flow and applicable data, etc.

Press "STOP" button

Time set now elapses

Operation stops

1. Purpose

2. Operation

Operation time

Self-Cleaning operation time

No Self-Cleaning operation

Up to 10 minutes

performed (0 minutes)

10 minutes

20 mins.

or longer

No Self-Cleaning operation performed

- 45 -

Description

The Self-Cleaning operation is to minimize the growth of mold, bacteria etc. by running the fan and drying so as to keep the inside of the air conditioner clean.

Self-Cleaning operation

When the cooling or dry operation shuts down, the unit automatically starts the Self-Cleaning operation which is then performed for the specified period based on duration of the operation which was performed prior to the shutdown, after which the Self-Cleaning operation stops.

(The Self-Cleaning operation is not performed after a heating operation.)

1) When the stop signal from the remote controller or timer-off function is received, only the timer indicator light.

2) The period of the Self-Cleaning operation is determined by the duration of the operation performed prior to the reception of the stop code.

3) After the Self-Cleaning operation has been performed for the specified period, the unit stops operating.

ManualsLib.com

[Previous Page](#)  
[Next Page](#)

1  
...  
42  
43  
44  
45  
46  
47  
48  
49

Quick Links:

[Service Manual](#)

[Specifications](#)

[How to Diagnose the Trouble](#)

## Chapters

[Service Manual 2](#)

[Auto Restart Function/Remote Controller and Its Functions 31](#)

## Related Manuals for Toshiba RAS-13SKV-E

[Air Conditioner Toshiba RAS-13SKV-E Service Manual](#)

Split type indoor/outdoor unit (121 pages)



[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type air conditioner (119 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type air conditioner (91 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(19 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(148 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(120 pages)

[Air Conditioner Toshiba RAS-16SKVP-ND Owner's Manual](#)

(230 pages)

[Air Conditioner Toshiba RAS-10 SKV Series Owner's Manual](#)

(8 pages)

[Air Conditioner Toshiba RAS-10 SKV Series Owner's Manual](#)

Air conditioner (split type) (4 pages)

[Air Conditioner Toshiba RAS-13SKHP-E Service Manual](#)

Split wall type air conditioner (70 pages)

[Air Conditioner Toshiba RAS-10SKH-ES Service Manual](#)

Split wall type (68 pages)

[Air Conditioner Toshiba RAS-B10 Series Installation Manual](#)

(68 pages)

[Air Conditioner Toshiba RAS-10S3KV-E Owner's Manual](#)

(7 pages)

[Air Conditioner Toshiba RAS-13S3KV-E Service Manual](#)

(108 pages)

[Air Conditioner Toshiba RAS-24S3KHS-EE Owner's Manual](#)

(8 pages)

[Air Conditioner Toshiba RAS-10SKP Series Owner's Manual](#)

(8 pages)

## Related Content for Toshiba RAS-13SKV-E

[RAS-10S3AV-E Self-Cleaning Function](#)

Toshiba RAS-10S3AV-E

[RAS-M05G3KVSG-E Self-Cleaning Function](#)

Toshiba RAS-M05G3KVSG-E

[RAS-18S3KV-E Self-Cleaning Function](#)

Toshiba RAS-18S3KV-E

[RAS-M07G3DV-E Self-Cleaning Function](#)

Toshiba RAS-M07G3DV-E

[RAS-M07N4KVRG-E Self-Cleaning Function](#)

Toshiba RAS-M07N4KVRG-E

[RAS-25G3KVSG-ND Self-Cleaning Function](#)

Toshiba RAS-25G3KVSG-ND

[RAS-25E2KVG-ND Self-Cleaning Function](#)

Toshiba RAS-25E2KVG-ND

[RAS-13S3KV-E Self-Cleaning Function](#)

Toshiba RAS-13S3KV-E

This manual is also suitable for:

[Ras-13sav-eRas-16skv-eRas-10savr-eRas-13skvr-eRas-13savr-eRas-16sav-e](#) ... [Show all](#)