

Self-Cleaning Function Release - Toshiba RAS-13SKV-E Service Manual

Indoor/outdoor unit, split type air conditioner

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118

119

120



•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



Item

- Self-Cleaning diagram

14. Self-Cleaning

function			
Operation display			
FCU fan			
FCU louver			
Timer display			
depend on presetting of timer function.			
Compressor			
depend on presetting per room temperature.			
CDU fan			
depend on presetting per room temperature.			
operation more than 10 mins.			
15. Self-Cleaning			
How to cancel Self-Cleaning function			
function release			

To cancel the Self-Cleaning function, proceed as follows:

- Press [RESET] button one time or use remote control to turn on air conditioner. The OPERATION display will show in orange color (When AUTO-RESTART is ON) or green color (When AUTO-RESTART is OFF).

- Hold down the [RESET] button for more than 20 seconds. (The air conditioner will stop suddenly when the [RESET] is pressed but keep holding it continue. The will beep 3 times in the first 3 seconds but it is not related to Self-Cleaning function)

- After holding about 20 seconds, the air conditioner will beep 5 times without any blinking of display.

- The Self-Cleaning Operation had been cancelled.

How to set Self-Cleaning function

To set the Self-Cleaning function, proceed as follows.

- Press [RESET] button one time or use remote control to turn on air conditioner. The OPERATION display will show in orange color (When AUTO-RESTART is ON) or green color (When AUTO-RESTART is OFF).

- Hold down the [RESET] button for more than 20 seconds. (The air conditioner will stop suddenly when the [RESET] is pressed but keep holding it continue. Then will beep 3 times in the first 3 seconds but it is not related to Self-Cleaning function)

- After holding about 20 seconds, the air conditioner will beep 5 times and OPERATION display blinks 5 times.

- The Self-Cleaning function had been set.

Operation flow and applicable data, etc.

ON

ON

rpm is depend on presetting.

OPEN

ON or OFF

ON or OFF

ON or OFF

Cool mode or dry mode

Turn off by remote controller or timer-off function.


OFF

ON

(500RPM)

OPEN (12.7°)

ON

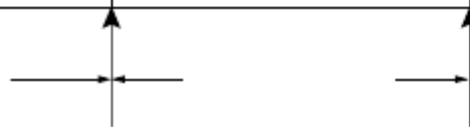

OFF

OFF

Self-Cleaning mode

operate 20 mins.

Automatically turn-off.

- 46 -

Description

OFF

OFF

CLOSE

ON or OFF

depend on presetting of timer function.

OFF

OFF

Operation time

HI POWER FILTER

PAP

TIMER OPERATION

RESET

Table of Contents

[Previous Page](#)
[Next Page](#)

1
...
43
44
45
46
47
48
49
50

Quick Links:

[Service Manual](#)

[Specifications](#)

[How to Diagnose the Trouble](#)

Chapters

[Service Manual 2](#)

[Auto Restart Function/Remote Controller and Its Functions 31](#)

Related Manuals for Toshiba RAS-13SKV-E

[Air Conditioner Toshiba RAS-13SKV-E Service Manual](#)

Split type indoor/outdoor unit (121 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type air conditioner (119 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type air conditioner (91 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(19 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(148 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(120 pages)

[Air Conditioner Toshiba RAS-16SKVP-ND Owner's Manual](#)

(230 pages)

[Air Conditioner Toshiba RAS-10 SKV Series Owner's Manual](#)

(8 pages)

[Air Conditioner Toshiba RAS-10 SKV Series Owner's Manual](#)

Air conditioner (split type) (4 pages)

[Air Conditioner Toshiba RAS-13SKHP-E Service Manual](#)

Split wall type air conditioner (70 pages)

[Air Conditioner Toshiba RAS-10SKH-ES Service Manual](#)

Split wall type (68 pages)

[Air Conditioner Toshiba RAS-B10 Series Installation Manual](#)

(68 pages)

[Air Conditioner Toshiba RAS-10S3KV-E Owner's Manual](#)

(7 pages)

[Air Conditioner Toshiba RAS-13S3KV-E Service Manual](#)

(108 pages)

[Air Conditioner Toshiba RAS-24S3KHS-EE Owner's Manual](#)

(8 pages)

[Air Conditioner Toshiba RAS-10SKP Series Owner's Manual](#)

(8 pages)

Related Content for Toshiba RAS-13SKV-E

[RAS-13SKV-E Self-Cleaning Function Release](#)

Toshiba RAS-13SKV-E

[RAS-M10SKV-E Self-Cleaning Function Release](#)

Toshiba RAS-M10SKV-E

[RAS-10SAV-A Self-Cleaning Function Release](#)

Toshiba RAS-10SAV-A

[RAS-22BKV-A1 Self-Cleaning Function](#)

Toshiba RAS-22BKV-A1

[RAS-B13S4KVDG-E Self-Cleaning Function](#)

Toshiba RAS-B13S4KVDG-E

[RAS-24J2KVG-UA Self-Cleaning Function](#)

Toshiba RAS-24J2KVG-UA

[RAS-B07G3KVSG-E Self-Cleaning Function](#)

Toshiba RAS-B07G3KVSG-E

[RAS-25S4KVDG-ND Self-Cleaning Function](#)

Toshiba RAS-25S4KVDG-ND

This manual is also suitable for:

[Ras-13sav-eRas-16skv-eRas-10savr-eRas-13skvr-eRas-13savr-eRas-16sav-e](#) ... [Show all](#)