



# How To Cancel The Auto Restart Function; Power Failure During Timer Operation - Toshiba RAS-13SKV-E Service Manual

Indoor/outdoor unit, split type air conditioner



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67  
68

69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117  
118

119

120



•

[Table of Contents](#)

- 

Troubleshooting



•

## Bookmarks





### 9-3-2. How to Cancel the Auto Restart Function

To cancel auto restart function, proceed as follows :

Repeat the setting procedure : the unit receives the signal and beeps three times.

The unit will be required to be turned on with the remote controller after the main power supply is turned off.

- When the system is on stand-by (not operating)

Operation

Press [RESET] button for more than three seconds. (Less than 10 seconds)

HI POWER FILTER  
PAP  
TIMER OPERATION

- When the system is operating

Operation

Press [RESET] button for more than

three seconds. (Less than 10 seconds)

HI POWER FILTER  
PAP  
TIMER OPERATION

### 9-3-3. Power Failure During Timer Operation

When the unit is turned off because of power failure during timer operation, the timer operation is cancelled. In that case, set the timer operation again.

#### NOTE :

The Everyday Timer is reset while a command signal can be received from the remote controller even if it stopped due to a power failure.

The unit is on standby.

The unit starts to operate.

The unit beeps three times and continues to operate.

If the unit is not required to operate at this time, press [RESET] button once more or use the remote controller to turn it off.

The unit is in operation.

The unit stops operating.

The unit beeps three times.

If the unit is required to operate at this time, press [RESET] button once more or use the remote controller to turn it on.

RESET

Motions



After approx. three seconds,

Motions




After approx. three seconds,

- 51 -

The green indicator is on.

The green indicator is on.

The green indicator is turned off.

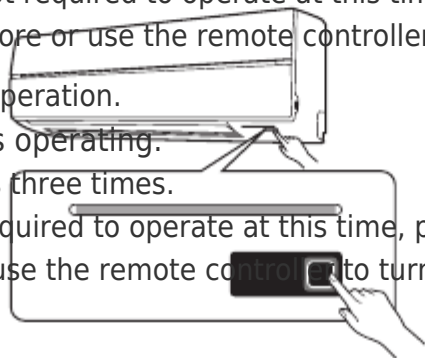

ManualsLib.com

[Previous Page](#)  
[Next Page](#)

1  
...  
48  
49  
50  
**51**  
52  
53  
54  
55

Quick Links:

[Service Manual](#)

[Specifications](#)

[How to Diagnose the Trouble](#)

## Chapters

[Service Manual 2](#)

[Auto Restart Function/Remote Controller and Its Functions 31](#)

## Related Manuals for Toshiba RAS-13SKV-E

[Air Conditioner Toshiba RAS-13SKV-E Service Manual](#)

Split type indoor/outdoor unit (121 pages)



[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type air conditioner (119 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type air conditioner (91 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(19 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(148 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(120 pages)

[Air Conditioner Toshiba RAS-16SKVP-ND Owner's Manual](#)

(230 pages)

[Air Conditioner Toshiba RAS-10 SKV Series Owner's Manual](#)

(8 pages)

[Air Conditioner Toshiba RAS-10 SKV Series Owner's Manual](#)

Air conditioner (split type) (4 pages)

[Air Conditioner Toshiba RAS-13SKHP-E Service Manual](#)

Split wall type air conditioner (70 pages)

[Air Conditioner Toshiba RAS-10SKH-ES Service Manual](#)

Split wall type (68 pages)

[Air Conditioner Toshiba RAS-B10 Series Installation Manual](#)

(68 pages)

[Air Conditioner Toshiba RAS-10S3KV-E Owner's Manual](#)

(7 pages)

[Air Conditioner Toshiba RAS-13S3KV-E Service Manual](#)

(108 pages)

[Air Conditioner Toshiba RAS-24S3KHS-EE Owner's Manual](#)

(8 pages)

[Air Conditioner Toshiba RAS-10SKP Series Owner's Manual](#)

(8 pages)

## Related Content for Toshiba RAS-13SKV-E

[RAS-10S3AV-E How To Cancel The Auto Restart Function](#)

Toshiba RAS-10S3AV-E

[RAS-M05G3KVSG-E How To Cancel The Auto Restart Function](#)

Toshiba RAS-M05G3KVSG-E

[RAS-18S3KV-E How To Cancel The Auto Restart Function](#)

Toshiba RAS-18S3KV-E

[RAS-M07G3DV-E How To Cancel The Auto Restart Function](#)

Toshiba RAS-M07G3DV-E

[RAS-M07N4KVRG-E How To Cancel The Auto Restart Function](#)

Toshiba RAS-M07N4KVRG-E

[RAS-25G3KVSG-ND How To Cancel The Auto Restart Function](#)

Toshiba RAS-25G3KVSG-ND

[RAS-25E2KVG-ND How To Cancel The Auto Restart Function](#)

Toshiba RAS-25E2KVG-ND

[RAS-13S3KV-E How To Cancel The Auto Restart Function](#)

Toshiba RAS-13S3KV-E

This manual is also suitable for:

[Ras-13sav-eRas-16skv-eRas-10savr-eRas-13skvr-eRas-13savr-eRas-16sav-e](#) ... [Show all](#)