

How To Check Simply The Main Parts - Toshiba RAS-13SKV-E Service Manual

Indoor/outdoor unit, split type air conditioner

 
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118

119

120



•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



Diagnosis/Process flowchart

A

Replace control

board assembly

Check

NG

compressor

winding

resistance.

OK

Replace

control board.

11-9. How to Check Simply the Main Parts

11-9-1. How to Check the P.C. Board (Indoor Unit)

Diagnosis/Process flowchart	Item	Contents
<pre> graph TD A((A)) --> C[/Check compressor winding resistance/] C -- OK --> D[Replace control board assembly.] C -- NG --> B((B)) B --> E[Replace control board assembly.] </pre>	<p>Check</p>	<p>Check winding resistance between phases of compressor, and resistance between outdoor frames by using a tester.</p> <ul style="list-style-type: none"> • Is not grounded. • Is not short-circuited between windings. • Winding is not opened.

(1) Operating precautions

- 1) When removing the front panel or the P.C. board, be sure to shut off the power supply breaker.
- 2) When removing the P.C. board, hold the edge of the P.C. board and do not apply force to the parts

3) When connecting or disconnecting the connectors on the P.C. board, hold the terminals at the lead wire.


(2) Inspection procedures

1) When a P.C. board is judged to be defective, check for disconnection, burning, or discoloration of the copper foil pattern or this P.C. board.

2) The P.C. board consists of the following 2 parts

- a. Main P.C. board part :
DC power supply circuit, Indoor fan motor control circuit, CPU and peripheral circuits, buzzer, and Driving circuit of louver.

b. Indication of infrared ray receiving infrared ray receiving circuit LED not opened.
To check defect of the P.C. board, follow the procedure described below.

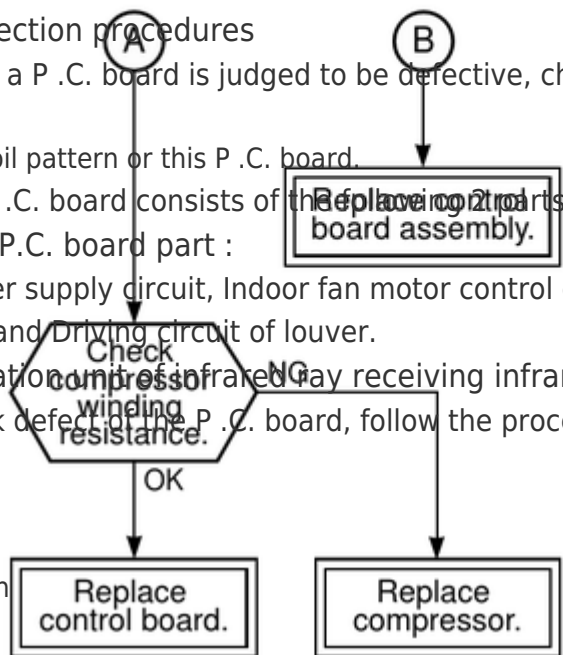

Diagnosis Process flowchart	Item	Contents
	Check	<p>Check winding resistance between phases of compressor, and resistance between outdoor frames by using a tester.</p> <ul style="list-style-type: none"> • Is not grounded. • Is not short-circuited between windings.
<p>Item Check B Operation Replace compressor. Contents Check winding resistance between phases of compressor, and resistance between outdoor frames by using a tester.</p>	Operation	<p>Remove connector CN300 of the outdoor fan motor, turn on the power supply breaker, and perform the operation. (Stops though activation is prompted.)</p> <p>Check operation within 2 minutes 20 seconds after activation stopped.</p>

11-9. How to Check Simply the Main Parts

11-9-1 How to Check the P.C. Board (Indoor Unit)

(1) Operating precautions

- 1) When removing the front panel or the P.C. board, be sure to shut off the power supply breaker, and perform the operation. (Stops though activation is prompted.)
- 2) When removing the P.C. board, hold the edge of the P.C. board and do not apply force to the parts
- 3) When connecting or disconnecting the connectors on the P.C. board, hold the terminals at the lead wire.

(2) Inspection procedures

1) When a P.C. board is judged to be defective, check for disconnection, burning, or discoloration of the copper foil pattern or this P.C. board.

2) The P.C. board consists of the following 2 parts

- a. Main P.C. board part :

DC power supply circuit, Indoor fan motor control circuit, CPU and peripheral circuits, buzzer, and Driving circuit of louver

→ OK if 10MΩ or more

□

→ OK if 0.51Ω → 0.57Ω

□



(Check by a digital tester.)

[Table of Contents](#)

[Previous Page](#)

[Next Page](#)

1
...
85
86
87
88
89
90
91
92

Quick Links:

[Service Manual](#)

[Specifications](#)

[How to Diagnose the Trouble](#)

Chapters

[Service Manual 2](#)

[Auto Restart Function/Remote Controller and Its Functions 31](#)

Related Manuals for Toshiba RAS-13SKV-E

[Air Conditioner Toshiba RAS-13SKV-E Service Manual](#)

Split type indoor/outdoor unit (121 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type air conditioner (119 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type air conditioner (91 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(19 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(148 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(120 pages)

[Air Conditioner Toshiba RAS-16SKVP-ND Owner's Manual](#)

(230 pages)

[Air Conditioner Toshiba RAS-10 SKV Series Owner's Manual](#)

(8 pages)

[Air Conditioner Toshiba RAS-10 SKV Series Owner's Manual](#)

Air conditioner (split type) (4 pages)

[Air Conditioner Toshiba RAS-13SKHP-E Service Manual](#)

Split wall type air conditioner (70 pages)

[Air Conditioner Toshiba RAS-10SKH-ES Service Manual](#)

Split wall type (68 pages)

[Air Conditioner Toshiba RAS-B10 Series Installation Manual](#)

(68 pages)

[Air Conditioner Toshiba RAS-10S3KV-E Owner's Manual](#)

(7 pages)

[Air Conditioner Toshiba RAS-13S3KV-E Service Manual](#)

(108 pages)

[Air Conditioner Toshiba RAS-24S3KHS-EE Owner's Manual](#)

(8 pages)

[Air Conditioner Toshiba RAS-10SKP Series Owner's Manual](#)

(8 pages)

Related Content for Toshiba RAS-13SKV-E

[RAS-15EKCV-UL How To Check Simply The Main Parts](#)

Toshiba RAS-15EKCV-UL

[RAS-M10YDV-E How To Check Simply The Main Parts](#)

Toshiba RAS-M10YDV-E

[RAS-13SKVR-E2 How To Check Simply The Main Parts](#)

Toshiba RAS-13SKVR-E2

[RAS-09EKV-UL How To Check Simply The Main Parts](#)

Toshiba RAS-09EKV-UL

[RAS-137SKV-E How To Check Simply The Main Parts](#)

Toshiba RAS-137SKV-E

[RAS-10NKV-E How To Check Simply The Main Parts](#)

Toshiba RAS-10NKV-E

[RAS-B10N3KVP-E How To Check Simply The Main Parts](#)

Toshiba RAS-B10N3KVP-E

[RAS-10N3KV-E How To Check Simply The Main Parts](#)

Toshiba RAS-10N3KV-E

This manual is also suitable for:

[Ras-13sav-eRas-16skv-eRas-10savr-eRas-13skvr-eRas-13savr-eRas-16sav-e](#) ... [Show all](#)