



# Toshiba RAS-13SKV-E Service Manual

## page 32

Split type indoor/outdoor unit

 


1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67  
68

69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117  
118

119  
120  
121



•

Table of Contents

- 

Troubleshooting



•

## Bookmarks





## **9-2. Operation Description**

### [1. Basic operation](#)

..... 32

#### [1. Operation control](#)

..... 32

#### [2. Cooling/Heating operation](#)

..... 33

#### [3. AUTO operation](#)

..... 33

#### [4. DRY operation](#)

..... 33

<a href="#">2. Indoor fan motor control</a>	34
<a href="#">3. Outdoor fan motor control</a>	36
<a href="#">4. Capacity control</a>	37
<a href="#">5. Current release control</a>	37
<a href="#">6. Release protective control by temperature of indoor heat exchanger</a>	38
<a href="#">7. Defrost control (Only in heating operation)</a>	39
<a href="#">8. Louver control</a>	40
<a href="#">1) Louver position</a>	40
<a href="#">2) Air direction adjustment</a>	40
<a href="#">3) Swing</a>	40
<a href="#">9. ECO operation</a>	41
<a href="#">10. Temporary operation</a>	42
<a href="#">11. Air purifying control [Detection of abnormality]</a>	42
<a href="#">12. Discharge temperature control</a>	43
<a href="#">13. Pulse Modulating valve (P.M.V.) control</a>	44
<a href="#">14. Self-Cleaning function</a>	45
<a href="#">15. Self-Cleaning function release</a>	46
<a href="#">16. Remote-A or B selection</a>	47
<a href="#">17. QUIET mode</a>	

.....	48
<a href="#">18. COMFORT SLEEP mode</a> .....	48
.....	48
<a href="#">19. Short Timer</a> .....	48
.....	48
<a href="#">20. One-Touch Comfort</a> .....	49
.....	49
<a href="#">21. Hi-POWER Mode</a> .....	49
.....	49
.	
22	
<a href="#">FIL TER Indicator</a>	
<b><a href="#">9-3. Auto Restart Function</a></b>	
.....	
<b>50</b>	
<a href="#">9-3-1. How to Set the A uto Restart Function</a> .....	
.....	50
<a href="#">9-3-2. How to Cancel the Au to Restar t Function</a>	
.....	51
<a href="#">9-3-3. Power Failure During Timer Operation</a>	
.....	51
<b><a href="#">9-4. Remote Controller and Its Fuctions</a></b>	
.....	52
<a href="#">9-4-1. Parts Name of Remote Contr oller</a>	
.....	52
<a href="#">9-4-2. Operation of remote control</a>	
.....	52
<a href="#">9-4-3. Name and Functions of Indications on Remote Contr oller</a>	
.....	55
.....	
- 31 -	
49	

[Previous Page](#)  
[Next Page](#)

1  
...  
29  
30  
31  
32  
33  
34  
35  
36



Quick Links:

[Service Manual](#)

[Indoor Unit](#)

[How to Diagnose the Trouble](#)

## Chapters

[Service Manual 2](#)

[Auto Restart Function/Remote Controller and Its Functions 32](#)

## Related Manuals for Toshiba RAS-13SKV-E

[Air Conditioner Toshiba RAS-13SKV-E Service Manual](#)

Indoor/outdoor unit, split type air conditioner (120 pages)

[Air Conditioner Toshiba RAS-10SAVP-E Service Manual](#)

(119 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type; for general public use (31 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type air conditioner (119 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Owner's Manual](#)

(61 pages)

[Air Conditioner Toshiba RAS-16SKVP-ND Owner's Manual](#)

(230 pages)

[Air Conditioner Toshiba RAS-10 SKV Series Owner's Manual](#)

Air conditioner (split type) (4 pages)

[Air Conditioner Toshiba RAS-M14GAV-E Installation Manual](#)

Split type (12 pages)

[Air Conditioner Toshiba RAS-13SKHP-E Service Manual](#)

Split wall type air conditioner (70 pages)

[Air Conditioner Toshiba RAS-13SKV2-E Service Manual](#)

Split type (111 pages)

[Air Conditioner Toshiba RAS-13SK-E Service Manual](#)

Air conditioner split wall type (56 pages)

[Air Conditioner Toshiba RAS-07SKHP Owner's Manual](#)

Split type indoor unit outdoor unit ras-07, 10, 13 skhp series, ras-07, 10, 13 s2ah series (4 pages)

[Air Conditioner Toshiba RAS-10SKVP2-E Service Manual](#)

Split type indoor unit high wall, heat pump type outdoor unit heat pump type (111 pages)

[Air Conditioner Toshiba RAS-10S3KHS-EE Installation Manual](#)

(20 pages)

[Air Conditioner Toshiba RAS-24S3KHS-EE Owner's Manual](#)

(8 pages)

[Air Conditioner Toshiba RAS-10SKP Series Owner's Manual](#)

(8 pages)

## Related Products for Toshiba RAS-13SKV-E

[Toshiba RAS-13SKVP-ND](#)

[Toshiba RAS-13SKVP2 Series](#)

[Toshiba RAS-13SKHP-E](#)

[Toshiba RAS-13SKHP-ES](#)

[Toshiba RAS-13SK-E](#)

[Toshiba RAS-13SKX](#)

[Toshiba RAS-13SKV2-E](#)

[Toshiba RAS-13SKVP2-E](#)

[Toshiba RAS-13SKVR-E2](#)

[Toshiba RAS-13SKV-A](#)

[Toshiba RAS-13SKH-E](#)

[Toshiba RAS-13SKP Series](#)

[Toshiba RAS-13SKP-E](#)

[Toshiba RAS-13SAX](#)

[Toshiba RAS-13S3KHS-EE](#)

[Toshiba RAS-13 S2A Series](#)

This manual is also suitable for:

[Ras-16skv-eRas-10skvr-eRas-13skvr-eRas-13sav-eRas-16sav-eRas-16skvr-e](#) ... [Show all](#)