

Outdoor Fan Motor Control - Toshiba RAS-13SKV-E Service Manual

 
Split type indoor/outdoor unit

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118

119
120
121



•

Table of Contents

-

Troubleshooting

•

Bookmarks



Item

The blowing air volume at the outdoor unit side is controlled.

3. Outdoor fan

motor control

Receiving the operation command from the controller of indoor unit, the controller of outdoor unit controls fan speed.

* For the fan motor, a DC motor with non-stage variable speed system is used. However, it is limited to 8 stages for reasons of controlling.

Air conditioner ON
(Remote controller)

Indoor unit controller

1) Outdoor unit
operation command
(Outdoor fan control)



2) Fan speed ≥ 400
when the motor stopped.

Fan motor ON

3) Fan lock

4) Motor operates as shown in the table below.

In cooling operation

Compressor speed (rps)

To > 38°C

To > 28°C

To > 15°C

To

To > 5.5°C

To > 0°C

To < 0°C

To > 38°C

During

ECO mode

To < 38°C

When To is abnormal

Tap

10SAVR-E

f 0

0

f 1

200

f 2

300

f 3

370

f 4

440

f 5

440

f 6

500

f 7

550

f 8

600

Operation flow and applicable data, etc.

YES

fan motor continues.

NO

YES

Air conditioner

NO

~ 13.8

~ 31.7

MIN MAX MIN MAX MIN MAX

f 2


f 3

f C

f D

f 2

f 3

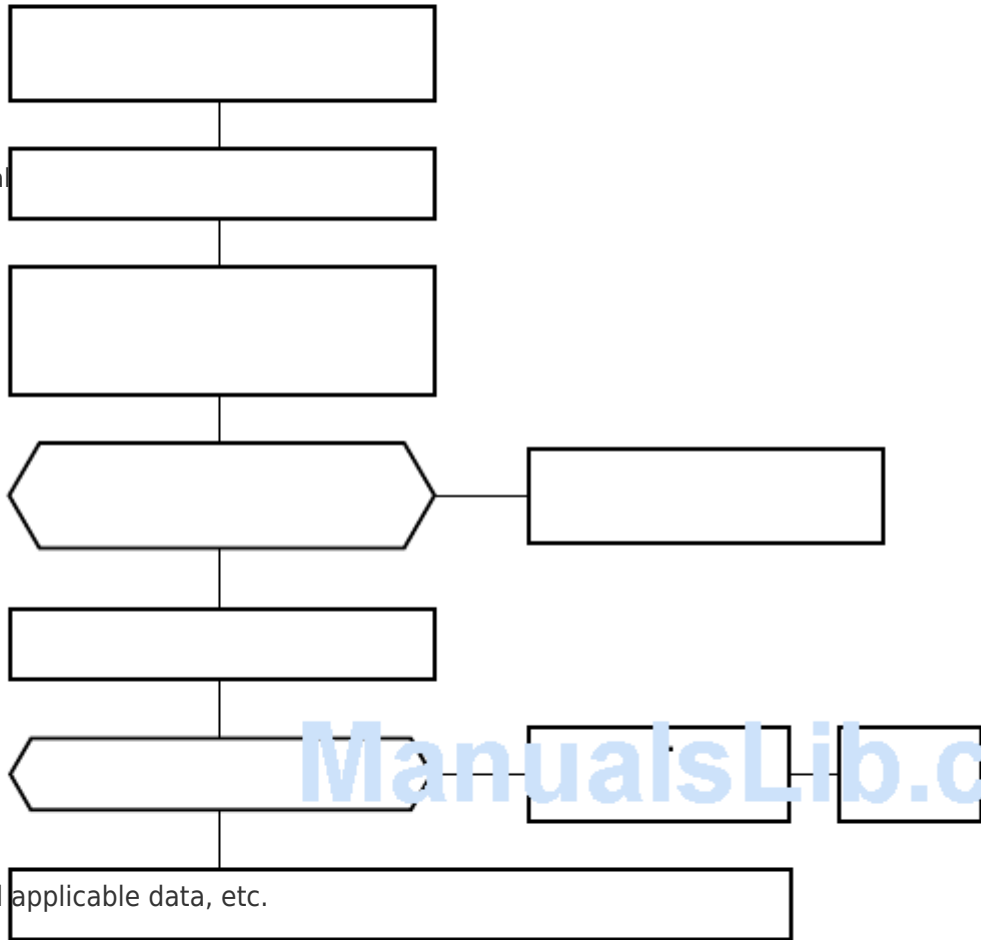


ManualsLib.com

| Air conditioner | | | | | | | |
|-----------------|---------|---------|--|--|--|--|--|
| | | | | | | | |
| NO | | | | | | | |
| ~ 13.8 | - | | | | | | |
| ~ 31.7 | - | | | | | | |
| MIN MAX | MIN MAX | MIN MAX | | | | | |
| f 2 | | | | | | | |
| f 3 | | | | | | | |
| f C | | | | | | | |
| f D | | | | | | | |
| f 2 | | | | | | | |
| f 3 | | | | | | | |

| | - |
|--|---|
| | |
| | |
| | |
| | - |
| | |
| | |

f A
f C
f 2
f 3
f 7
f A
f 1
f 3
f 2
f 5
f 1
f 1
f 1
f 1
f 2
f 0
f 0
f 0
f 1
f 2
f 3
f B
f C
f 2
f 3
f 2
f 3
f D
f F
f D
f F
Outdoor fan speed (rpm)
13SAV-E,13SAVR-E,
16SAVR-E
16SAV-E
0
0
200
200
300
300
370
370
440
440
440
440
500
500
550
550
600
600
OFF status of
Alarm
OFF
display
32.3 ~ MAX

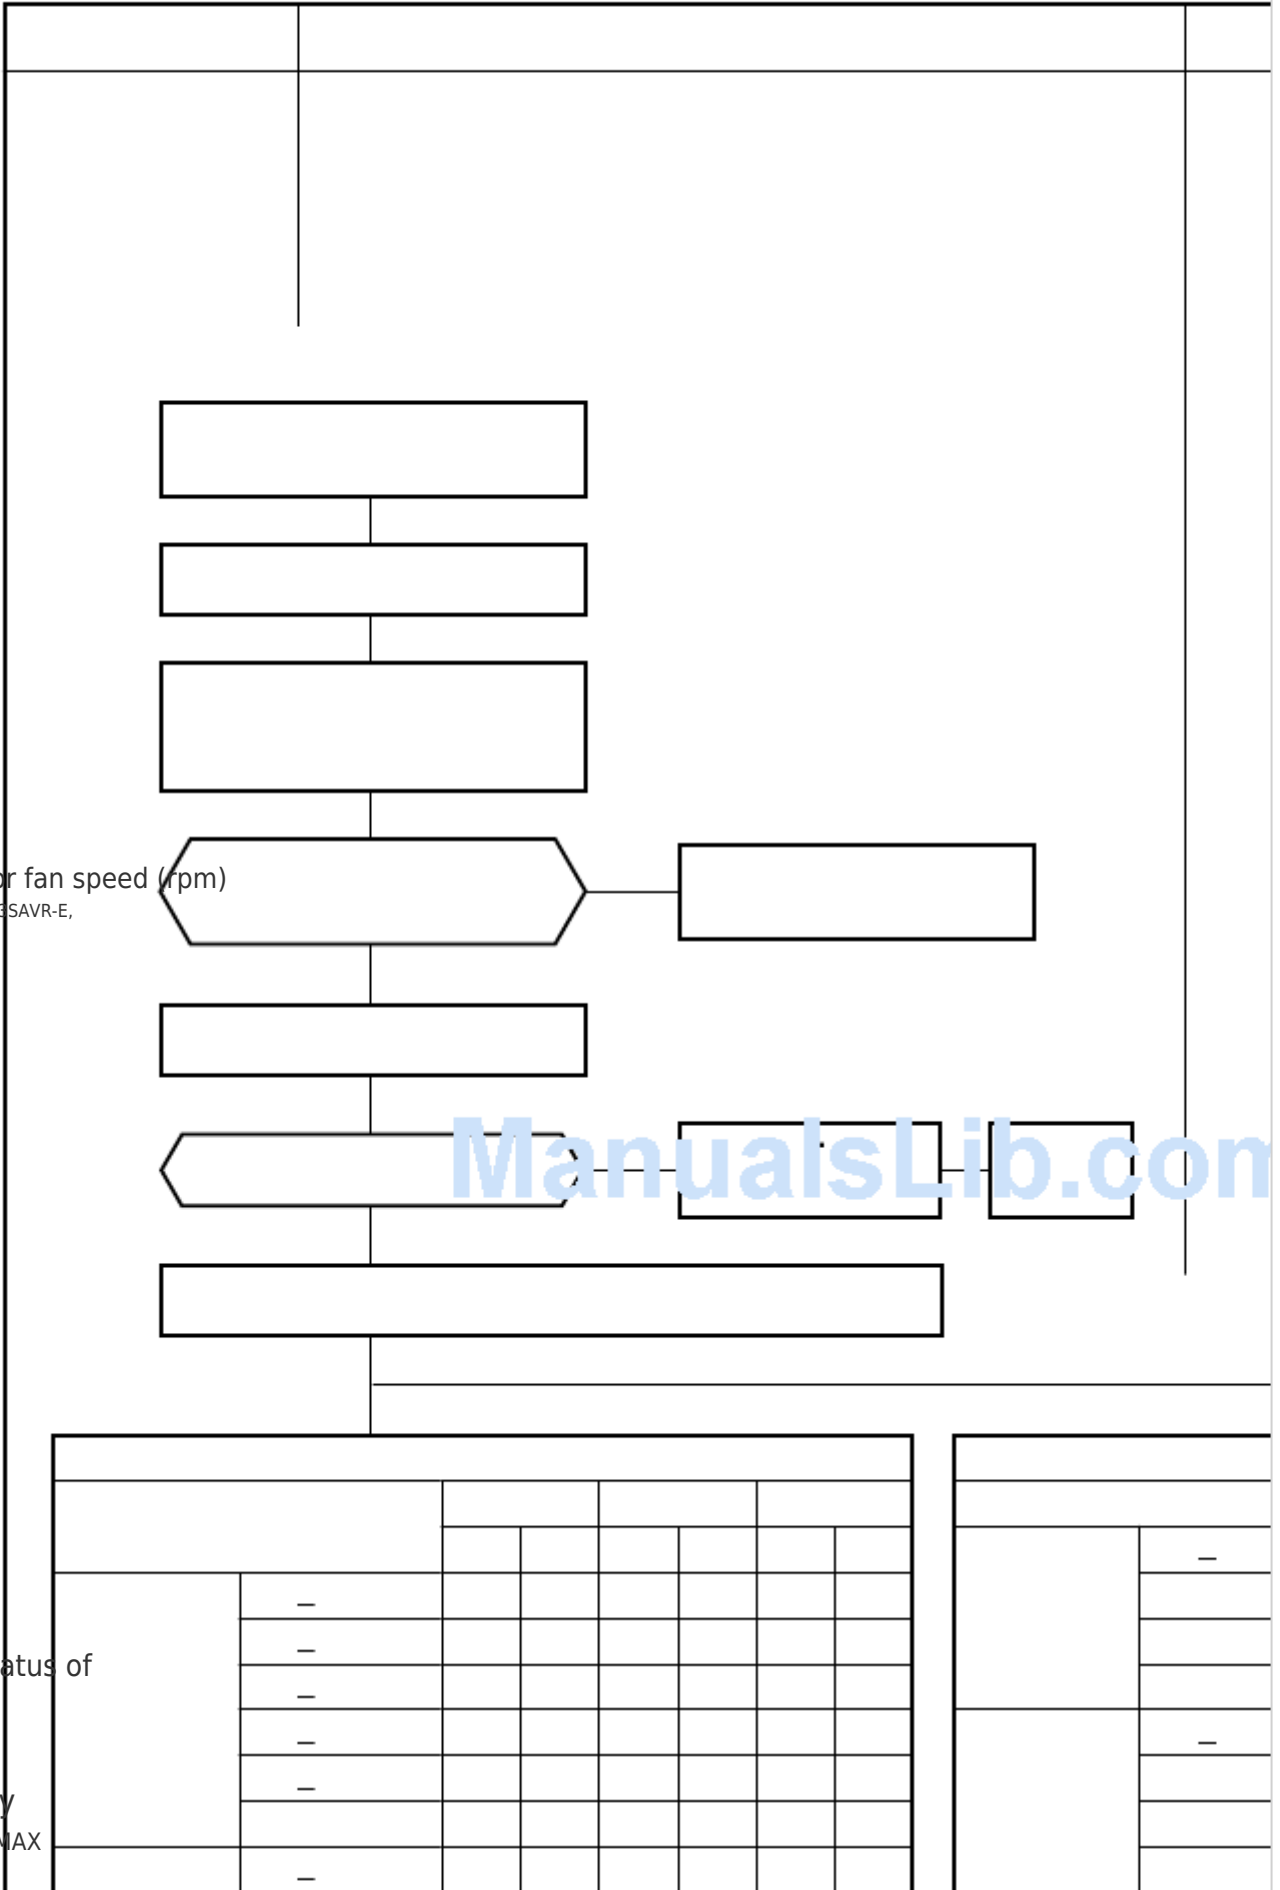

800
900

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
34
35
36
37
38
39
40
41

Quick Links:

[Service Manual](#)

[Indoor Unit](#)

[How to Diagnose the Trouble](#)

Chapters

[Service Manual 2](#)

[Auto Restart Function/Remote Controller and Its Functions 32](#)

Related Manuals for Toshiba RAS-13SKV-E

[Air Conditioner Toshiba RAS-13SKV-E Service Manual](#)

Indoor/outdoor unit, split type air conditioner (120 pages)

[Air Conditioner Toshiba RAS-10SAVP-E Service Manual](#)

(119 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type; for general public use (31 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type air conditioner (119 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Owner's Manual](#)

(61 pages)

[Air Conditioner Toshiba RAS-16SKVP-ND Owner's Manual](#)

(230 pages)

[Air Conditioner Toshiba RAS-10 SKV Series Owner's Manual](#)

Air conditioner (split type) (4 pages)

[Air Conditioner Toshiba RAS-M14GAV-E Installation Manual](#)

Split type (12 pages)

[Air Conditioner Toshiba RAS-13SKHP-E Service Manual](#)

Split wall type air conditioner (70 pages)

[Air Conditioner Toshiba RAS-13SKV2-E Service Manual](#)

Split type (111 pages)

[Air Conditioner Toshiba RAS-13SK-E Service Manual](#)

Air conditioner split wall type (56 pages)

[Air Conditioner Toshiba RAS-07SKHP Owner's Manual](#)

Split type indoor unit outdoor unit ras-07, 10, 13 skhp series, ras-07, 10, 13 s2ah series (4 pages)

[Air Conditioner Toshiba RAS-10SKVP2-E Service Manual](#)

Split type indoor unit high wall, heat pump type outdoor unit heat pump type (111 pages)

[Air Conditioner Toshiba RAS-10S3KHS-EE Installation Manual](#)

(20 pages)

[Air Conditioner Toshiba RAS-24S3KHS-EE Owner's Manual](#)

(8 pages)

[Air Conditioner Toshiba RAS-10SKP Series Owner's Manual](#)

(8 pages)

Related Content for Toshiba RAS-13SKV-E

[RAS-25S4KVDG-ND Outdoor Fan Motor Control](#)

Toshiba RAS-25S4KVDG-ND

[RAS-B22PKVSG-TR Outdoor Fan Motor Control](#)

Toshiba RAS-B22PKVSG-TR

[RAS-25S4KVPG-ND Outdoor Fan Motor Control](#)

Toshiba RAS-25S4KVPG-ND

[RAS-18S3KV-E Outdoor Fan Motor Control](#)

Toshiba RAS-18S3KV-E

[RAS-5M34U2AVG-E Outdoor Fan Motor Control](#)

Toshiba RAS-5M34U2AVG-E

[RAS-25G3KVSG-ND Outdoor Fan Motor Control](#)

Toshiba RAS-25G3KVSG-ND

[RAS-25E2KVG-ND Outdoor Fan Motor Control](#)

Toshiba RAS-25E2KVG-ND

[RAS-13S3KV-E Outdoor Fan Motor Control](#)

Toshiba RAS-13S3KV-E

This manual is also suitable for:

[Ras-16skv-e](#)[Ras-10skvr-e](#)[Ras-13skvr-e](#)[Ras-13sav-e](#)[Ras-16sav-e](#)[Ras-16skvr-e](#) ... [Show all](#)