

Eco Operation - Toshiba RAS-13SKV-E Service Manual

 
Split type indoor/outdoor unit

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118

119
120
121



•

Table of Contents

-

Troubleshooting

•

Bookmarks



Item

9. ECO

When pressing [ECO] button on the remote controller, a

operation

Economic operation is performed.

<Cooling operation>

This function operates the air conditioner with the difference between the set and the room temperature as shown in the following figure.

TA
+6.5
+6.0
+5.5
+5.0
+4.5
+4.0
+3.5
+3.0
+2.5
+2.0



+1.5
+1.0
+0.5
TSC
-0.5
-1.0
-2.0
1H

Cool min
DRY max
<Heating operation>
0

-0.5
-1.0
-1.5
-2.0
-2.5
-3.0
-4.0
-5.0
-6.0
-7.0
-8.0
-9.0
-10.0
-11.0

Operation flow and applicable data, etc

2H
3H
4H

- * 12 (DRY max - COOL min) / 6 x 5 + COOL min
- * 11 (DRY max - COOL min) / 6 x 4 + COOL min
- * 10 (DRY max - COOL min) / 6 x 3 + COOL min
- * 9 (DRY max - COOL min) / 6 x 2 + COOL min
- * 8 (DRY max - COOL min) / 6 x 1 + COOL min

Hz

10SKVR-E 13SKV-E 13SKVR-E 16SKV-E,16SKVR-E

20

20

35

37

30 minutes

A

B

A

B

C

C

10SKVR-E

Hz

13SKV-E

a

20


c


50

Zone Frequency

12


Dry Max

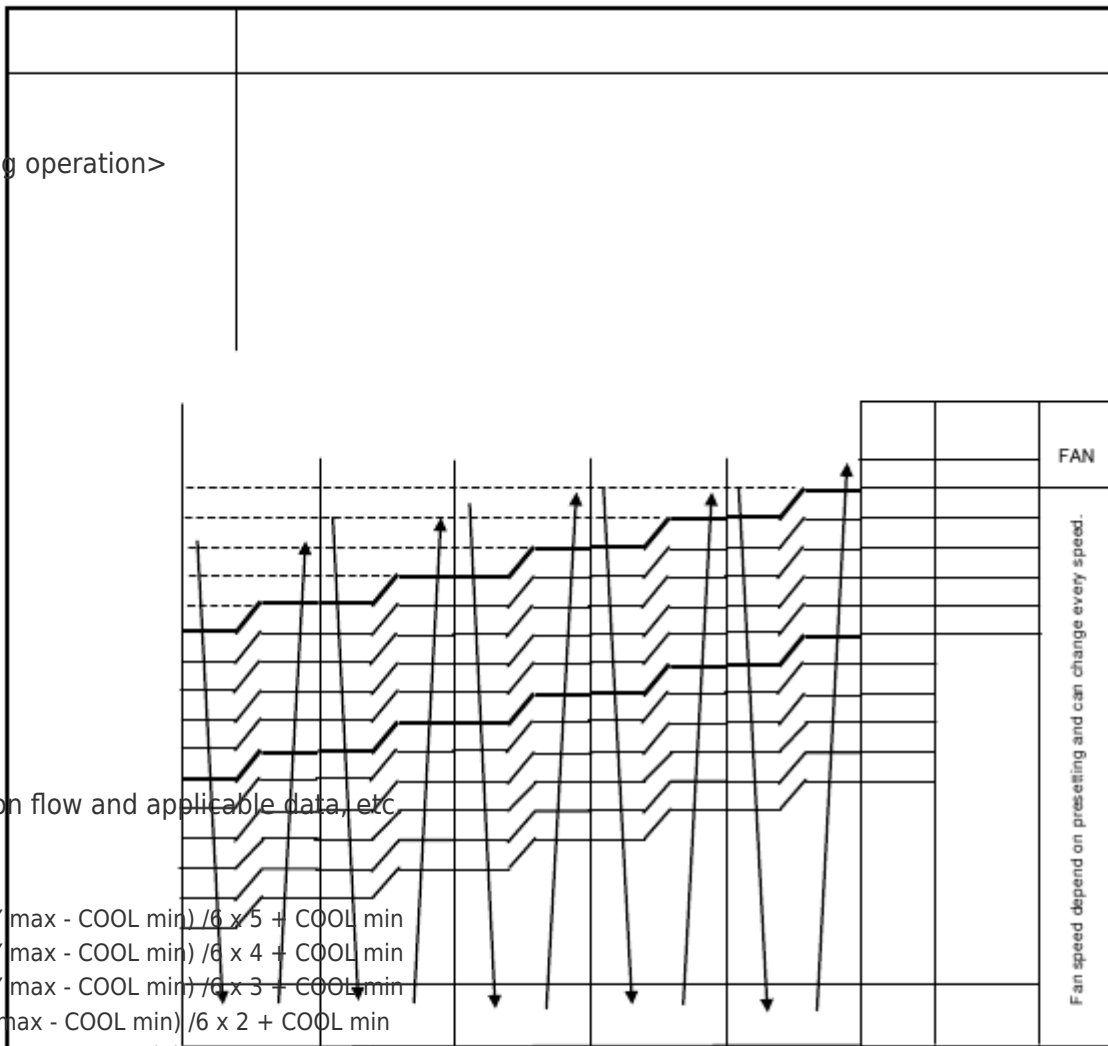

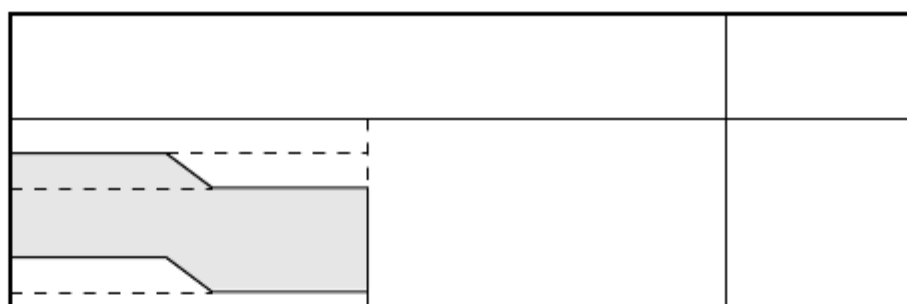

ManualsLib.com

11
 *12
 10
 *11
 *10
 9
 8
 *9
 7
 *8
 6
 5
 4
 3
 2
 Min
 1
 Hz
 OFF
 Time
 13
 13
 31
 35
 → Time Compressor
 speed
 0Hz
 A zone
 aHz
 B zone
 a to cHz
 C zone
 cHz
 16SKV-E
 13SKVR-E
 16SKVR-E
 13
 13
 43
 50
 - 41 -

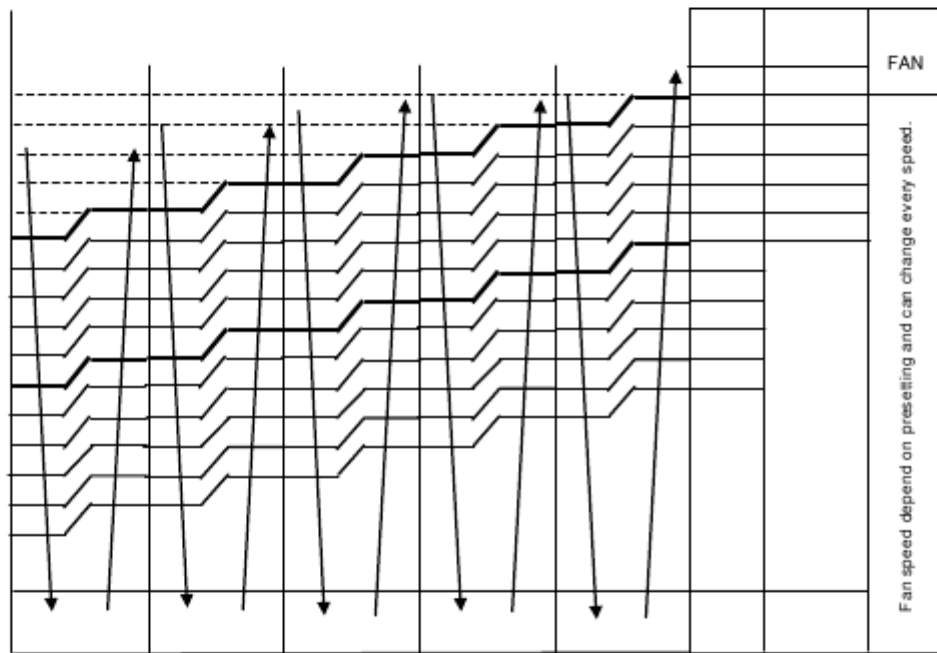

ManualsLib.com

Description


<Cooling operation>

- 1) The control target temperature increase 0.5°C per hour up to 2°C starting from the set temperature when ECONO has been received.
- 2) The indoor fan speed is depend on presetting and can change every speed after setting ECO operation.

3) The compressor speed is controlled as shown in the left figure.

<Heating operation>

- 1) Setting the compressor speed to Max. aHz, the temperature-zone in which the operation can be performed with Max. cHz is

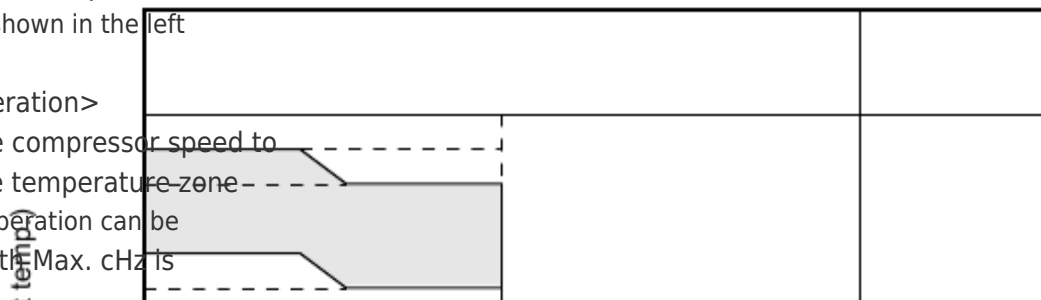

gradually widened after 30
minutes passed when starting

ECO operation.

2) The indoor fan speed is depend
on presetting and can change
every speed after setting ECO
operation.

Revised-1

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
39
40
41
42
43
44
45
46

Quick Links:

[Service Manual](#)

[Indoor Unit](#)

[How to Diagnose the Trouble](#)

Chapters

[Service Manual 2](#)

[Auto Restart Function/Remote Controller and Its Functions 32](#)

Related Manuals for Toshiba RAS-13SKV-E

[Air Conditioner Toshiba RAS-13SKV-E Service Manual](#)

Indoor/outdoor unit, split type air conditioner (120 pages)

[Air Conditioner Toshiba RAS-10SAVP-E Service Manual](#)

(119 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type; for general public use (31 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type air conditioner (119 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Owner's Manual](#)

(61 pages)

[Air Conditioner Toshiba RAS-16SKVP-ND Owner's Manual](#)

(230 pages)

[Air Conditioner Toshiba RAS-10 SKV Series Owner's Manual](#)

Air conditioner (split type) (4 pages)

[Air Conditioner Toshiba RAS-M14GAV-E Installation Manual](#)

Split type (12 pages)

[Air Conditioner Toshiba RAS-13SKHP-E Service Manual](#)

Split wall type air conditioner (70 pages)

[Air Conditioner Toshiba RAS-13SKV2-E Service Manual](#)

Split type (111 pages)

[Air Conditioner Toshiba RAS-13SK-E Service Manual](#)

Air conditioner split wall type (56 pages)

[Air Conditioner Toshiba RAS-07SKHP Owner's Manual](#)

Split type indoor unit outdoor unit ras-07, 10, 13 skhp series, ras-07, 10, 13 s2ah series (4 pages)

[Air Conditioner Toshiba RAS-10SKVP2-E Service Manual](#)

Split type indoor unit high wall, heat pump type outdoor unit heat pump type (111 pages)

[Air Conditioner Toshiba RAS-10S3KHS-EE Installation Manual](#)

(20 pages)

[Air Conditioner Toshiba RAS-24S3KHS-EE Owner's Manual](#)

(8 pages)

[Air Conditioner Toshiba RAS-10SKP Series Owner's Manual](#)

(8 pages)

Related Content for Toshiba RAS-13SKV-E

[RAS-M05G3KVSG-E Eco Operation](#)

Toshiba RAS-M05G3KVSG-E

[RAS-18S3KV-E Eco Operation](#)

Toshiba RAS-18S3KV-E

[RAS-M07N4KVRG-E Eco Operation](#)

Toshiba RAS-M07N4KVRG-E

[RAS-25G3KVSG-ND Eco Operation](#)

Toshiba RAS-25G3KVSG-ND

[RAS-25E2KVG-ND Eco Operation](#)

Toshiba RAS-25E2KVG-ND

[RAS-13S3KV-E Eco Operation](#)

Toshiba RAS-13S3KV-E

[RAS-B05BKVG-E Eco Operation](#)

Toshiba RAS-B05BKVG-E

[RAS-B05E2KVG-E Eco Operation](#)

Toshiba RAS-B05E2KVG-E

This manual is also suitable for:

[Ras-16skv-e](#)[Ras-10skvr-e](#)[Ras-13skvr-e](#)[Ras-13sav-e](#)[Ras-16sav-e](#)[Ras-16skvr-e](#) ... [Show all](#)