



# Remote-A Or B Selection - Toshiba RAS-13SKV-E Service Manual

Split type indoor/outdoor unit

 


1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67  
68

69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117  
118

119  
120  
121



•

Table of Contents

- 

Troubleshooting



•

## Bookmarks





Item

**16. Remote-A or B**

Setting the remote controller  
**selection**

To separate using of remote control for each indoor unit in case of 2 air conditioner are installed nearby.

Remote Control B Setup.

1) Press RESET button on the indoor unit to turn the air conditioner ON.

2) Point the remote control at the indoor unit.

3) Push and hold CHK • button on the Remote Control by the tip of the pencil. "00" will be shown

4) Press MODE • during pushing CHK • . "B" will

Note 1. Repeat above step to reset Remote Control

Operation flow and applicable data, etc.

shown on the display.

show on the display and "00" will disappear and the air conditioner will turn OFF. The Remote

Control B is memorized.  
to be A.

- 2. Remote Control A has not "A" display.
- 3. Default setting of Remote Control from factory is A.

1. Purpose

This operation is to operate only one indoor unit using one remote controller.

2. Description

When operating one indoor unit in a situation where two indoor units have been installed in the same room or nearby rooms, this operation prevents the remote controller signal from being received simultaneously by both units, thus preventing both units from operating.

3. Operation


The indoor unit on which the remote controller selection has been set to B receives the signal of the remote controller also set to B.

(At the factory the remote controller selection is set to A on all the indoor units. There is no A setting display.)

—  
—

47

Description

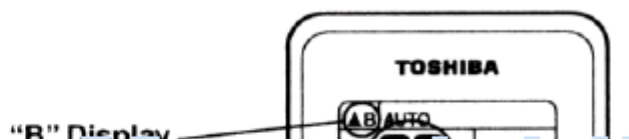

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1  
...  
45  
46  
47  
48  
49  
50  
51  
52

Quick Links:

[Service Manual](#)

[Indoor Unit](#)

[How to Diagnose the Trouble](#)

## Chapters

[Service Manual 2](#)

[Auto Restart Function/Remote Controller and Its Functions 32](#)

## Related Manuals for Toshiba RAS-13SKV-E

[Air Conditioner Toshiba RAS-13SKV-E Service Manual](#)

Indoor/outdoor unit, split type air conditioner (120 pages)



[Air Conditioner Toshiba RAS-10SAVP-E Service Manual](#)

(119 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type; for general public use (31 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type air conditioner (119 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Owner's Manual](#)

(61 pages)

[Air Conditioner Toshiba RAS-16SKVP-ND Owner's Manual](#)

(230 pages)

[Air Conditioner Toshiba RAS-10 SKV Series Owner's Manual](#)

Air conditioner (split type) (4 pages)

[Air Conditioner Toshiba RAS-M14GAV-E Installation Manual](#)

Split type (12 pages)

[Air Conditioner Toshiba RAS-13SKHP-E Service Manual](#)

Split wall type air conditioner (70 pages)

[Air Conditioner Toshiba RAS-13SKV2-E Service Manual](#)

Split type (111 pages)

[Air Conditioner Toshiba RAS-13SK-E Service Manual](#)

Air conditioner split wall type (56 pages)

[Air Conditioner Toshiba RAS-07SKHP Owner's Manual](#)

Split type indoor unit outdoor unit ras-07, 10, 13 skhp series, ras-07, 10, 13 s2ah series (4 pages)

[Air Conditioner Toshiba RAS-10SKVP2-E Service Manual](#)

Split type indoor unit high wall, heat pump type outdoor unit heat pump type (111 pages)

[Air Conditioner Toshiba RAS-10S3KHS-EE Installation Manual](#)

(20 pages)

[Air Conditioner Toshiba RAS-24S3KHS-EE Owner's Manual](#)

(8 pages)

[Air Conditioner Toshiba RAS-10SKP Series Owner's Manual](#)

(8 pages)

## Related Content for Toshiba RAS-13SKV-E

[MMK-UP0271HP-E Wireless Remote Controller A-B Selection](#)

Toshiba MMK-UP0271HP-E

[RAS-24J2AVSG-E1 Remote Control A-B Selection](#)

Toshiba RAS-24J2AVSG-E1

[RAS-24PAVSG-E Remote Control A-B Selection](#)

Toshiba RAS-24PAVSG-E

[RAS-25S4KVDG-ND Remote Control A-B Selection](#)

Toshiba RAS-25S4KVDG-ND

[RAS-24J2KVG-UA Remote-A Or B Selection](#)

Toshiba RAS-24J2KVG-UA

[RAS-B10J2KVRG-E Remote Control A-B Selection](#)

Toshiba RAS-B10J2KVRG-E

[RAS-25S4KVPG-ND Remote Control A-B Selection](#)

Toshiba RAS-25S4KVPG-ND

[MMK-UP0301HP-UL Wireless Remote Controller A-B Selection](#)

Toshiba MMK-UP0301HP-UL

This manual is also suitable for:

[Ras-16skv-eRas-10skvr-eRas-13skvr-eRas-13sav-eRas-16sav-eRas-16skvr-e](#) ... [Show all](#)