

One-Touch Comfort; Hi-Power Mode; Fil Ter Indicator - Toshiba RAS-13SKV-E Service Manual

 
Split type indoor/outdoor unit

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118

119
120
121



•

Table of Contents

-

Troubleshooting

•

Bookmarks



Item

20. One-Touch

One touch comfort is the fully automated operation

Comfort

that is set according to the preferable condition in a region.


Fan
Operation

*AUTO/L: Fan operates depends on the setting temperature and room temperature.

During the One Touch Comfort mode if the indoor unit receives any signal with other operation mode, the unit will cancel the comfort mode and operates according to the signal received.

21. Hi-POWER

([Hi-POWER] button on the remote controller
Mode

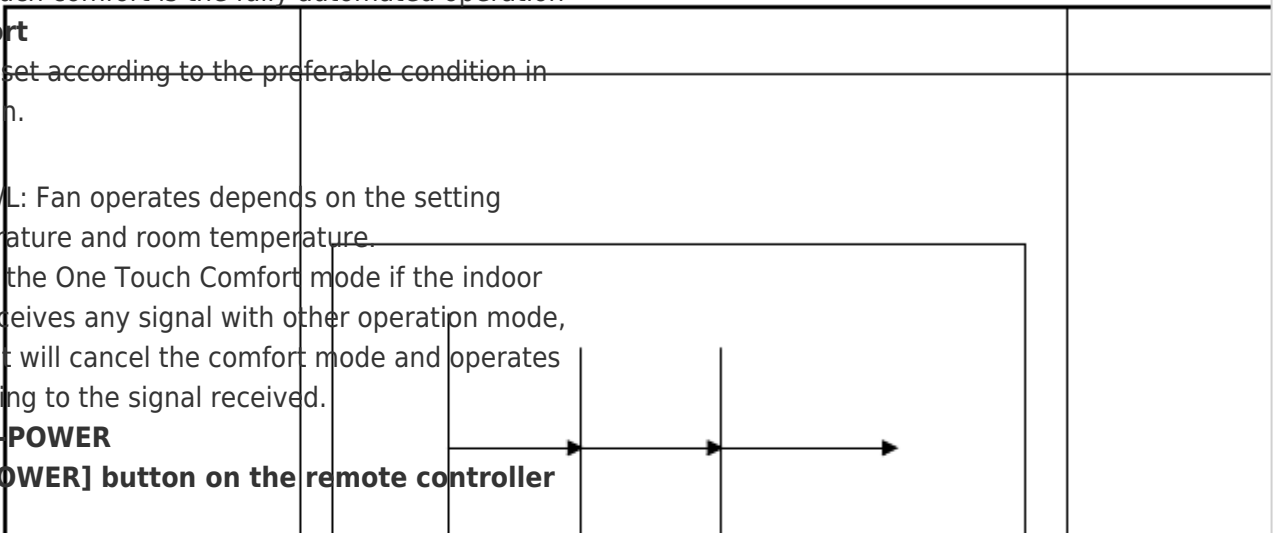

is pressed)

When [Hi-POWER] button is pressed while the indoor unit is in Auto, Cooling or Heating operation, Hi-POWER mark is indicated on the display of the remote controller and the unit operates as follows.

1. Automatic operation

• The indoor unit operates in according to the

2. Cooling operation

• The preset temperature drops 1°C

3. Heating operation

• The preset temperature increases 2°C

4. The Hi-POWER mode can not be set in Dry operation

22. FILTER

When the elapsed time reaches 1000 hours after air purifier operation, the FILTER indicator lights.

(13,16SKV-E) only

After cleaning the filters, turn off the FILTER indicator.

How to Turn Off FILTER Indicator

Press [RESET] button on the indoor unit.

NOTE :

If [RESET] button is pushed while the FILTER indicator is not lit, the indoor unit will start the automatic operation.

When you want a temporary operation while the FILTER lamp lights, press [RESET] button to turn off the FILTER lamp. (See page 42)

Operation flow and applicable data, etc.

AUTO
* AUTO/L
0
12
25

current operation.

(The value of the preset temperature on the remote controller does not change.)

The indoor unit's fan speed level increase 1 tap

(The value of the preset temperature on the remote controller does not change.)

The indoor unit's fan speed level increase 1 tap

Operation condition for model to Europe market

When an indoor unit receives "One Touch Comfort Signal" from the remote controller, the indoor unit operates as following.

1) Air conditioner starts to operation when

L

2) Operation mode is set according to room


3) Target temperature is 24°C.

Time after operation

4) Louver position is set as stored position

starts (min)

5) Fan is controlled as followings.

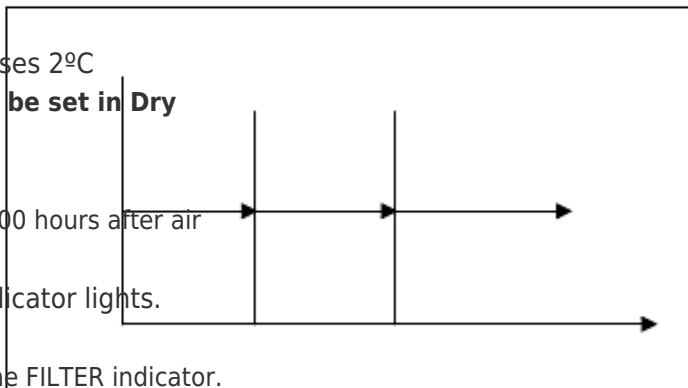

49

Description

the signal is received, even if the air conditioner was OFF.
temperature, the same as AUTO mode.
of the operating mode.

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
47
48
49
50
51
52
53
54

Quick Links:

[Service Manual](#)

[Indoor Unit](#)

[How to Diagnose the Trouble](#)

Chapters

[Service Manual 2](#)

[Auto Restart Function/Remote Controller and Its Functions 32](#)

Related Manuals for Toshiba RAS-13SKV-E

[Air Conditioner Toshiba RAS-13SKV-E Service Manual](#)

Indoor/outdoor unit, split type air conditioner (120 pages)

[Air Conditioner Toshiba RAS-10SAVP-E Service Manual](#)

(119 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type; for general public use (31 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type air conditioner (119 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Owner's Manual](#)

(61 pages)

[Air Conditioner Toshiba RAS-16SKVP-ND Owner's Manual](#)

(230 pages)

[Air Conditioner Toshiba RAS-10 SKV Series Owner's Manual](#)

Air conditioner (split type) (4 pages)

[Air Conditioner Toshiba RAS-M14GAV-E Installation Manual](#)

Split type (12 pages)

[Air Conditioner Toshiba RAS-13SKHP-E Service Manual](#)

Split wall type air conditioner (70 pages)

[Air Conditioner Toshiba RAS-13SKV2-E Service Manual](#)

Split type (111 pages)

[Air Conditioner Toshiba RAS-13SK-E Service Manual](#)

Air conditioner split wall type (56 pages)

[Air Conditioner Toshiba RAS-07SKHP Owner's Manual](#)

Split type indoor unit outdoor unit ras-07, 10, 13 skhp series, ras-07, 10, 13 s2ah series (4 pages)

[Air Conditioner Toshiba RAS-10SKVP2-E Service Manual](#)

Split type indoor unit high wall, heat pump type outdoor unit heat pump type (111 pages)

[Air Conditioner Toshiba RAS-10S3KHS-EE Installation Manual](#)

(20 pages)

[Air Conditioner Toshiba RAS-24S3KHS-EE Owner's Manual](#)

(8 pages)

[Air Conditioner Toshiba RAS-10SKP Series Owner's Manual](#)

(8 pages)

Related Content for Toshiba RAS-13SKV-E

[ras-m16g3dv-e One-Touch Comfort](#)

Toshiba ras-m16g3dv-e

[RAS-25SKVP2-ND One-Touch Comfort](#)

Toshiba RAS-25SKVP2-ND

[RAS-B16N3KV2-E1 One-Touch Comfort](#)

Toshiba RAS-B16N3KV2-E1

[RAS-07SKHP-E One-Touch Comfort](#)

Toshiba RAS-07SKHP-E

[RAS-24N3KV2-A One Touch Comfort](#)

Toshiba RAS-24N3KV2-A

[RAS-18, 22SKV-E One Touch Comfort](#)

Toshiba RAS-18, 22SKV-E

[RAS-18SAV2-E1 One Touch Comfort](#)

Toshiba RAS-18SAV2-E1

[RAS-15EKCV-UL One-Touch Comfort](#)

Toshiba RAS-15EKCV-UL

This manual is also suitable for:

[Ras-16skv-eRas-10skvr-eRas-13skvr-eRas-13sav-eRas-16sav-eRas-16skvr-e](#) ... [Show all](#)