

Primary Judgment - Toshiba RAS-13SKV-E Service Manual

 
Split type indoor/outdoor unit

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118

119
120
121



•

Table of Contents

-

Troubleshooting

•

Bookmarks



11-2. Primary Judgment

To diagnose the troubles, use the following methods.

- 1) Judgment by flashing LED of indoor unit
- 2) Self-diagnosis by service check remote controller
- 3) Judgment of trouble by every symptom

Firstly use the method 1) for diagnosis. Then, use the method 2) or 3) to diagnose the details of troubles.

11-3. Judgment by Flashing LED of Indoor Unit

While the indoor unit monitors the operation status of the air conditioner, if the protective circuit operates, the

contents of self-diagnosis are displayed with block on the indoor unit indication section.

Indoor indication

lamp flashes.

Which lamp
does flash?

NOTES :

1. The contents of items B and C and a part of item E are displayed when air conditioner operates.
2. When item B and C, and item B and a part of item E occur concurrently, priority is given to the block of item B.
3. The check codes can be confirmed on the remote controller for servicing.

Check

Item

code

OPERATION (Green)

A

Flashing display (1 Hz)

OPERATION (Green)

B

Flashing display (5 Hz)

OPERATION (Green)

C

TIMER (Yellow)

Flashing display (5 Hz)

OPERATION (Green)

FILTER (Orange)

D

Flashing display (5 Hz)

OPERATION (Green)

TIMER (Yellow)

E

FILTER (Orange)

Flashing display (5 Hz)

Table 11-3-1

Block display

Power failure (when power is ON)

Protective circuit operation for indoor P.C. board

Protective circuit operation for connecting cable
and serial signal system

Protective circuit operation for outdoor P.C. board

Protective circuit operation for others

(including compressor)

- 72 -

Description for self-diagnosis

		—		
		00		
		01		
		02		

[Previous Page](#)
[Next Page](#)

1
...
70
71
72
73
74
75
76
77

Quick Links:

[Service Manual](#)

[Indoor Unit](#)

[How to Diagnose the Trouble](#)

Chapters

[Service Manual 2](#)

[Auto Restart Function/Remote Controller and Its Functions 32](#)

Related Manuals for Toshiba RAS-13SKV-E

[Air Conditioner Toshiba RAS-13SKV-E Service Manual](#)

Indoor/outdoor unit, split type air conditioner (120 pages)

[Air Conditioner Toshiba RAS-10SAVP-E Service Manual](#)

(119 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type; for general public use (31 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type air conditioner (119 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Owner's Manual](#)

(61 pages)

[Air Conditioner Toshiba RAS-16SKVP-ND Owner's Manual](#)

(230 pages)

[Air Conditioner Toshiba RAS-10 SKV Series Owner's Manual](#)

Air conditioner (split type) (4 pages)

[Air Conditioner Toshiba RAS-M14GAV-E Installation Manual](#)

Split type (12 pages)

[Air Conditioner Toshiba RAS-13SKHP-E Service Manual](#)

Split wall type air conditioner (70 pages)

[Air Conditioner Toshiba RAS-13SKV2-E Service Manual](#)

Split type (111 pages)

[Air Conditioner Toshiba RAS-13SK-E Service Manual](#)

Air conditioner split wall type (56 pages)

[Air Conditioner Toshiba RAS-07SKHP Owner's Manual](#)

Split type indoor unit outdoor unit ras-07, 10, 13 skhp series, ras-07, 10, 13 s2ah series (4 pages)

[Air Conditioner Toshiba RAS-10SKVP2-E Service Manual](#)

Split type indoor unit high wall, heat pump type outdoor unit heat pump type (111 pages)

[Air Conditioner Toshiba RAS-10S3KHS-EE Installation Manual](#)

(20 pages)

[Air Conditioner Toshiba RAS-24S3KHS-EE Owner's Manual](#)

(8 pages)

[Air Conditioner Toshiba RAS-10SKP Series Owner's Manual](#)

(8 pages)

Related Content for Toshiba RAS-13SKV-E

[RAS-M13PKVP-E Primary Judgment](#)

Toshiba RAS-M13PKVP-E

[RAS-4M27S3AV-E Primary Judgment](#)

Toshiba RAS-4M27S3AV-E

[RAS-5M34S3AV-E Primary Judgment](#)

Toshiba RAS-5M34S3AV-E

[RAS-B10EKVP-E Primary Judgment](#)

Toshiba RAS-B10EKVP-E

[RAS-24N3KV2-A Primary Judgment](#)

Toshiba RAS-24N3KV2-A

[RAS-M10SMUV-E Primary Judgment](#)

Toshiba RAS-M10SMUV-E
[RAS-18, 22SKV-E Primary Judgment](#)
Toshiba RAS-18, 22SKV-E
[RAS-13UKV-E Primary Judgment](#)
Toshiba RAS-13UKV-E

This manual is also suitable for:

[Ras-16skv-eRas-10skvr-eRas-13skvr-eRas-13sav-eRas-16sav-eRas-16skvr-e](#) ... [Show all](#)