



# Asus P535 Quick Start Manual



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

19  
20  
21  
22  
23  
24  
25  
26  
Table Of Contents  
27

--

•

•

Bookmarks

--

## Quick Links

[Download this manual](#) See also: [User Manual](#)







# Quick Start Guide

The ASUS logo is positioned below the title. It features the word "ASUS" in a bold, black, sans-serif font. The letter "A" is stylized with a diagonal slash through it. A registered trademark symbol (®) is located to the upper right of the "S".

ManualsLib.com

---

[Table of Contents](#)

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Asus P535

### [Cell Phone Asus P535 User Manual](#)

Asus cell phone user manual (132 pages)

### [PDA Asus P535 Assembly & Disassembly Instructions](#)

(33 pages)

### [Cell Phone Asus P535 Quick Start Manual](#)

P535 quick start guide (26 pages)

### [Cell Phone Asus P525 User Manual](#)

Asus cell phone user manual (134 pages)

### [Cell Phone Asus P525 Quick Start Manual](#)

(25 pages)

### [Cell Phone Asus P526 Service Manual](#)

Asus p526 cell phone service manual (12 pages)

### [Cell Phone Asus P526 Service Manual](#)

Repair lv3 4 sop (113 pages)

### [Cell Phone Asus 90A-S5G1007T User Manual](#)

User manual (174 pages)

### [Cell Phone Asus P527 Firmware Update](#)

(9 pages)

### [Cell Phone Asus P527 Quick Start Manual](#)

Asus p527: quick start (39 pages)

### [Cell Phone Asus P505 Service Manual](#)

P505 (29 pages)

### [Cell Phone Asus P550 User Manual](#)

Asus p550 user manual in traditional chinese (140 pages)

### [Cell Phone Asus P550 User Manual](#)

(176 pages)

### [Cell Phone Asus P550 User Manual](#)

(60 pages)

### [Cell Phone Asus P565 User Manual](#)

User manual (190 pages)

### [Cell Phone Asus P560 User Manual](#)

(76 pages)

## Summary of Contents for Asus P535

[Page 1](#) Quick Start Guide...

### [Page 2: Package Contents](#)

Package contents Check your P535 package for the following items: P ASUS P535 device P Battery P AC Adapter P Mini-USB cable P Headset P Stylus P Car cell phone charger\* P Car Kit (PDA holder and windshield suction pedestal)\*...

[Page 3](#) Getting to know your P5□5 Layout Top features Right side features Rear features Left

side features Bottom features Front features...

## [Page 4: Device Components Description](#)

Device components description Item Description MiniSD slot Allows you to insert a MiniSD storage card. Power button Press once to set suspend mode or to wake device from sleep mode. Press and hold to turn the power ON or OFF. Stylus Use the stylus to write, draw, or select items on the touch screen.

[Page 5](#) Device components description Item Description Action button Press to carry out the task of selected item. Right Soft key Performs the task indicated above the button. Ok or Close button Press to confirm a command or press to close/exit an open application.

## [Page 6: Getting Your Device Ready](#)

3. Replace the battery into the compartment with its copper contacts properly aligned to the copper conductor on the device. 4. Replace battery compartment cover. CAUTION: Use only an ASUS qualified battery for this device. Charging the battery The bundled battery pack is shipped only partially charged. Make sure to charge the battery at least four hours before using it for the first time.

## [Page 7: Powering Your Device](#)

Powering your device After charging the battery, you are now ready to use your device. To power on your device: 1. Press and hold the power button to turn ON the device. 2. Follow the succeeding screen instructions to setup your Windows Mobile-based device. The Today screen The Today screen displays information useful to you.

## [Page 8: Asus Status Icon](#)

ASUS Status icon The ASUS status icon allows you to easily check and see the current status of the following device components: CPU, USB, LCD Brightness, Battery power, Memory, MiniSD card, and device storage. To check the status of these components, tap the ASUS Status icon on the Today screen.

## [Page 9: Entering Information](#)

Entering information Using the Input panel The Input Panel allows you to select various input methods available on your device including: Block Recognizer, Keyboard, Letter Recognizer, and Transcriber. Tap the Input panel icon to display shortcut menu and select input method. Input panel icon Input panel methods Block Recognizer...

## [Page 10: Composing And Sending A Message](#)

Messages Sending a message Your device allows you to send and receive email, SMS, MMS, and MSN messages when connected to a network. The following describes how to compose and send a message. Composing and sending a message 1. Tap Start then Messaging. 2.

## [Page 11: Using Pocket Msn](#)

Using Pocket MSN 1. From the Today screen, tap the MSN icon to launch Pocket MSN. 2. Key in the e-mail address and password, then tap Sign In. Tap to check Save password box to save password. 3. Follow succeeding screen instructions to setup Pocket MSN.

## [Page 12: Synchronizing With Exchange Server](#)

Synchronizing with Exchange Server Before you can synchronize your device with an Exchange Server, install the Microsoft ® ActiveSync™ to your computer using the bundled P535 Getting Started CD. Activesync™ is the software that synchronizes your P535 with a Windows ®...

## [Page 13: Personalizing Your Device](#)

Personalizing your device You can customize the look and feel of your device according to your desired settings. Entering owner information To update the owner information: 1. Tap Start > Settings > Personal then tap the Owner Information icon or tap the icon on the Today screen.

## [Page 14: Setting Theme](#)

Setting phone sounds (ring type, ring tone, and keypad sound) To setup your phone sounds: 1. Tap Start > Settings > Personal tab. 2. Tap the Phone icon. 3. From the Phone screen, tap Ring

type box to select desired ring type. Tap Ring tone box to select desired ring type.

### [Page 15: Setting Date And Time](#)

Setting Date and Time You can launch the Date and Time screen directly from the Today screen. To edit date and time: 1. Tap the clock icon on the Today screen. 2. Select the correct time zone and change the date or time. NOTE: During synchronization, the date and time on your device is updated with the date and time on your...

### [Page 16: Wireless Features](#)

Wireless features Using WLAN (IEEE 802.11b/g) To activate WLAN in your device: 1. Tap Start > Settings > Connections tab then tap the Wi-Fi Manager icon. 2. From the Wi-Fi Manager screen, tap Menu then Turn Wi-Fi On. You can also turn Wi-Fi ON or OFF from the Today screen. 1.

### [Page 17: Bluetooth Manager](#)

You can also turn Bluetooth ON or OFF from the Today screen. To do this: 1. Find the Bluetooth icon at the bottom right corner of the Today screen. 2. Tap to display shortcut menu then tap Turn Bluetooth ON. The Bluetooth icon changes to if Bluetooth is turned Off.

[Page 18](#) Stereo headset setup P535 supports A2DP (Advanced Audio Distribution Profile), which is used by Bluetooth-enabled stereo headsets. Make sure that your stereo headset also supports A2DP. 1. Tap on the Today screen then on the shortcut menu tap Bluetooth Manager.

### [Page 19: Using The Gprs Tool](#)

Using the GPRS Tool The GPRS Tool allows you to conveniently select and connect to your GPRS service provider. To connect via GPRS Tool: 1. Tap Start > Settings > Connections tab then tap the Network Setting icon. You can also tap on the status bar then tap Settings from the pop-up callout.

### [Page 20: Disconnecting Gprs](#)

Connecting GPRS To connect GPRS: 1. Launch any application that connects to the Internet (e.g. Internet Explorer). The device will automatically connect Pop-up callout your default GPRS connection. A pop-up callout appears to display the connection status. 2. When connected, you can start browsing the Internet.

### [Page 21: Replaceable Batteries](#)

Notices Replaceable batteries If an equipment is provided with a replaceable battery and if replacement by an incorrect type could result in an explosion (e.g. with some lithium batteries), the following applies: – if the battery is placed in an OPERATOR ACCESS AREA, there shall be a marking close to the battery or a statement in both the operating and the servicing instructions;...

### [Page 22: Operator Access With A Tool](#)

Operator access with a tool If a TOOL is necessary to gain access to an OPERATOR ACCESS AREA, either all other compartments within that area containing a hazard shall be inaccessible to the OPERATOR by the use of the same TOOL, or such compartments shall be marked to discourage OPERATOR access.

[Page 23](#) WARNING The user needs to switch off the device when exposed to areas with potentially explosive atmospheres such as petrol stations, chemical storage depots and blasting operations.

[Page 24](#) IMEI integrity related requirements expressed in the GSM standards. Should you have any questions or comments regarding this matter, please have our best attention. Sincerely yours, Company: ASUSTeK COMPUTER INC. E-mail: <http://vip.asus.com/eservice/techserv.aspx...>

### [Page 25: Contact Information](#)

0800-093-456 (Toll-Free call from Taiwan only) Fax: 886-2-2895-9254 E-mail: <http://vip.asus.com/eservice/techserv.aspx> WWW: <http://tw.asus.com> ASUSTeK COMPUTER INC. (Asia-Pacific) Hotline: 886-2-2894-3447 Fax: 886-2-2890-7698 E-mail: <http://vip.asus.com/eservice/techserv.aspx> WWW: <http://www.asus.com> ASUS COMPUTER GmbH

(Germany/Austria) Hotline: +49-2102-9599-10 Fax: +49-2102-9599-11 E-mail:  
<http://www.asus.de/support/support.htm> WWW: <http://www.asus.de> ASUS COMPUTER (China)  
Tel: +86-10-82667575 E-Mail: <http://vip.asus.com.cn/eservice/techserv.aspx>.