

How To Cancel The Auto Restart Function; Power Failure During Timer Operation - Toshiba RAS-B10UFV-E Service Manual

 
Air conditioner split type

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118

119
120
121
122
123
124
125
126
127



•

•

Bookmarks



9-3-2. How to Cancel the Auto Restart Function

To cancel auto restart function, proceed as follows :

Repeat the setting procedure : the unit receives the signal and beeps three times.

The unit will be required to be turned on with the remote control after the main power supply is turned off.

- When the system is on stand-by (not operating)

Operation

Press [OPERATION] button for more than three seconds. (Less than 10 seconds)

- When the system is operating

Operation

Press [OPERATION] button for more than three seconds. (Less than 10 seconds)

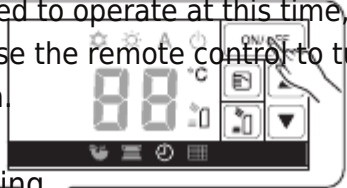

9-3-3. Power Failure During Timer Operation

When the unit is turned off because of power failure during timer operation, the timer operation is cancelled. In that case, set the timer operation again.

NOTE :

The Everyday Timer is reset while a command signal can be received from the remote control even if it stopped due to a power failure.

The unit is on standby.

<p>The unit starts to operate.</p>	
<p>After approx. three seconds, The unit beeps three times and continues to operate. If the unit is not required to operate at this time, press [OPERATION] button once more or use the remote control to turn it off. The unit is in operation.</p>  <p>The unit stops operating.</p>  <p>After approx. three seconds, The unit beeps three times. If the unit is required to operate at this time, press [OPERATION] button once more or use the remote control to turn it on.</p>	

- 56 -

Motions

The operation indicator is on.

Motions

The operation indicator is on.

The operation indicator is turned off.

ManualsLib.com

[Previous Page](#)
[Next Page](#)

1
...
53
54
55
56
57
58
59
60

Quick Links:

[Service Manual](#)

[Specifications](#)

[How to Diagnose the Trouble](#)

Chapters

[Service Manual 2](#)

[Table of Contents 29](#)

Related Manuals for Toshiba RAS-B10UFV-E

[Air Conditioner Toshiba RAS-107SKV-E5 Technical Handbook](#)

(78 pages)

[Air Conditioner Toshiba RAS-13SKV2-E Service Manual](#)

Split type (111 pages)

[Air Conditioner Toshiba RAS-18SKV-E Service Manual](#)

Split type air conditioner (109 pages)

[Air Conditioner Toshiba RAS-18SKII-E Service Manual](#)

Split type (109 pages)

[Air Conditioner Toshiba RAS-13SKVR-E2 Service Manual](#)

Split type (107 pages)

[Air Conditioner Toshiba RAS-10SKVR-E2 Service Manual](#)

Air conditioner split type (105 pages)

[Air Conditioner Toshiba RAS-M14GAV-E Owner's Manual](#)

Split type (7 pages)

[Air Conditioner Toshiba RAS-M14GAV-E Installation Manual](#)

Split type (12 pages)

[Air Conditioner Toshiba RAS-\(B\)10UFV Series Installation Manual](#)

Split type indoor unit outdoor unit (13 pages)

[Air Conditioner Toshiba RAS-B10U2FVG-E Installation Manual](#)

Indoor unit (13 pages)

[Air Conditioner Toshiba RAS-B10U2FVG-E Service Manual](#)

Air- conditioners split type (97 pages)

[Air Conditioner Toshiba RAS-B18U2FVG-E Owner's Manual](#)

(7 pages)

[Air Conditioner Toshiba RAS-B10U2FVG-E1 Owner's Manual](#)

Split type, indoor unit (7 pages)

[Air Conditioner Toshiba RAS-B10UFV-E1 Service Manual](#)

(132 pages)

[Air Conditioner toshiba RAS-B10GKVP-E Service Manual](#)

Split type heat pump type/cooling onlytype (134 pages)

[Air Conditioner Toshiba RAS-B10J2KVSG-E Owner's Manual](#)

(8 pages)

Related Content for Toshiba RAS-B10UFV-E

[RAS-10S3AV-E How To Cancel The Auto Restart Function](#)

Toshiba RAS-10S3AV-E

[RAS-M05G3KVSG-E How To Cancel The Auto Restart Function](#)

Toshiba RAS-M05G3KVSG-E

[RAS-18S3KV-E How To Cancel The Auto Restart Function](#)

Toshiba RAS-18S3KV-E

[RAS-M07G3DV-E How To Cancel The Auto Restart Function](#)

Toshiba RAS-M07G3DV-E

[RAS-M07N4KVRG-E How To Cancel The Auto Restart Function](#)

Toshiba RAS-M07N4KVRG-E

[RAS-25G3KVSG-ND How To Cancel The Auto Restart Function](#)

Toshiba RAS-25G3KVSG-ND

[RAS-25E2KVG-ND How To Cancel The Auto Restart Function](#)

Toshiba RAS-25E2KVG-ND

[RAS-13S3KV-E How To Cancel The Auto Restart Function](#)

Toshiba RAS-13S3KV-E

This manual is also suitable for:

[Ras-10sav2-eRas-13sav2-eRas-b18ufv-eRas-18sav-eRas-18sav2-eRas-b13ufv-e](#) ... [Show all](#)