



Toshiba RAS-10 Series Owner's Manual

Indoor and outdoor unit

1
2
3
4
5

--

•

[Table of Contents](#)

•

Bookmarks

--

Table of Contents

1 Precautions for Safety

2 Indoor Unit Display

3 Preparation before Use

4 Airflow Direction


5 Maintenance

6 Operation and Performance

7 Troubleshooting (Check Point)

[Download this manual](#)

See also: [Owner's Manual](#) , [Installation Manual](#)

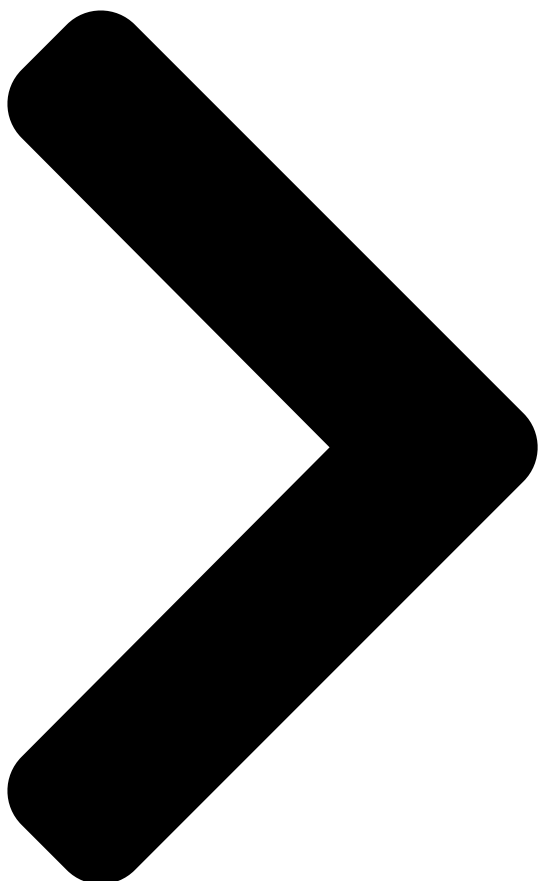

OWNER'S MANUAL

AIR CONDITIONER (SPLIT TYPE)

For general public use

ENGLISH

Indoor unit

RAS-10, M10, 13, M13, 16, M16, 18, 24 GK Series

Outdoor unit

RAS-10, 13, 16, 18, 24 GA Series

1075005023-1

TOSHIBA

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba RAS-10 Series

[Air Conditioner Toshiba RAS-05, RAS-07 Installation Manual](#)

Inverter (274 pages)

[Air Conditioner Toshiba 16N3KVP Series Owner's Manual](#)

(105 pages)

[Air Conditioner Toshiba RAS-B10 Series Installation Manual](#)

(68 pages)

[Air Conditioner Toshiba RAS-10 Owner's Manual](#)

(48 pages)

[Air Conditioner Toshiba RAS-10 Installation Manual](#)

(32 pages)

[Air Conditioner Toshiba RAS-10 Installation Manual](#)

(28 pages)

[Air Conditioner Toshiba RAS-B07 Installation Manual](#)

Air conditioner (split type) (20 pages)

[Air Conditioner Toshiba RAS-10 Owner's Manual](#)

18ufv series, 18sav series (19 pages)

[Split air conditioner Toshiba RAS-05 Installation Manual](#)

(16 pages)

[Air Conditioner Toshiba RAS-13BKV-E Installation Manual](#)

(15 pages)

[Air Conditioner Toshiba RAS-10 Owner's Manual](#)

(12 pages)

[Air Conditioner Toshiba RAS-10, 13SKPX Series Owner's Manual](#)

Split type (8 pages)

[Air Conditioner Toshiba RAS-10SKVP2 series Owner's Manual](#)

Split type (6 pages)

[Air Conditioner Toshiba RAS-10 NAH Series Owner's Manual](#)

(5 pages)

[Air Conditioner Toshiba RAS-07 Owner's Manual](#)

(4 pages)

[Air Conditioner Toshiba RAS-10SKVP2 Series Owner's Manual](#)

Split type (3 pages)

Summary of Contents for Toshiba RAS-10 Series

[Page 1](#) OWNER'S MANUAL AIR CONDITIONER (SPLIT TYPE) For general public use ENGLISH
Indoor unit RAS-10, M10, 13, M13, 16, M16, 18, 24 GK Series Outdoor unit RAS-10, 13, 16, 18,
24 GA Series 1075005023-1...

[Page 2: Precautions For Safety](#)

ENGLISH PRECAUTIONS FOR SAFETY DANGER • Do not install, repair, open or remove the cover.
It may expose you to dangerous voltages. Ask the dealer or the specialist to do this. • Turning
off the power supply will not prevent potential electric shock. •...

[Page 3](#) REMOTE CONTROL FUNCTION Infrared signal emitter Start/Stop button (Mode select

button (MODE) Temperature button (TEMP.) Fan speed button (FAN) Auto louver button (SWING)
Set louver button (FIX) On timer button (ON) Off timer button (OFF) Sleep timer button (SLEEP)
"...

[Page 4: Maintenance](#)

TIMER OPERATION Setting the ON Timer Setting the OFF Timer 1. Press : Set the desired ON timer. 1. Press : Set the desired OFF timer. 2. Press : Set the timer. 2. Press : Set the timer. 3. Press : Cancel the timer.

[Page 5: Operation And Performance](#)

Note: • To cancel this function, press and hold the TEMPORARY/RESET button about 20 seconds. The self cleaning function will be cancelled. • This function cannot use with Inverter model.
OPERATION AND PERFORMANCE 1. Three-minute protection feature: To prevent the unit from being activated for 3 minutes when suddenly restarted or switched to ON.

This manual is also suitable for:

Ras- m10 series [Ras-13 series](#) [Ras-m13 series](#) [Ras-16 series](#) [Ras-m16 series](#) [Ras-18 series](#) ... [Show all](#)