



 
# **TOSHIBA**

## Toshiba PLK-25DL Instruction Manual

Electric hot pot (for household use)



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
Table Of Contents  
13



•

[Table of Contents](#)

•

## Bookmarks

## Table of Contents

1 Safety Precaution

2 Water Level Gauge

3 Part Names and Functions


4 For the First Time Use

5 When Not in Use

6 Daily Maintenance

## 7 Specifications

[Download this manual](#)

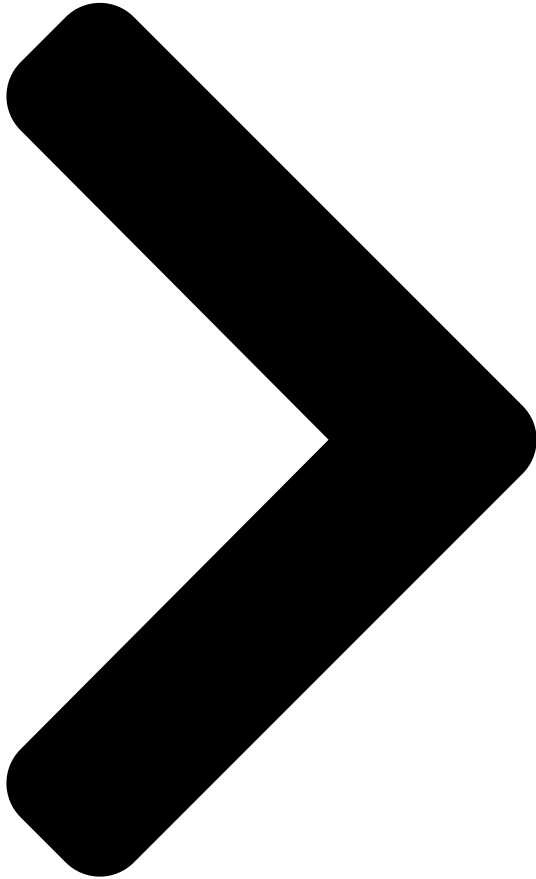



# Toshiba Electric Hot Pot Instruction Manual

Model

**PLK-25DL PLK-30DL PLK-25DLI PLK-30DLI**

**PLK-25VE PLK-30VE PLK-25VEI PLK-30VEI**

**PLK-25EL PLK-30EL PLK-25ELI**

**PLK-25FL PLK-30FL PLK-25FLI**

**PLK-25VF PLK-30VF PLK-25VFI PLK-30VFI**

**TOSHIBA**



[ Thank you for buying Toshiba electric hot pot today.  
[ The electric hot pot is used for boiling water only.  
To apply this product safely and properly, please read  
the manual thoroughly and well understand before use.  
[ After reading, please keep the manual handy.

NENL13710000000 (Cover)

1

(For household use)

# TOSHIBA

## PLK-30ELI

## PLK-30FLI

24/3/08, 13:54



[Table of Contents](#)

Next Page

1  
2  
3  
4  
5

## Related Manuals for Toshiba PLK-25DL

[Kitchen Appliances Toshiba PLK-30FLEIS Instruction Manual](#)

Electric hot pot (16 pages)

[Kitchen Appliances Toshiba PLK-45SD Instruction Manual](#)

Electric hot pot (13 pages)

[Kitchen Appliances Toshiba PLK-45SFE Instruction Manual](#)

Electric hot pot (16 pages)

[Kitchen Appliances Toshiba PLK-45SD Instruction Manual](#)

Electric hot pot (17 pages)

[Toshiba PLK-45SD, PLK-45SDI, PLK-45SSDR, PLK-45SDRI - Electric Hot Pot Manual](#)

(article)

## Summary of Contents for Toshiba PLK-25DL

[Page 1](#) PLK-25FL PLK-30FL PLK-25FLI PLK-30FLI PLK-25VF PLK-30VF PLK-25VFI PLK-30VFI [ Thank you for buying Toshiba electric hot pot today. [ The electric hot pot is used for boiling water only. To apply this product safely and properly, please read the manual thoroughly and well understand before use.

### [Page 2: Safety Precaution](#)

Do not touch. For repair, please contact the shop you purchased or Toshiba repair information center. Close the lid firmly. Do not connect or...

### [Page 3: Water Level Gauge](#)

(WARNING continued) Do not fill the water more than the maximum of the apply this appliance and water level gauge. keep it out of reach from the children. The hot water may splash over and you PROHIBITED may get burnt.

[Page 4](#) CAUTION Pull the plug from the AC outlet when not in use. the plug and pull it out without touching the cord. It may cause injury, burns, an electric shock or a short plug and pull.

### [Page 5: Part Names And Functions](#)

PART NAMES AND FUNCTIONS Warning label of burning Steam vent Lid release lever Handle Control panel Power cord Water dispenser Main body Water level Water level gauge Power plug Filter Model name display Socket Inner pot Rotating base (With fluorocarbon-resin coat, if (It can rotate up to 360°...

[Page 6](#) PART NAMES AND FUNCTIONS (continued) Control Panel Functions of the indicators on the instruction manual Braille is shown near the button. FLASH REDUCE CHLORINE indicator ( EMPTY indicator ( Timer indicator ( Braille : unlock REDUCE CHLORINE REDUCE EMPTY CHLORINE TIMER REBOIL UNLOCK button...

### [Page 7: For The First Time Use](#)

FOR THE FIRST TIME USE (In case of not using the pot for a long time) Once boil the water at the temperature of "98". After that, press the PUMP button to pour some water. Then, pour out all the water remaining from the pot. And the pot can be used generally. Put the water into the inner pot and close the lid.

[Page 8](#) BOILING/POURING BOILING Put the water in the pot and close the lid. Indication Connect the plug. Then press the At the temperature of “98” TEMP. CLEAN Coffee, Chinese tea, instant button to select the CLEAN cup noodle, etc. temperature. : The BOIL indicator will light REDUCE At the temperature of “85”...

### [Page 9: When Not In Use](#)

POURING When there is very little water Fill the water before the water WARNING reaches the water level gauge Do not turn over or tilt the pot. Do not terribly shake (especially shake up and down) or strike the pot. When not in use Do not hold the lid while moving the pot.

[Page 10](#) RREBOILING/REDUCING CHLORINE/SETTING TIMER The water will be reboiled SETTING TIMER while warming. About 6 hours after the hot water is kept at the low temperature, the pot will automatically turn to the selected temperature. If it is applied before lunchtime or before you go out, Press the button once.

### [Page 11: Daily Maintenance](#)

MAINTENANCE WARNING Do not wet the lid or the pot. Do not wash the pot thoroughly. Do not immerse the bottom of the pot into the water and do not turn over the pot while its bottom is wet. Do not wet the cord. It may cause a short circuit, an electric shock, and an accident.

### [Page 12: Specifications](#)

SPECIFICATIONS Power supply 220 - 240 V a.c. 50 - 60 Hz MODEL PLK-25DL, 25VE, 25EL, 25FL and 25VF PLK-30DL, 30VE, 30EL, 30FL and 30VF PLK-25DLI, 25VEI, 25ELI, 25FLI and 25VFI PLK-30DLI, 30VEI, 30ELI, 30FLI and 30VFI Power consumption...

This manual is also suitable for:

[Plk-30dl](#)[Plk-25dli](#)[Plk-30dli](#)[Plk-25ve](#)[Plk-30ve](#)[Plk-25vei](#) ... [Show all](#)