

Automatic Operation; Automatic Operation (Auto Changeover) - Toshiba RAS-10SKVP-ND Owner's Manual

1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61

•

[Table of Contents](#)


-


Troubleshooting

•

Bookmarks

Available languages

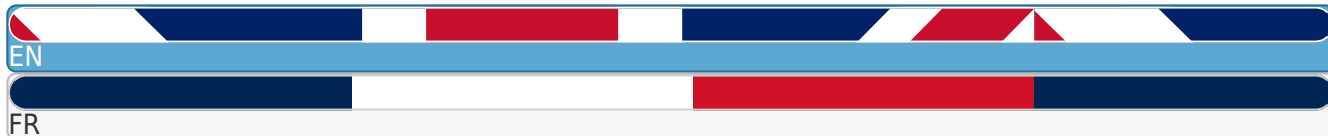

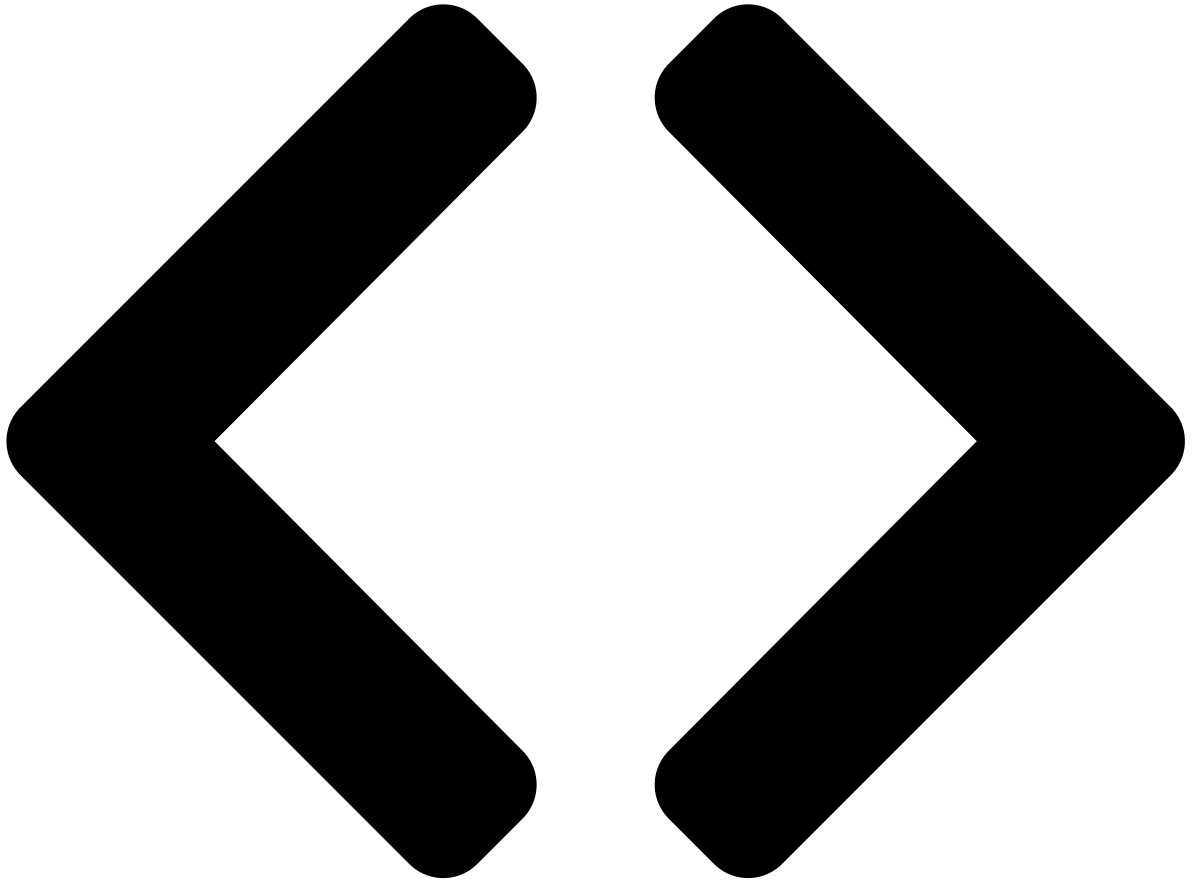

AUTOMATIC OPERATION

January 10, 2007 3:54 PM

When you set the air conditioner to AUTO mode, it automatically selects cooling, heating, or fan only operation depending on the room temperature. () see page 18.)

The fan speed and louver are also automatically controlled.

Start

a button

Press this button to start the air conditioner.

b AUTO button (AUTO)

Press AUTO button.

c Temperature button (TEMP)

Set the desired temperature.

• The OPERATION indicator (green) on the display panel of the indoor unit lights. The

operating mode is selected according to the room temperature and operation starts after approximately 3 minutes.

• If the AUTO mode is unselected, you can select the desired conditions manually.

AUTOMATIC OPERATION

When you set the air conditioner to AUTO mode, it automatically selects cooling, heating, or fan only operation depending on the room temperature. () see page 18.)

The fan speed and louver are also automatically controlled.

Start

① button

Press this button to start the air conditioner.

② AUTO button (AUTO)

Press AUTO button.

③ Temperature button (TEMP)

Set the desired temperature.

• The OPERATION indicator (green) on the display panel of the indoor unit lights. The

operating mode is selected according to the room temperature and operation starts after approximately 3 minutes.

• If the AUTO mode is unselected, you can select the desired conditions manually.

The fan speed and louver position can be changed, and MODE is also changed from AUTO to A when the fan speed or louver position is changed.

The fan speed indicator is also shown.

Stop

button

Press this button again to stop the air conditioner.

AUTOMATIC OPERATION (AUTO CHANGEOVER)

When you set the air conditioner to A mode or switch over from AUTO operation because of a change in settings, the air conditioner automatically selects cooling, heating, or fan only operation depending on the room temperature. (see page 18.)

Start

a

button

Press this button to start the air conditioner.

b Mode select button (MODE)

Select A.

c Temperature button (TEMP)

Set the desired temperature.

d Fan speed button (FAN)

Select one of "AUTO" LOW

HIGH

- The OPERATION indicator (green) on the display panel of the indoor unit lights. The operating mode is selected according to the room temperature and operation starts after approximately 3 minutes.

- If the AUTO mode is uncomfortable, you can select the desired conditions manually. The fan speed and louver position can be changed, and MODE is also changed from AUTO to A when the fan speed or louver position is changed.

- The temperature, fan speed and louver position can be changed. You can select the desired conditions manually. The fan speed indicator is also shown.

Stop

button

Press this button again to stop the air conditioner.

EN

)

)

, LOW+

, MED

, MED+

,

8

b

c

a

c

b

a

d

Start

① button

Press this button to start the air conditioner.

② **AUTO button (AUTO)**

Press AUTO button.

③ **Temperature button (TEMP)**

Set the desired temperature.

Stop

button

Press this button again to stop the air conditioner.

AUTOMATIC OPERATION (AUTO CHANGEOVER)

When you set the air conditioner to A mode or switch over from AUTO operation because of a change in settings, the air conditioner automatically selects cooling, heating, or fan only operation depending on the room temperature. (see page 18.)

Start

① button

Press this button to start the air conditioner.

② **Mode select button (MODE)**

Select A.

[Previous Page](#)
[Next Page](#)

1
...
9
10
11
12
13
14
15
16

Quick Links:

[Remote Controller and Its Functions](#)

[Cooling/Heating Operation](#)

[Special Maintenance](#)

[Specifications](#)

Related Manuals for Toshiba RAS-10SKVP-ND

[Air Conditioner Toshiba RAS-16SKVP-ND Owner's Manual](#)

(230 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Installation Manual](#)

(132 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(120 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type air conditioner (119 pages)

[Air Conditioner Toshiba RAS-10SAVP-E Service Manual](#)

(119 pages)

[Air Conditioner Toshiba RAS-10SA-E Service Manual](#)

Split wall type (56 pages)

[Air Conditioner Toshiba RAS-10SAV-A Service Manual](#)

Split wall type (94 pages)

[Air Conditioner Toshiba RAS-10 SKV Series Owner's Manual](#)

(8 pages)

[Air Conditioner Toshiba RAS-10SKVP2 Series Owner's Manual](#)

Split type (3 pages)

[Air Conditioner Toshiba RAS-10SKVP2 Series Installation Manual](#)

(10 pages)

[Air Conditioner Toshiba RAS-13SKV-E Service Manual](#)

Indoor/outdoor unit, split type air conditioner (120 pages)

[Air Conditioner Toshiba RAS-13SKV2-E Service Manual](#)

Split type (111 pages)

[Air Conditioner Toshiba RAS-10SKH-E Service Manual](#)

Split wall type air conditioner (62 pages)

[Air Conditioner Toshiba RAS-16SKV Series Owner's Manual](#)

(52 pages)

[Air Conditioner Toshiba RAS-10SAV Series Installation Manual](#)

(12 pages)

[Air Conditioner Toshiba RAS-10SKP Series Owner's Manual](#)

(8 pages)

Related Content for Toshiba RAS-10SKVP-ND

[35S4KVPG-ND Automatic Operation](#)

Toshiba 35S4KVPG-ND

[35E2KVG-ND Automatic Operation](#)

Toshiba 35E2KVG-ND

[MMY-MUP0721HT9P-UL Outdoor Unit Automatic Backup Operation](#)

[Outline](#)

Toshiba MMY-MUP0721HT9P-UL

[RAS-35G3KVSG-ND Automatic Operation](#)

Toshiba RAS-35G3KVSG-ND

[RAS-B05CKVG-EE Automatic Operation](#)

Toshiba RAS-B05CKVG-EE

[RAS-M10N4KCV Automatic Operation](#)

Toshiba RAS-M10N4KCV

[RAS-M10N4KV Automatic Operation](#)

Toshiba RAS-M10N4KV

[RAS-24E2KVG-E Automatic Operation](#)

This manual is also suitable for:

[Ras-13skvp-ndRas-16skvp-ndRas-10savp-ndRas-13savp-ndRas-16savp-nd](#)

[Save PDF](#)