

Cooling/Heating Operation; Dry Operation - Toshiba RAS-10SKVP-ND Owner's Manual

1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61

•

[Table of Contents](#)


-

Troubleshooting

•

Bookmarks

Available languages

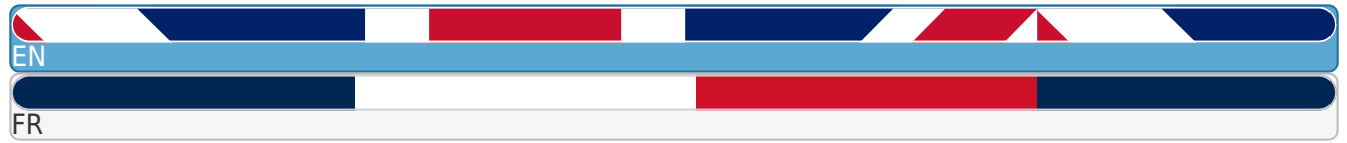



□□A1YPGTU/CPWCNA'0□□HO 2CIG □ 9GFPGUFC□□,CPWCT□ □□□ □□□□ 2/

COOLING/HEATING OPERATION


007 3:54 PM

Start

a  button

Press this button to start the air conditioner.

b Mode select button (MODE)

Select COOL  or HEAT .

c Temperature button (TEMP)

Set the desired temperature.


d Fan speed button (FAN)

Select one of "AUTO" LOW HIGH

• The OPERATION indicator (green) on the display panel of the indoor unit turns on.



COOLING/HEATING OPERATION

Start

①  button

Press this button to start the air conditioner.

② Mode select button (MODE)

Select COOL  or HEAT .

③ Temperature button (TEMP)

Set the desired temperature.

④ Fan speed button (FAN)

Select one of "AUTO" LOW HIGH

③
②
①

Operation starts after approximately 3 minutes.

Stop button



Press this button again to stop the air conditioner.

DRY OPERATION

Start

a
button

Press this button to start the air conditioner.

b **Mode select button (MODE)**

Select DRY

c **Temperature button**

Set the desired temperature.

• The fan speed setting is fixed to AUTO and the AUTO is displayed.

• The OPERATION indicator (green) on the display panel of the indoor unit turns on, and operation starts after approximately 3 minutes.

Stop button

Press this button again to stop the air conditioner.

, LOW+
, MED

, MED+

9

c

b

a

d

c

b

a

EN

COOLING/HEATING OPERATION

Start

① **button**

Press this button to start the air conditioner.

② **Mode select button (MODE)**

Select COOL ❄ or HEAT ☀.

③ **Temperature button (TEMP)**

Set the desired temperature.

④ **Fan speed button (FAN)**

Select one of "AUTO" LOW —, LOW+ — —, MED — — —, MED+ — — — —, HIGH — — — — —.

• The OPERATION indicator (green) on the display panel of the indoor unit turns on.

Operation starts after approximately 3 minutes.

Stop

button

Press this button again to stop the air conditioner.

DRY OPERATION

Start

① **button**

Press this button to start the air conditioner.

② **Mode select button (MODE)**

Select DRY ☁.

③ **Temperature button (TEMP)**

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
10
11
12
13
14
15
16
17

Quick Links:

[Remote Controller and Its Functions](#)

[Cooling/Heating Operation](#)

[Special Maintenance](#)

[Specifications](#)

Related Manuals for Toshiba RAS-10SKVP-ND

[Air Conditioner Toshiba RAS-16SKVP-ND Owner's Manual](#)

(230 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Installation Manual](#)

(132 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(120 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type air conditioner (119 pages)

[Air Conditioner Toshiba RAS-10SAVP-E Service Manual](#)

(119 pages)

[Air Conditioner Toshiba RAS-10SA-E Service Manual](#)

Split wall type (56 pages)

[Air Conditioner Toshiba RAS-10SAV-A Service Manual](#)

Split wall type (94 pages)

[Air Conditioner Toshiba RAS-10 SKV Series Owner's Manual](#)

(8 pages)

[Air Conditioner Toshiba RAS-10SKVP2 Series Owner's Manual](#)

Split type (3 pages)

[Air Conditioner Toshiba RAS-10SKVP2 Series Installation Manual](#)

(10 pages)

[Air Conditioner Toshiba RAS-13SKV-E Service Manual](#)

Indoor/outdoor unit, split type air conditioner (120 pages)

[Air Conditioner Toshiba RAS-13SKV2-E Service Manual](#)

Split type (111 pages)

[Air Conditioner Toshiba RAS-10SKH-E Service Manual](#)

Split wall type air conditioner (62 pages)

[Air Conditioner Toshiba RAS-16SKV Series Owner's Manual](#)

(52 pages)

[Air Conditioner Toshiba RAS-10SAV Series Installation Manual](#)

(12 pages)

[Air Conditioner Toshiba RAS-10SKP Series Owner's Manual](#)

(8 pages)

Related Content for Toshiba RAS-10SKVP-ND

[MMK-UP0271HP-E Cooling/Heating/Fan Only Operation](#)

Toshiba MMK-UP0271HP-E

[MMY-MUP0961HT6P-UL Cooling/Heating Test Operation Check](#)

Toshiba MMY-MUP0961HT6P-UL

[MMY-MUP0721FT6P-UL Simultaneous Heating Operation \(Operation Of Cooling And Heating\)](#)

Toshiba MMY-MUP0721FT6P-UL

[MCY-MHP0506HT-C Cooling / Heating Test Operation Check](#)

Toshiba MCY-MHP0506HT-C

[RAS-24J2KVG-UA Cooling/Heating Operation](#)

Toshiba RAS-24J2KVG-UA

[RAS-B07G3KVSG-E Cooling/Heating Operation](#)

Toshiba RAS-B07G3KVSG-E

[MMY-MUP0801HT8P-TR Cooling/Heating Test Operation Check](#)

Toshiba MMY-MUP0801HT8P-TR

[RAS-25S4KVDG-ND Cooling/Heating Operation](#)

Toshiba RAS-25S4KVDG-ND

This manual is also suitable for:

[Ras-13skvp-ndRas-16skvp-ndRas-10savp-ndRas-13savp-ndRas-16savp-nd](#)

[Save PDF](#)