



# Hi Power Operation - Toshiba RAS-10SKVP-ND Owner's Manual



1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61

---

•

[Table of Contents](#)

- 


Troubleshooting

•

## Bookmarks



Available languages

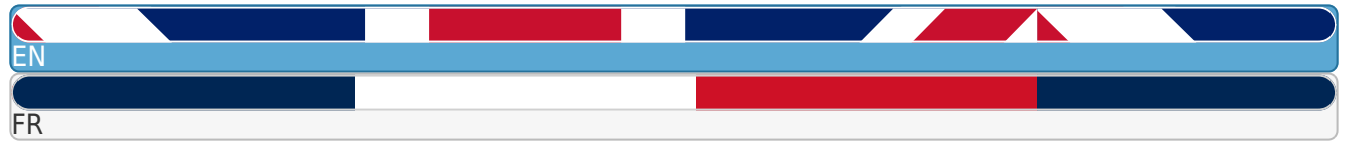



# Hi POWER OPERATION

Wednesday, January 10, 2007 3:54 PM

## High power (Hi POWER)

• The Hi POWER (high power operation) mode automatically controls room temperature, air flow and the operation mode so that the room is quickly cooled in summer and warmed in winter. (→ see page 18.)

### Setting Hi POWER mode

Press the Hi POWER button.

The Hi POWER (high power operation) mode is shown.

air flow and the operation mode so that the room is quickly cooled in summer and warmed in winter. (→ see page 18.)

### Canceling Hi POWER mode

Press the Hi POWER button once again.

The Hi POWER mark on the remote controller turns off.

### CAUTION

The Hi POWER mode cannot be activated during DRY operation.

# Hi POWER OPERATION

## High power (Hi POWER)

• The Hi POWER (high power operation) mode automatically controls room temperature, air flow and the operation mode so that the room is quickly cooled in summer and warmed in winter. (→ see page 18.)

### Setting Hi POWER mode

① Hi POWER button

Press the Hi POWER button. The Hi POWER mark on the remote controller is shown.

### Canceling Hi POWER mode

① Hi POWER button

# 1, 3, 5, 9H OFF TIMER

The air conditioner stops after operating for the set time (1, 3, 5 or 9 hours).

a OFF button

Press the OFF button (during operation).

- There is a short beep and the timer indicator comes on. The time at which the air conditioner will stop is indicated on the remote controller display (1H; about 1 hour after the current time).

- Press the button again while 1H is displayed (about 3 seconds) to change to the 3H indicator, press again to change to the 5H indicator, and press again to change to the 9H indicator.

- After selecting the time you want, do not press this button again. (When the 1H, 3H, etc. indicator goes off the timer is set.)

b CLR button

Press the CLR button to cancel the timer.

- The timer is canceled but the air conditioner continues to operate.
- The 1, 3, 5 or 9H OFF timer operation is also canceled if the OFF button is pressed after making a setting.

## INFORMATION

### Hi POWER button

Press the Hi POWER button once again.

The Hi POWER mark on the remote controller turns off.

• Cleaning operation starts when the time of the 1, 3, 5 or 9H OFF timer is reached. (Cleaning operation is not performed during heating operation or the PURE operation.)

• When using in combination with the Hi POWER mode, first set the 1, 3, 5 or 9H OFF timer and then set the ON timer.

• If the OFF button is pressed while the ON (OFF) timer has been set, the ON (OFF) timer is canceled and only the 1, 3, 5 or 9H OFF timer is set.

EN

12

a

b

a

# Hi POWER OPERATION

## High power (Hi POWER)

The Hi POWER (high power operation) mode automatically controls room temperature, air flow and the operation mode so that the room is quickly cooled in summer and warmed in winter. (see page 18.)

### Setting Hi POWER mode

#### Hi POWER button

Press the Hi POWER button. The Hi POWER mark on the remote controller is shown.

### Cancelling Hi POWER mode

#### Hi POWER button

Press the Hi POWER button once again.

The Hi POWER mark on the remote controller turns off.

## CAUTION

The Hi POWER mode cannot be activated during DRY operation.

①

# 1, 3, 5, 9H OFF TIMER

The air conditioner stops after operating for the set time (1, 3, 5 or 9

[Previous Page](#)  
[Next Page](#)

1  
...  
13  
14  
15  
16  
17  
18  
19  
20

Quick Links:

[Remote Controller and Its Functions](#)

[Cooling/Heating Operation](#)

[Special Maintenance](#)

[Specifications](#)

## Related Manuals for Toshiba RAS-10SKVP-ND

[Air Conditioner Toshiba RAS-16SKVP-ND Owner's Manual](#)

(230 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Installation Manual](#)

(132 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(120 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type air conditioner (119 pages)

[Air Conditioner Toshiba RAS-10SAVP-E Service Manual](#)

(119 pages)

[Air Conditioner Toshiba RAS-10SA-E Service Manual](#)

Split wall type (56 pages)

[Air Conditioner Toshiba RAS-10SAV-A Service Manual](#)

Split wall type (94 pages)

[Air Conditioner Toshiba RAS-10 SKV Series Owner's Manual](#)

(8 pages)

[Air Conditioner Toshiba RAS-10SKVP2 Series Owner's Manual](#)

Split type (3 pages)

[Air Conditioner Toshiba RAS-10SKVP2 Series Installation Manual](#)

(10 pages)

[Air Conditioner Toshiba RAS-13SKV-E Service Manual](#)

Indoor/outdoor unit, split type air conditioner (120 pages)

[Air Conditioner Toshiba RAS-13SKV2-E Service Manual](#)

Split type (111 pages)

[Air Conditioner Toshiba RAS-10SKH-E Service Manual](#)

Split wall type air conditioner (62 pages)

[Air Conditioner Toshiba RAS-16SKV Series Owner's Manual](#)

(52 pages)

[Air Conditioner Toshiba RAS-10SAV Series Installation Manual](#)

(12 pages)

[Air Conditioner Toshiba RAS-10SKP Series Owner's Manual](#)

(8 pages)

## Related Content for Toshiba RAS-10SKVP-ND

[RAS-M13PKVPG-E Hi-Power Operation](#)

Toshiba RAS-M13PKVPG-E

[RAS-18 Hi-Power Operation](#)

Toshiba RAS-18

[RAS-M10J2FVG-TR Hi-Power Operation](#)

Toshiba RAS-M10J2FVG-TR

[RAS-18PACVG -T Hi-Power Operation](#)

[R32 Hi-Power Operation](#)

Toshiba R32

[RAS-18J2KVSG-TR Hi-Power Operation](#)

Toshiba RAS-18J2KVSG-TR

[RAS-H10BKCV-M Hi-Power Operation](#)

[RAS-18UFHP-ES Hi Power Operation](#)

Toshiba RAS-18UFHP-ES



This manual is also suitable for:

[Ras-13skvp-ndRas-16skvp-ndRas-10savp-ndRas-13savp-ndRas-16savp-nd](#)

[Save PDF](#)