

Special Maintenance - Toshiba RAS-10SKVP-ND Owner's Manual

1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61

•

[Table of Contents](#)


-

Troubleshooting

•

Bookmarks

Available languages

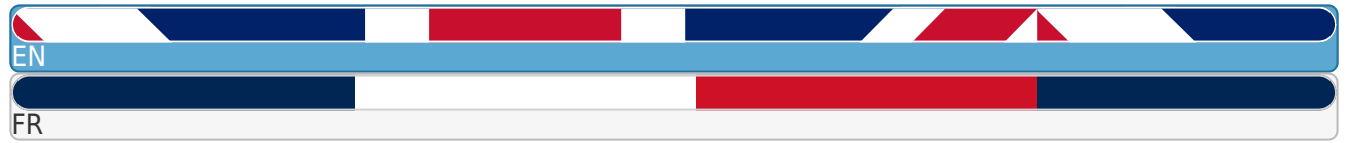



SPECIAL MAINTENANCE

Copyright © 2007 Samsung Electronics Co., Ltd. All rights reserved. Monday, January 10, 2007 3:54 PM

Cleaning the plasma pure filter

Preparation:

1. Turn off the air conditioner using the remote controller.
2. Turn off the power supply.

• Clean the plasma pure filter when the FILTER indicator (orange) turns on.
(This indicator turns on after PURE operation of about 1000 hours.)

- After cleaning is finished, push the RESET button on the indoor unit.
- Perform cleaning every six months or so.

• Even if the FILTER indicator does not turn on, clean the plasma pure filter whenever the unit makes a humming, clicking, or buzzing sound. If the indicator turns on during the night, the air conditioner can still be used until the morning without a problem, but be sure to perform cleaning as soon as possible.

1

Open the air inlet grille.

Lift up the air inlet grille.

- Clean the plasma pure filter when the FILTER indicator (orange) turns on.
(This indicator turns on after PURE operation of about 1000 hours.)
- After cleaning is finished, push the RESET button on the indoor unit.
- Perform cleaning every six months or so.

2

Grasp the left and right handles of the air filter and lift up slightly and then pull downward to remove the filter from the filter holder.

3

Take out the plasma pure filter.

- Grasp the handles, and then pull out as shown in a and b.

Checks after cleaning the plasma pure filter

1. Confirm the FILTER indicator does not turn on by activating PURE operation for one hour or more.

<If it does not turn on, it is normal>

2. If the FILTER indicator turns on, recheck the following.

- a) Fitting of the plasma pure filter.
- b) Fitting of the air inlet.

And, reconfirm the FILTER indicator does not turn on by activating PURE operation for another one hour or more.

<If it does not turn on, it is normal>

3. In case the FILTER indicator does turn on, please call a service representative.

EN

22

1

2

SPECIAL MAINTENANCE

Cleaning the plasma pure filter

Preparation:

1. Turn off the air conditioner using the remote controller.

2. Turn off the power supply.

• Clean the plasma pure filter when the FILTER indicator (orange) turns on.

(This indicator turns on after PURE operation of about 1000 hours.)

- After cleaning is finished, push the RESET button on the indoor unit.
- Perform cleaning every six months or so.
- Even if the FILTER indicator does not turn on, clean the plasma pure filter whenever the unit makes a sound. If the indicator turns on during the night, the air conditioner can still be used until the morning.

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
23
24
25
26
27
28
29
30

Quick Links:

[Remote Controller and Its Functions](#)

[Cooling/Heating Operation](#)

[Special Maintenance](#)

[Specifications](#)

Related Manuals for Toshiba RAS-10SKVP-ND

[Air Conditioner Toshiba RAS-16SKVP-ND Owner's Manual](#)

(230 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Installation Manual](#)

(132 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(120 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type air conditioner (119 pages)

[Air Conditioner Toshiba RAS-10SAVP-E Service Manual](#)

(119 pages)

[Air Conditioner Toshiba RAS-10SA-E Service Manual](#)

Split wall type (56 pages)

[Air Conditioner Toshiba RAS-10SAV-A Service Manual](#)

Split wall type (94 pages)

[Air Conditioner Toshiba RAS-10 SKV Series Owner's Manual](#)

(8 pages)

[Air Conditioner Toshiba RAS-10SKVP2 Series Owner's Manual](#)

Split type (3 pages)

[Air Conditioner Toshiba RAS-10SKVP2 Series Installation Manual](#)

(10 pages)

[Air Conditioner Toshiba RAS-13SKV-E Service Manual](#)

Indoor/outdoor unit, split type air conditioner (120 pages)

[Air Conditioner Toshiba RAS-13SKV2-E Service Manual](#)

Split type (111 pages)

[Air Conditioner Toshiba RAS-10SKH-E Service Manual](#)

Split wall type air conditioner (62 pages)

[Air Conditioner Toshiba RAS-16SKV Series Owner's Manual](#)

(52 pages)

[Air Conditioner Toshiba RAS-10SAV Series Installation Manual](#)

(12 pages)

[Air Conditioner Toshiba RAS-10SKP Series Owner's Manual](#)

(8 pages)

Related Content for Toshiba RAS-10SKVP-ND

[MMY-MUP0801HT8P-E Maintenance](#)

Toshiba MMY-MUP0801HT8P-E

[MMY-MAP0806FT8P-E Maintenance](#)

Toshiba MMY-MAP0806FT8P-E

[RAS-M10S4MUVG-E Maintenance](#)

Toshiba RAS-M10S4MUVG-E

[RAS-M05G3YVG-E Maintenance](#)

Toshiba RAS-M05G3YVG-E

[MMD-UP0051BHP-E Maintenance](#)

Toshiba MMD-UP0051BHP-E

[RAV-HM1101KRTP-E Maintenance](#)

Toshiba RAV-HM1101KRTP-E

[RAV-HM MUTP Series Maintenance](#)

Toshiba RAV-HM MUTP Series

[MMD-UP0181HP-E Maintenance](#)

Toshiba MMD-UP0181HP-E

This manual is also suitable for:

[Ras-13skvp-ndRas-16skvp-ndRas-10savp-ndRas-13savp-ndRas-16savp-nd](#)

[Save PDF](#)