

Accessories; Safety Precautions - Toshiba RAS-10SKVP-ND Owner's Manual

1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61

•

[Table of Contents](#)


-

Troubleshooting

•

Bookmarks

Available languages

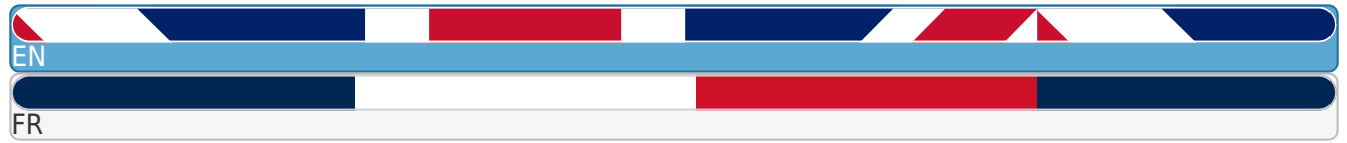



ACCESSORIES

Remote controller



SAFETY PRECAUTIONS

DANGER

- DO NOT ATTEMPT TO INSTALL THIS UNIT BY YOURSELF. THIS UNIT REQUIRES A QUALIFIED INSTALLER.
- DO NOT ATTEMPT TO REPAIR THE UNIT BY YOURSELF. THIS UNIT SHOULD BE PROFESSIONALLY REPAIRED.
- OPENING OR REMOVING THE COVER WILL EXPOSE YOU TO DANGEROUS VOLTAGES.
- TURNING OFF THE POWER SUPPLY WILL NOT PREVENT POTENTIAL ELECTRIC SHOCK.

WARNING

INSTALLATION WARNINGS

- Be sure to ask a dealer or a store specialized in electric work to install the air conditioner.

Remote controller



Remote controller holder



Bat

- If the air conditioner is improperly installed by yourself, it can cause some problems such as water leaks, electric shock, fire, and so on.
- Be sure to always ground the air conditioner.
- Do not connect the ground wire to gas pipes, water pipes, lightning rods or ground wires of telephones. If the air conditioner is improperly grounded, it can cause an electric shock.

CAUTION


TO DISCONNECT THE APPLIANCE FROM THE MAIN POWER SUPPLY

A switch or circuit breaker that can disconnect all poles must be included in the fixed wiring. Be sure to use an approved circuit breaker or switch.

ACCESSORIES

OPERATION WARNINGS

- Avoid cooling the room too strongly or exposing yourself to cool wind for a long time because it can be detrimental to your health.
- Never insert fingers or sticks into the air outlet and air inlet to avoid getting injured and damaging the machine because there are fans running at a high speed inside both the air inlet and air outlet.
- When you notice something unusual with the air conditioner (such as a burning smell or weak cooling power), immediately turn off the main switch and the circuit breaker from the main power supply to stop the air conditioner, and contact the dealer.
- If the air conditioner is operated continuously when something is wrong, it can cause machine failure, electric shock, fire, and so on.
- Do not spill water or other liquid on the indoor unit. If the unit is wet, it can cause an electric shock.

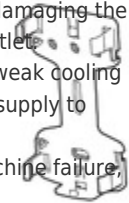

MOVEMENT AND REPAIR WARNINGS

SAFETY PRECAUTIONS

- Do not attempt to move or repair the unit by yourself.
- Do not disassemble the unit. As there is high voltage inside the unit, you may receive an electric shock.

DANGER

- Always ask the dealer to move the air conditioner for re-installing it in another place. If it is improperly installed, it can cause electric shock or fire.
- **DO NOT ATTEMPT TO INSTALL THIS UNIT BY YOURSELF. THIS UNIT REQUIRES A QUALIFIED INSTALLER.**
- Whenever the air conditioner needs repairs, request repairs from the dealer.
- **DO NOT ATTEMPT TO REPAIR THE UNIT BY YOURSELF. THIS UNIT SHOULD BE PROFESSIONALLY REPAIRED.**

1
Batteries (two)

- OPENING OR REMOVING THE COVER WILL EXPOSE YOU TO DANGEROUS VOLTAGES.
- TURNING OFF THE POWER SUPPLY WILL NOT PREVENT POTENTIAL ELECTRIC SHOCK.

EN

WARNING

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
2
3
4
5
6
7
8
9

Quick Links:

[Remote Controller and Its Functions](#)

[Cooling/Heating Operation](#)

[Special Maintenance](#)

[Specifications](#)

Related Manuals for Toshiba RAS-10SKVP-ND

[Air Conditioner Toshiba RAS-16SKVP-ND Owner's Manual](#)

(230 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Installation Manual](#)

(132 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(120 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type air conditioner (119 pages)

[Air Conditioner Toshiba RAS-10SAVP-E Service Manual](#)

(119 pages)

[Air Conditioner Toshiba RAS-10SA-E Service Manual](#)

Split wall type (56 pages)

[Air Conditioner Toshiba RAS-10SAV-A Service Manual](#)

Split wall type (94 pages)

[Air Conditioner Toshiba RAS-10 SKV Series Owner's Manual](#)

(8 pages)

[Air Conditioner Toshiba RAS-10SKVP2 Series Owner's Manual](#)

Split type (3 pages)

[Air Conditioner Toshiba RAS-10SKVP2 Series Installation Manual](#)

(10 pages)

[Air Conditioner Toshiba RAS-13SKV-E Service Manual](#)

Indoor/outdoor unit, split type air conditioner (120 pages)

[Air Conditioner Toshiba RAS-13SKV2-E Service Manual](#)

Split type (111 pages)

[Air Conditioner Toshiba RAS-10SKH-E Service Manual](#)

Split wall type air conditioner (62 pages)

[Air Conditioner Toshiba RAS-16SKV Series Owner's Manual](#)

(52 pages)

[Air Conditioner Toshiba RAS-10SAV Series Installation Manual](#)

(12 pages)

[Air Conditioner Toshiba RAS-10SKP Series Owner's Manual](#)

(8 pages)

Related Content for Toshiba RAS-10SKVP-ND

[RAS-2M10G3AVG-E Installation Parts, Accessories](#)

Toshiba RAS-2M10G3AVG-E

[RAV-GM301KRTP-A Accessories](#)

Toshiba RAV-GM301KRTP-A

[MMU-AP0074HPUL Accessories](#)

Toshiba MMU-AP0074HPUL

[RAV-SM122KRTP-UL Accessories](#)

Toshiba RAV-SM122KRTP-UL

[RAV-HM301KRTP-E Accessories](#)

Toshiba RAV-HM301KRTP-E

[TCB-SIR41U-E Accessories](#)

Toshiba TCB-SIR41U-E

[RACPD1212CRRC Accessories](#)

Toshiba RACPD1212CRRC

[RAV-RM301KRTP-NZ Accessories](#)

Toshiba RAV-RM301KRTP-NZ

This manual is also suitable for:

[Ras-13skvp-ndRas-16skvp-ndRas-10savp-ndRas-13savp-ndRas-16savp-nd](#)

[Save PDF](#)