

TOSHIBA

Toshiba DP 80F Instruction Manual

Toshiba fax machine instruction manual

1
2
3
4
5
6
7
8
9
10
11

--

•

[Table of Contents](#)

•

Bookmarks

--

Quick Links

[1 Possible Problems](#)

[Download this manual](#)

See also: [Instruction Manual](#)



1

DP 80F / 85F

Instruction manual

Dear Reader.

Thank you for your interest in a Toshiba Fax machine!

To allow you to get your fax machine up and running as soon as possible, this manual only covers the most important

criteria.

Complete operating instructions can be found on the CD-ROM included with the accessories.

All items documented on the CD are highlighted in grey both in the table of contents.

Please refer to the corresponding references on the CD for further information

(IBM

-compatible format).

®

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba DP 80F

[Fax Machine Toshiba DP80F Operator's Manual](#)

Plain paper facsimile (277 pages)

[Fax Machine Toshiba DP 80F Instruction Manual](#)

(133 pages)

[Fax Machine Toshiba DP125F Operator's Manual](#)

Plain paper facsimile (295 pages)

[Fax Machine Toshiba DP120F Service Manual](#)

Plain paper facsimile (706 pages)

[Fax Machine Toshiba DP 120F Instruction Manual](#)

(154 pages)

[Fax Machine Toshiba e-STUDIO170F Owner's Manual](#)

Toshiba e-studio170f multifunction fax owner's manual (242 pages)

[Fax Machine Toshiba GD-1150 Service Manual](#)

(90 pages)

[Fax Machine Toshiba TF 251 Instruction Manual](#)

(80 pages)

[Fax Machine Toshiba TF 211 Instruction Manual](#)

(73 pages)

[Fax Machine Toshiba GD-1370 Service Manual](#)

Fax board (72 pages)

[Fax Machine Toshiba e-STUDIO 191F Operating Instructions Manual](#)

Plain paper facsimile (62 pages)

[Fax Machine Toshiba ESTUDIO170F Operation Manual](#)

Plain paper facsimile (244 pages)

[Fax Machine Toshiba GD-1210 Service Manual](#)

Toshiba facsimile service manual (94 pages)

[Fax Machine Toshiba e-studio 191F Operating Instructions Manual](#)

Plain paper facsimile (200 pages)

[Fax Machine Toshiba e-studio 190F Quick Manual](#)

Internet facsimile/email and network scan functions (16 pages)

[Fax Machine Toshiba TF 631 User Manual](#)

Toshiba tf 631 fax machine user manual (120 pages)

Summary of Contents for Toshiba DP 80F

[Page 1](#) DP 80F / 85F Instruction manual Dear Reader. Thank you for your interest in a Toshiba Fax machine! To allow you to get your fax machine up and running as soon as possible, this manual only covers the most important criteria.

[Page 2](#) CONTENTS PREPARATION Transmission options, ECM on/off ... Transmission options, number of pages ..Unpacking Transmission options, protected transmission .

[Page 3: Advanced Settings](#)

ADVANCED SETTINGS Delayed fax jobSet transmission header position Reception trailer

(RTI) .

[Page 4](#) Control panel Document tray extension Recording paper cassette Document guides Document tray Exit document extension tray Exit document extension tray Single-sheet feed Exit document tray Recording paper tray 789 10 12 13 15 14 16...

[Page 5](#) 1 DISPLAY 12 ENTER KEYS 21 SPEED DIAL Displays indications about the Activates selected menu items Press this key to select a stored operating modes of your fax and also used for terminating alphabet dial number, a name or machine. Your control monitor data input.

[Page 6](#) PREPARATION Unpacking When unpacking your machine, please check that all parts shown here are present and in perfect condition. 7. Drum unit The correct location 1. Fax machine for your fax machine is easily found: near • a 230 V AC socket*, •...

[Page 7: Remove Transport Fittings](#)

Remove transport fittings: Before you start to use your fax machine, please remove all transport fittings. Preparing and installing printer components In order to prevent any transport damage, the high-quality printer unit of your new fax machine is supplied with the additional protection of special packaging.

[Page 8: Change Toner](#)

• If toner gets in your mouth, wash it out with plenty of water. • In an emergency, call a doctor. Consumables are taken back and recycled by your TOSHIBA dealer.

[Page 9: Replace Drum Unit](#)

Consumables are taken toner) back and recycled by your TOSHIBA dealer. Connecting your fax machine Connect your fax machine (LINE jack) to the telephone socket, as shown on the right. Liability in case of wrong connection by the user is excluded.

[Page 10: Mounting Accessories](#)

Mounting accessories Insert the recording paper cassette Adjust the document guides Insert the retaining pins of the into the corresponding guides until according to the dimensions of the recording paper tray into the it locks into place. paper. corresponding holes. If required, pull out the recording paper tray extension.

[Page 11](#) Using the single-sheet feed The single-sheet feed is used for the separate printing of single media, such as: • Copies • Letterhead pages • Envelopes • Films • Single pages (max. 120 g) The single-sheet feed can also be used to copy (see page 28), to print via the PC and for the TX report function (see page...