



Whirlpool AKT 325 Operation

1
2

| |
|--|
| |
|--|

•

Bookmarks

| |
|--|
| |
|--|

[Download this manual](#)

Quick Links



- To use the barbecue turn the knob clockwise and position at the required power setting.

- To switch off the hob return the knob to the position "0".

- The hob is provided with 1 indicator lamp showing when the barbecue is switched ON.

DIMENSIONS OF BARBECUE HOB AND WORKTOP (mm)

Type PLBTD

230 V ~ 50Hz

5019 319 01349

BARBECUE OPERATION

Grill

1. Tiltable electric heating element
2. Tray with lava stone
3. Heating element control knob
4. Heating element On indicator light
- 5.

Make sure that the voltage indicated on the rating plate corresponds to the mains voltage. The technical data stated on the rating plate underneath the hob are also provided below:

ELECTRICAL CONNECTION

Supply voltage

Conductors: number and size

230 ~ +

H05 RR-F 3 x 1.5 mm

2.4 kW

To get full satisfaction from the hob, please read these instructions carefully and keep them for future consultation.

FR

ES

PT

IT

PROTECTING THE ENVIRONMENT

Disposal of packaging

- The packaging material is entirely recyclable, and is marked with the recycling symbol

- Do not dispose of the various packaging materials carelessly, but do so responsibly and in full compliance with local authority regulations governing waste disposal.

Disposal of old household appliances

- This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health.

The symbol

on the product, or on the documents

accompanying the product, indicates that the appliance may

not be treated as household waste. It should be

handed over to the applicable collection point for the

recycling of electrical and electronic equipment in

accordance with local standards and regulations.

For further information on the correct recovery and

recycling of this product, contact the relevant local

authority, household waste collection point or the outlet

at which the product was purchased.

BARBECUE FEATURES

- This appliance grills meat and fish without fat on oil.

 
 
 
- Under the heating element there is a tray with lava stone, which guarantees a constant temperature of about 250°C and absorbs the fat drops.

- All the parts, grill, tray and stones, can be easily removed for cleaning.

USING THE BARBECUE FOR THE FIRST TIME

- Remove the adhesive film which protects some parts.

- Carefully remove all the glue residues without using

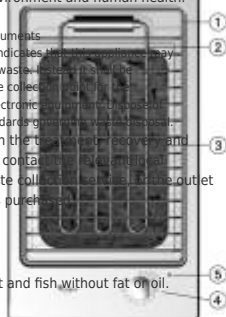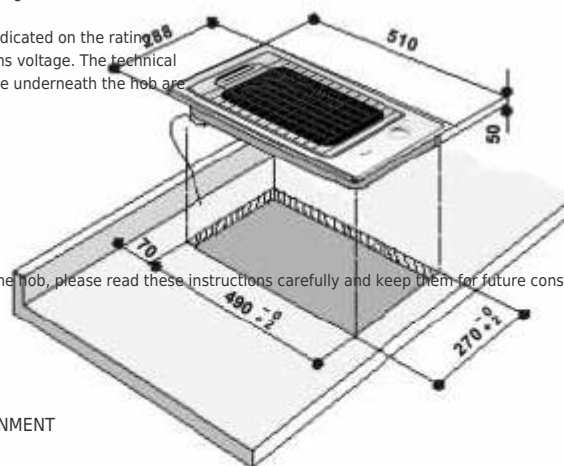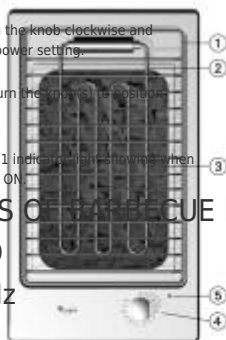

abrasive substances, to avoid scratching the surfaces.

- Wash and dry the grill carefully (better if in the dishwasher).

Raise the heating element (A) until touching the stop (B) Fig. 4. Insert the tray and correctly position it, then evenly distribute the lava rock on the heating element and put the grill on top.

- Lower the heating element and adjust the grill to top.

Switch the barbecue on by turning the energy regulator knob to the maximum position. Wait for 5 to 15 minutes to remove the fatty residue.

USING THE BARBECUE

Before cooking, check that the removable parts are in their correct position (tray with well distributed lava stone, heating element completely lowered, grill in position).

- Switch on the barbecue by turning the knob to position 12.

The indicator light shows that the barbecue is On.

Preheat for about 5 minutes until the lava stone becomes hot.

Turn the knob to the desired position. The numbers from 1 to 12 indicate the operating positions. Temperature increases with the number.

Place the food on the grill and check the cooking process.

- To switch the barbecue Off, turn the knob to "0".

SE

NO

DK

FI

SK

HU

RU

Warnings

This barbecue is designed solely for use as a domestic appliance for cooking food. No other type of use is allowed. The Manufacturer declines all responsibility for inappropriate use.

- Avoid exposing the appliance to atmospheric agents.

Any repairs or maintenance work on the appliance must be carried out exclusively by a qualified technician.

Never touch the appliance with any wet part of the body and do not operate it with bare feet.

During use, accessible parts may become very hot. To avoid the risk of burns, keep children away from the appliance.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given initial supervision or instruction concerning use of the appliance by a person responsible for their safety.

Do not allow children or infants to play with the barbecue without supervision.

- Make sure children do not play with the appliance.

Make sure that the electrical wiring with electrical appliances near the barbecue is not overloaded.

Always keep an eye on food while cooking. Grease and fat can overheat and catch fire!

 
 
 
Do not place plastic, aluminium foil, cloths, paper or other flammable materials on the cooking surface while it is still hot.

TIPS FOR GRILLING

- Preheat for 5 minutes until the lava stone becomes hot.

The hotter the lava stone, the quicker and more uniform is cooking.

- Do not pour water onto the hot or working barbecue.

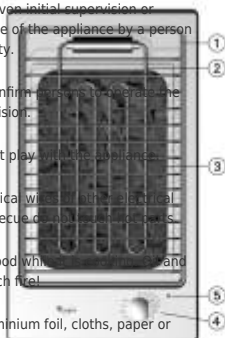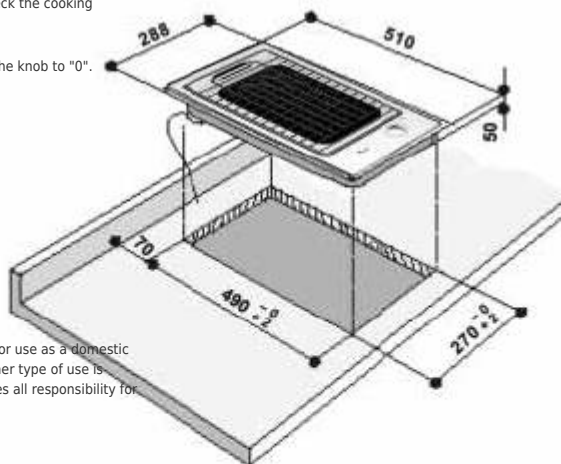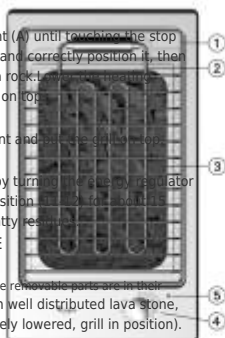

ManualsLib.com

ManualsLib.com

After grilling is finished, leave the barbecue switched on for a few minutes to allow fat to be absorbed and burnt by the lava stone.



TABLE FOR GRILLING

Times given are indicative and refer to the barbecue preheated to maximum.

TABLE OF COOKING TIMES

- Foods
- Beef fillet
- Steaks
- Hamburgers
- Sausages
- Liver
- Lamb chop
- Chicken steak
- Chicken thigh
- Salmon steak
- Trout

Trout baked in greaseproof paper

Note. As you get experienced with the use of the barbecue, you will be able to determine the best cooking time for each food.

CARE AND MAINTENANCE

Before cleaning the BARBECUE disconnect it from the mains power supply and wait until it has cooled down

Clean the outside with a cloth dampened with liquid detergent. To make cleaning operations easier, remove the grill and lava stone tray.

Stainless steel surfaces can be cleaned with special

 
BG

RO


Energy regulator

Time position (min.)

- 12
- 8
- 12
- 12
- 14
- 12
- 13
- 12
- 5
- 12
- 8
- 12
- 9
- 11 - 10
- 17
- 11 - 10
- 10
- 11 - 10
- 12
- 11
- 30

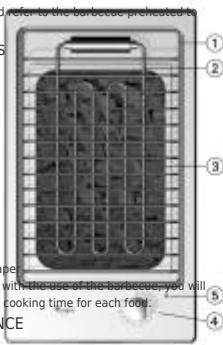

ManualsLib.com

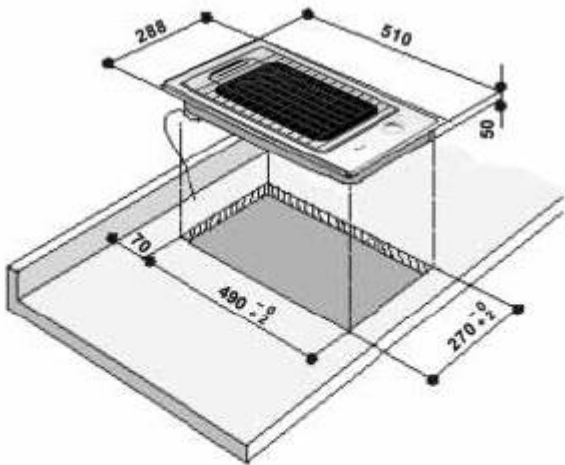 

[Next Page](#)

1
2

Related Manuals for Whirlpool AKT 325

[Grill Whirlpool ADN 630 Instructions For Installation, Use And Maintenance Manual](#)

Barbecues lava stone (13 pages)

[Grill Whirlpool W11176204A Use & Care Manual](#)

Beverage center (32 pages)

Summary of Contents for Whirlpool AKT 325

[Page 1](#) AKT 325 BARBECUE OPERATION PROTECTING THE ENVIRONMENT Warnings • This barbecue is designed solely for use as a domestic Disposal of packaging Grill appliance for cooking food. No other type of use is • The packaging material is entirely recyclable, and is allowed.

[Page 2](#) • The lava stone tray and the grill can be washed in the There are unpleasant smells: Connection to the electrical mains Declaration of conformity sink but they are better washed in the dishwasher. - Check whether there are residues of cooking fat on Note: the yellow/green earthing wire (B) must be connected to •...