

Remote Controller And Its Functions; Operation Of Remote Controller - Toshiba RAS-18N3KV-E Service Manual

Split type

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108

•

[Table of Contents](#)

•

Bookmarks



9-4. Remote control

9-4-1. Remote Controller and Its Functions

Infrared signal emitter

1

Start/Stop button

2

Mode select button (MODE)

3


Temperature button (TEMP)

4

Fan speed button (FAN)

5

Swing louver button (SWING)

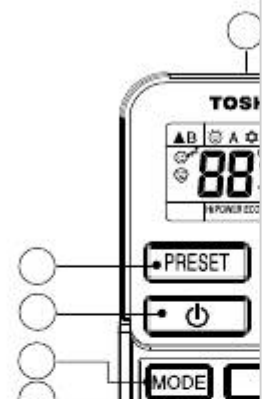

6

Set louver button (FIX)

7

On timer button (ON)

8

Off timer button (OFF)

9

10 ○

Setup button (SET)

11 ○

Clear button (CLR)

12 ○

Memory and Preset button (PRESET)

13 ○

One-Touch button (ONE-TOUCH)

14 ○

High power button (Hi-POWER)

15 ○

Economy button (ECO)

16 ○

Quiet button (QUIET)

17 ○

Comfort sleep button (COMFORT SLEEP)

18 ○

Filter reset button (FILTER)

19 ○

Set clock button (CLOCK)

20 ○

Check button (CHECK)

21 ○

Reset button (RESET)

Note:

• The provided Remote Controller is a wireless type, which also can be used as a wire.

Please see "How to Connect The Remote Controller for Wired Operation", located in installation instruction,

in case of wired control is required.

• In wire operation, remote controller will return to initial condition (PRESET, TIMER and CLOCK will return

to initial condition) when user shutdown power supply of Air conditioner.


9-4-2. Operation of remote control

1. ONE-TOUCH

Press the "ONE-TOUCH" button for fully automated operation that is customised to the typical consumer

preferences in your region of the world. The customised settings control temperature air flow strength, air flow

direction and other settings to provide you alternate contact with "ONE-TOUCH" OF THE BUTTON. If you

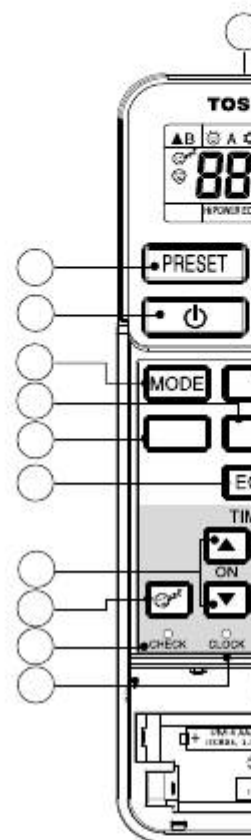

prefer other settings you can select from the many other operation functions of your Toshiba unit

Press

: Start the operaton.

2. AUTOMATIC OPERATION

To automatically select cooling, or fan only operation.

1. Press 


: Select A.

2. Press 

: Set the desired temperature.

3. COOLING / HEATING / FAN ONLY OPERATION

To automatically select cooling, or fan only operation.

 
1. Press 

: Select Cool

2. Press 

: Set the desired temperature.

Cooling / Heating : Min 17°C - Max 30°C, Fan Only: No temperature indication

3. Press 


: Select AUTO, LOW , LOW+






























































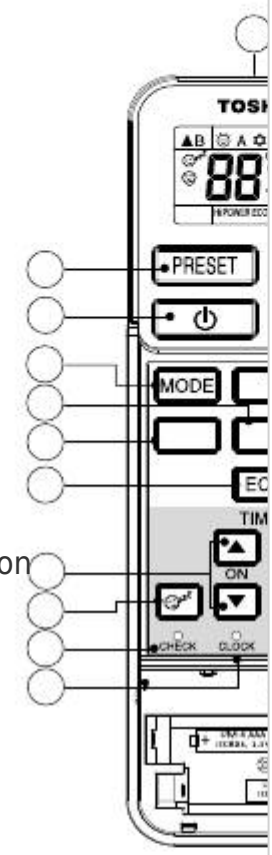

ManualsLib.com

FILE NO. SVM-12071



5
FAN
16
QUIET
14
HI POWER
11
9
10
21
18

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
42
43
44
45
46
47
48
49

Quick Links:

[Service Manual](#)

[Specifications](#)

[How to Diagnose the Trouble](#)

Chapters

[Service Manual 2](#)

[Auto Restart Function 26](#)

Related Manuals for Toshiba RAS-18N3KV-E

[Air Conditioner Toshiba RAS-18N3KVR-E Service Manual](#)

Split type (110 pages)

[Air Conditioner Toshiba RAS-18NKHP-E Service Manual](#)

Split wall type air conditioner (74 pages)

[Air Conditioner Toshiba RAS-18NKHD-E5 Service Manual](#)

Split wall type (78 pages)

[Air Conditioner Toshiba RAS-24NKHD-E5 Service Manual](#)

Split wall type (74 pages)

[Air Conditioner Toshiba RAS-24NKHP-E Service Manual](#)

(73 pages)

[Air Conditioner Toshiba RAS-18N3KV2-E Service Manual](#)

Air conditioner split type (108 pages)

[Air Conditioner Toshiba RAS-18N3KV2-E1 Installation Manual](#)

(276 pages)

[Air Conditioner Toshiba RAS-18N3KV2-E1 Owner's Manual](#)

(5 pages)

[Air Conditioner Toshiba RAS-18N3KV2 Series Owner's Manual](#)

(103 pages)

[Air Conditioner Toshiba RAS-18N3KV2 Series Installation Manual](#)

Indoor/outdoor unit (67 pages)

[Air Conditioner Toshiba RAS-18N3KV2 Series Installation Manual](#)

(23 pages)

[Air Conditioner Toshiba RAS-18 NKHP Series Owner's Manual](#)

(2 pages)

[Air Conditioner Toshiba RAS-24NKHD-E4 Service Manual](#)

Split wall type (92 pages)

[Air Conditioner Toshiba RAS-10N3KV2-A1 Owner's Manual](#)

(8 pages)

[Air Conditioner Toshiba RAS-24N3K-M Owner's Manual](#)

(12 pages)

[Air Conditioner Toshiba RAS-10 NAH Series Owner's Manual](#)

(5 pages)

Related Content for Toshiba RAS-18N3KV-E

[RAS-16SKVP-ND Remote Controller And Its Functions](#)

Toshiba RAS-16SKVP-ND

[RAS-24N3KV2-A Remote Controller And Its Functions](#)

Toshiba RAS-24N3KV2-A

[RAS-18, 22SKV-E Remote Controller And Its Functions](#)

Toshiba RAS-18, 22SKV-E

[RAV-SM562XT-E Remote Controller And Its Functions](#)

Toshiba RAV-SM562XT-E

[RAS-18SAV2-E1 Remote Controller And Its Functions](#)

Toshiba RAS-18SAV2-E1

[RAV-SM562KRT-E Wireless Remote Controller And Its Functions](#)

Toshiba RAV-SM562KRT-E

[RAS-M24N3KV2-E Remote Controller And Its Functions](#)

Toshiba RAS-M24N3KV2-E

[RAS-M10PKVP-E Remote Controller And Its Functions](#)

Toshiba RAS-M10PKVP-E

This manual is also suitable for:

[Ras-18n3av-eRas-22n3kv-eRas-22n3av-e](#)