

I Memory Back-Up Switch; I Checking The Central Control Addresses And Operating The Units That Are Controlled By The Schedule Timer; I Explanation To Customers - Sanyo SPW-CR365GXH56 Technical Data Manual

Mini eco-i system

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118

119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167
168

169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217
218


219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246
247
248
249
250
251
252
253
254
255
256
257
258
259
260
261
262
263
264
265
266
267
268

269
270
271
272
273
274
275
276
277
278
279
280
281
282
283
284
285
286
287
288
289
290
291
292
293
294
295
296
297
298
299
300
301
302
303
304
305
306
307
308
309
310
311
312
313
314
315
316
317
318

319
320
321
322
323
324
325
326
327
328
329
330
331
332
333
334
335
336
337
338
339
340
341
342
343
344
345

Table Of Contents

 346



•

[Table of Contents](#)

-



Troubleshooting

•


Bookmarks




5. Schedule Timer

(4) To continue registering addresses, repeat step (3). (Central control address numbers will be added to the right side of the LCD display.) To cancel a registered central control address, use the  select the timer group, then use the  button.

(5)

Repeat steps (3) - (4) for each timer group. When registration is completed, press the timer  ton.

The schedule timer restarts automatically and performs initial communications. (SCAN blinks in the display.) 

The normal display appears after several minutes, and the manually assigned timer group settings are confirmed.

I Memory Back-Up Switch

After installation is completed, check that the backup switch on the reverse side of the schedule timer PCB is turned to ON.
(The backup battery will retain the current time for up to 100 hours.)

I Checking the Central Control Addresses and Operating the Units that are Controlled by the Schedule Timer

GROU

The schedule timer communicates with the indoor units to check which central control addresses can be controlled

with the current timer control. The schedule timer can then be used to start and stop these units.

(1) Press and hold the schedule timer

"Ad-(central control address)" appears in sequence, blinking.

(2) Use the GROUP button in the

this way, it is possible to check which central control addresses in the displayed timer group can be operated by the timer.

(3) With the selected timer group displayed, press the timer

indoor units in the displayed timer group start or stop. Pressing the


(operation start/stop, operation mode, temperature setting items) at the indoor units in the displayed timer group

where remote controller prohibit is in effect.

(4) After checking the addresses and operating the units, press and hold the

longer. The schedule timer display returns to the normal display and all controllable indoor units stop.

I Explanation to Customers

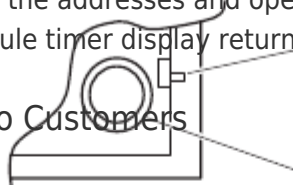

After work is completed, present the Operation Manual and Information for the Person in Charge of Installation

(Electrical) Work to the customer.

Explain to the customer the methods for use of the system, as described in the Operation Manual.

button in the

Backup switch

OFF

ON

Backup battery

area to display the blinking central control addresses in sequential order. In

area to select the central control address and press the button,

button, and CLEAR button for 4 seconds or longer.

button. Each time the button is pressed the

3 - 84

 
Control of Mini ECO-i SYSTEM

button in the

button in this mode permits all items

button for 2 seconds or

area to



[Previous Page](#)
[Next Page](#)

1

...

129

130

131

132

Quick Links:

[Technical Data](#)

[Outdoor Units](#)

Troubleshooting

[I Troubleshooting 124](#)

[I Troubleshooting 136](#)

Related Manuals for Sanyo SPW-CR365GXH56

[Air Conditioner Sanyo Mini ECO-i SPW-ASR74GXH56\(A/B\) Installation Instructions Manual](#)

System air conditioner (49 pages)

[Air Conditioner Sanyo MINI ECO-i SPW-CR365GXH56B Service Manual](#)

(252 pages)

[Air Conditioner Sanyo SPW-X253G56 Service Manual](#)

Split system (72 pages)

[Air Conditioner Sanyo 2-WAY ECO-i SPW-C0705DXHN8 Service Manual](#)

Multi system (143 pages)

[Air Conditioner Sanyo SPW-C1155DXHN8 Technical Data & Service Manual](#)

2-way eco-i multi system (242 pages)

[Air Conditioner Sanyo SPW-X253GH56 Service Manual](#)

Split system (105 pages)

[Air Conditioner Sanyo SPW-U253GH56 Service Manual](#)

Split system air conditioner (108 pages)

[Air Conditioner Sanyo SPW-D253GH56 Service Manual](#)

Split system (108 pages)

[Air Conditioner Sanyo SPW-C0705DZH8 Technical Data Manual](#)

3-way eco-i multi system 5 series (703 pages)

[Air Conditioner Sanyo SPW-C483GYH8 Service Manual](#)

Eco multi system (235 pages)

[Air Conditioner Sanyo SPW-C256VH Technical Data & Service Manual](#)

4-way air discharge semi-concealed wall-mounted ceiling-mounted concealed-duct (517 pages)

[Air Conditioner Sanyo SPW-CR1503GDYH8 Technical Data & Service Manual](#)

W-eco multi system series (377 pages)

[Air Conditioner Sanyo SPW-FTR124EH56 Installation And Operation Manual](#)

Dc inverter air conditioner for refrigerant r410a (32 pages)

[Air Conditioner Sanyo Big PACi 18 Series Technical Data & Service Manual](#)

Big pack i dc inverter (275 pages)

[Air Conditioner Sanyo SPW-CR363GVH8 Service Manual](#)

(262 pages)

[Air Conditioner Sanyo SPW-XR253GH56 Technical Data & Service Manual](#)

(223 pages)

Related Content for Sanyo SPW-CR365GXH56

[Mini ECO-i CHXR03652 Contents Of Remote Controller Switch Alarm Display](#)

Sanyo Mini ECO-i CHXR03652

[C2432A Switch Positions For 2 Units Or 2 Groups Of Units](#)

Sanyo C2432A

[ECO-i AHX0752 Address Switch Setting](#)

Sanyo ECO-i AHX0752

[2-WAY ECO-i SPW-C0705DXHN8 Contents Of Remote Controller Switch Alarm Display](#)

Sanyo 2-WAY ECO-i SPW-C0705DXHN8

[SAP-KM97GHS5A Check "Operation Selector" Switch In The Indoor Unit](#)

Sanyo SAP-KM97GHS5A

[W MULTI SGP-EW120M2G2W Outdoor Main Board Switch And Led Arrangement Diagram](#)

Sanyo W MULTI SGP-EW120M2G2W

[KMS0772 Address Switch](#)

Sanyo KMS0772

[SPW-C0705DZH8 Memory Backup Switch](#)

Sanyo SPW-C0705DZH8

This manual is also suitable for:

[Spw-cr485gxh56Spw-cr605gx56Spw-cr605gxh56Spw-cr365gxh8Spw-cr485g xh8Spw-cr605gxh8 ... Show all](#)

[Save PDF](#)