

 


# Asus WL-300 Quick Start Manual

Spacelink access point



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
Table Of Contents  
13



•

[Table of Contents](#)

•

## Bookmarks

## Quick Links

[Download this manual](#) See also: [User Manual](#)





ASUS SpaceLink Access Point  
WL-300  
Quick Start Guide

## Table of Contents

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Asus WL-300

### [Wireless Access Point Asus SpaceLink WL-300 User Manual](#)

Spacelink (53 pages)

### [Wireless Access Point Asus 54Mbps Pocket Wireless Access Point WL-330g User Manual](#)

54mbps pocket wireless access point (wl-330g) user guide (70 pages)

### [Wireless Access Point Asus WL-330G User Manual](#)

54mbps pocket wireless access point (60 pages)

### [Wireless Access Point Asus WL-330GE - Wireless Access Point User Manual](#)

Enhanced 802.11g pocket wireless access point (72 pages)

### [Wireless Access Point Asus WL-330gE Manual](#)

Wi-fi video surveillance system (2 pages)

### [Wireless Access Point Asus WL-330gE Manual](#)

Enhanced 802.11g portable wireless access point (229 pages)

### [Wireless Access Point Asus WL-330 Quick Start Manual](#)

Asustek pocket wireless access point quick start guide (17 pages)

### [Wireless Access Point Asus WL-330 Quick Setup Manual](#)

Unlimited wireless access point (14 pages)

### [Wireless Access Point Asus WL-HDD2.5 User Manual](#)

Asustek computer inc. user's manual wl-hdd2.5 (91 pages)

### [Wireless Access Point Asus WL 320gE - Wireless Access Point User Manual](#)

802.11g access point (71 pages)

### [Wireless Access Point Asus WL-320gE Quick Start Manual](#)

(361 pages)

### [Wireless Access Point Asus WL-320gE Quick Start Manual](#)

(172 pages)

### [Wireless Access Point Asus WL-320gE Quick Start Manual](#)

(20 pages)

### [Wireless Access Point Asus WL-300g User Manual](#)

Spacelink 802.11g access point (64 pages)

### [Wireless Access Point Asus WL-320gP Quick Start Manual](#)

(361 pages)

### [Wireless Access Point Asus WL-320gP Quick Start Manual](#)

(172 pages)

## Summary of Contents for Asus WL-300

[Page 1](#) ASUS SpaceLink Access Point WL-300 Quick Start Guide...

### [Page 2: Copyright Information](#)

Product warranty or service will not be extended if: (1) the product is repaired, modified or altered, unless such repair, modification or alteration is authorized in writing by ASUS; or (2) the

serial number of the product is defaced or missing.

[Page 3](#) Desktop/Server (Tel): +886-2-2890-7123 (English) Support Fax: +886-2-2890-7698 Support Email: tsd@asus.com.tw Web Site: www.asus.com.tw Newsgroup: cscnews.asus.com.tw ASUS COMPUTER INTERNATIONAL (America) Address: 6737 Mowry Avenue, Mowry Business Center, Building 2, Newark, CA 94560, USA General Fax: +1-510-608-4555 General Email: tmd1@asus.com Technical Support...

### [Page 4: System Requirements](#)

Chapter 1 - Introduction 1. Introduction Thank you for choosing the ASUS SpaceLink Access Point, a member of ASUS' SpaceLink wireless infrastructure family. The ASUS SpaceLink Access Point complies with the IEEE 802.11b wireless standard to provide wireless mobile clients with network connectivity at data rates of up to 11 Mbps.

### [Page 5: Access Point Led Indicators](#)

Chapter 1 - Introduction Access Point LED Indicators There are three LEDs on the front of the ASUS SpaceLink Access Point, as shown here. Power (Amber) Air (Green) Link (Green) Power LED The Power LED is the top LED and turns amber when the power adapter is connected and the power switch is turned ON.

### [Page 6: Installation Procedure](#)

Access Point and includes a description of the LEDs found on the unit. Installation Procedure Follow these steps to install the ASUS SpaceLink Access Point. 1. Determine the best location for the ASUS SpaceLink Access Point. Keep in mind the following considerations: •...

### [Page 7: Wall Mounting Option](#)

Access Point has a physical Ethernet network connection. Wall Mounting Option Out of the box, the ASUS SpaceLink Access Point is designed to sit on a raised flat surface like a file cabinet or book shelf. The unit may also be converted for mounting to a wall or ceiling.

[Page 8](#) Chapter 2 - Installation Step 1 Before: After: Step 2 Before: After: Note: Mounting brackets are provided for you to hang the Access Point on an office partition or office ceiling. ASUS SpaceLink Access Point...

### [Page 9: Installing The Access Point Manager](#)

ASUS SpaceLink Access Points. Installing the Access Point Manager Follow these steps to install the ASUS Access Point Manager in Windows: 1. Insert the support CD and click on 2. Click Next after reading the Wel- Install ASUS WLAN AP Utilities.

[Page 10](#) Installing the Access Point Manager (Cont.) 5. Click Next after reading the set- 6. When setup is complete, click Fin- tings. ish to exit the setup wizard. 7. Launch ASUS AP Manager through "Start | Programs". ASUS SpaceLink Access Point...

### [Page 11: Connecting To Spacelink Access Points](#)

The ASUS Access Point Manager can connect to any ASUS SpaceLink Access Point using its IP address even across gateways. The gateway settings of the ASUS SpaceLink Access Point and your computer must be set correctly according to the network environment.

[Page 12](#) The password is required to make setting changes. Note: If you cannot find any ASUS SpaceLink Access Points due to a problem in the IP settings, push and hold the "Reset to Defaults" over five seconds to restore factory default settings.