

Evacuation - Sanyo 26 series Installation Instructions Manual

Split system heat pump air conditioner

1

2

3

4

5

Table Of Contents

6

7

8

9

10

11

12

13

14

 
15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110




•

[Table of Contents](#)

•

Bookmarks

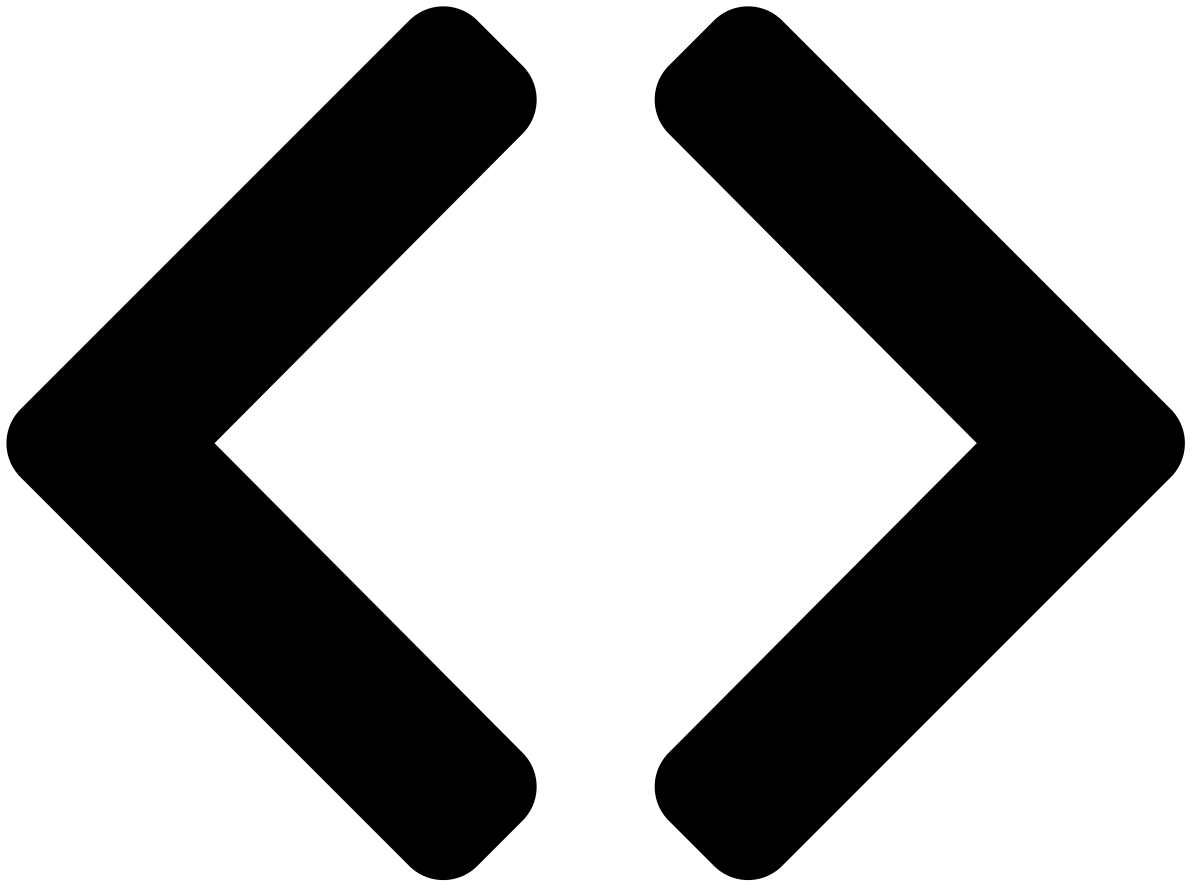

Enlarged version

(3) Pressurize the system up to 4.15 MPa

2

(42 kgf/cm

G) with dry nitrogen gas and close the cylinder valve when the gauge reading reaches

2


4.15 MPa (42 kgf/cm

G). Then, test for leaks with liquid soap.

To avoid nitrogen entering the

CAUTION

refrigerant system in a liquid state, the top of the cylinder must be higher than the bottom when you pressurize the system. Usually, the cylinder is used in a vertical standing

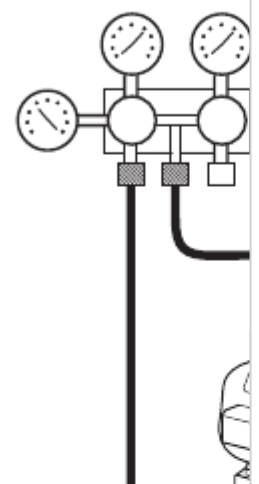

position.

(4) Do a leak test of all joints of the tubing (both indoor and outdoor) and both gas and liquid service valves. Bubbles indicate a leak. Wipe off the soap with a clean cloth after the leak test.
(5) After the system is found to be free of leaks, relieve the nitrogen pressure by loosening the charge hose connector at the nitrogen cylinder. When the system pressure is reduced to normal, disconnect the hose from the cylinder.



10-2. Evacuation

Be sure to use a vacuum pump that includes a function for prevention of back-flow, in order to prevent back-flow of pump oil into the unit tubing when the pump is stopped.

G
Perform vacuuming of the indoor unit and tubing. Connect the vacuum pump to the gas tube valve and apply vacuum at a pressure of -755 mmHg (5 Torr) or below.

Continue vacuum application for a minimum of 1 hour after the pressure reaches -755 mmHg.)

(1) Attach the charge hose end described in the preceding steps to the vacuum pump to evacuate the tubing and indoor unit. Confirm that the "Lo" knob of the manifold valve is open. Then, run the vacuum pump.

(2) When the desired vacuum is reached, close the "Lo" knob of the manifold valve and turn off the vacuum pump. Confirm that the gauge pressure is under 667 Pa (-755 mmHg, 5 Torr) after 4 to 5 minutes of vacuum pump operation.

Use a cylinder specifically

CAUTION

designed for use with R410A.

Manifold valve

Pressure

Lo

gauge

Gas

tube

Liquid

tube

101

Hi

Vacuum pump

Open

Close

Outdoor unit

Close

Fig. 10-4

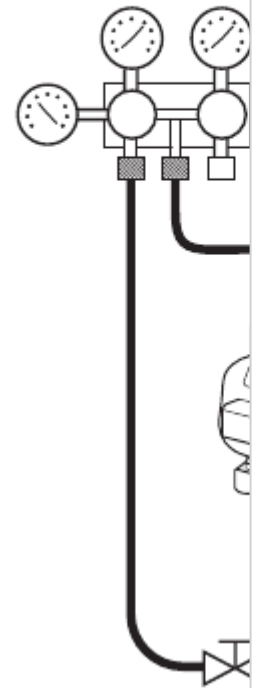


Table of Contents

[Previous Page](#)
[Next Page](#)

1
...
100
101
102
103

Quick Links:

[Indoor Unit](#)

[Outdoor Unit](#)

[Trouble Diagnostics](#)

Related Manuals for Sanyo 26 series

[Air Conditioner Sanyo Big PACi 18 Series Technical Data & Service Manual](#)

Big pack i dc inverter (275 pages)

[Air Conditioner Sanyo C4272R Service Manual](#)

Sanyo split system air conditioner service manual (181 pages)

[Air Conditioner Sanyo C4272R S/C Installation Instructions Manual](#)

Sanyo split system heat pump air conditioner installation instructions (111 pages)

[Air Conditioner Sanyo C3072R Parts List](#)

Outdoor unit (4 pages)

[Air Conditioner Sanyo CH3672R Parts List](#)

Outdoor unit (4 pages)

[Air Conditioner Sanyo 000-31 Specifications](#)

Concealed duct air conditioner & heat pump 24,000-31,200 btu/h 13.9-14.9 seer
(2 pages)

[Air Conditioner Sanyo 26KS72R Specifications](#)

Wall mounted air conditioner (2 pages)

[Heat Pump Sanyo 26THW72R Specifications](#)

Ceiling suspended heat pump (2 pages)

[Air Conditioner Sanyo 26UW72R Specifications](#)

Concealed duct air conditioner (2 pages)

[Air Conditioner Sanyo 26KHS72R Submittal Data](#)

Wall mounted heat pump (2 pages)

[Air Conditioner Sanyo 36UW72R Specifications](#)

Concealed duct air conditioner (2 pages)

[Air Conditioner Sanyo KHHS2672R Specifications](#)

Wall mounted heat pump with heater (2 pages)

[Air Conditioner Sanyo KHS3072R Specifications](#)

Wall mounted air conditioner (2 pages)

[Air Conditioner Sanyo KHS3672R Datasheet](#)

Wall mounted air conditioner (2 pages)

[Air Conditioner Sanyo THW3672R Specifications](#)

Ceiling suspended air conditioner (2 pages)

[Air Conditioner Sanyo XHW2672R Specifications](#)

Ceiling recessed air conditioner (2 pages)

Related Content for Sanyo 26 series

[C4272R S/C Leak Test, Evacuation And Additional Refrigerant Charge](#)

Sanyo C4272R S/C

This manual is also suitable for:

[30 series](#) [36 series](#) [Split system heat pump air conditione](#) [Ch2672r](#) [Ch3072r](#) [Ch3672r](#) ... [Show all](#)