



# Dimensions Of Wind Ducting - Sanyo 26 series Installation Instructions Manual

Split system heat pump air conditioner



1

2

3

4

5

Table Of Contents

6

7

8

9

10

11

12

13

14

 
15

16

17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110



•

[Table of Contents](#)

•

## Bookmarks







## 2-6. Dimensions of Wind Ducting

### Reference diagram for air-discharge chamber (field supply)

#### STK-DRV80U for 2672R / 3072R / 3672R unit

1

Air discharge chamber

2

Air discharge chamber (base)

#### STK-DRE140A for 4872R unit

1

Unit front, air discharge chamber

2

Unit left side, air discharge chamber

3


Unit light side, air discharge chamber

4

Reinforcement brackets, 4 locations

1-1/8

2

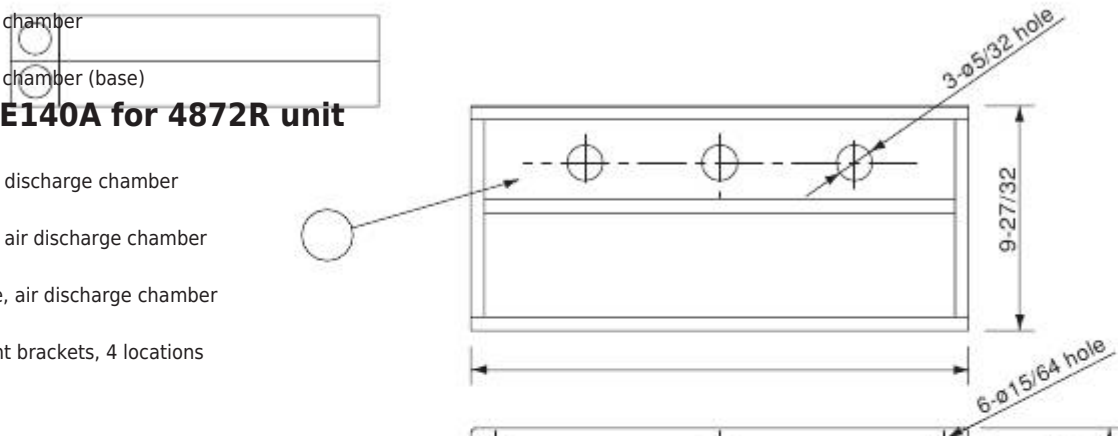


1  
2  
9-27/32  
21-13/16

**Note:** In snowy regions, if there is concern that snow may enter the air discharge chamber, remove the base of the chamber (10 screws) before using.

2  
9-7/16  
Rectangular hole  
Rectangular hole




1  
21-13/16  
9-27/32  
1-1/16  
15/16 17/32

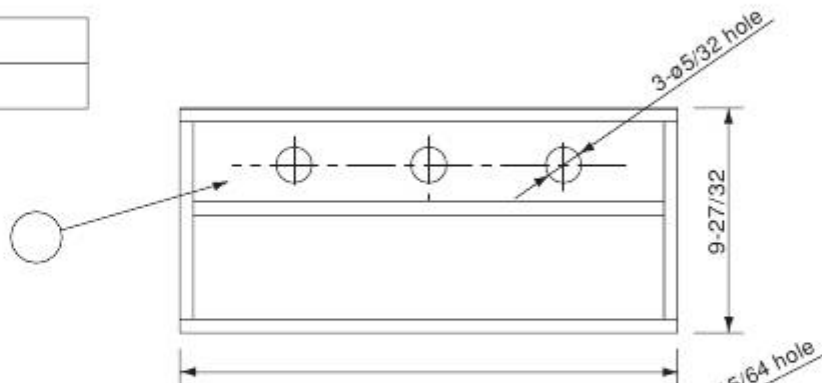

4  
1  
22-13/32  
21-13/32

**19**  
(25/32) (25/32)  
Rectangular hole  
(both sides)

5-5/32  
3  
9-7/16  
Rectangular hole  
Rectangular hole

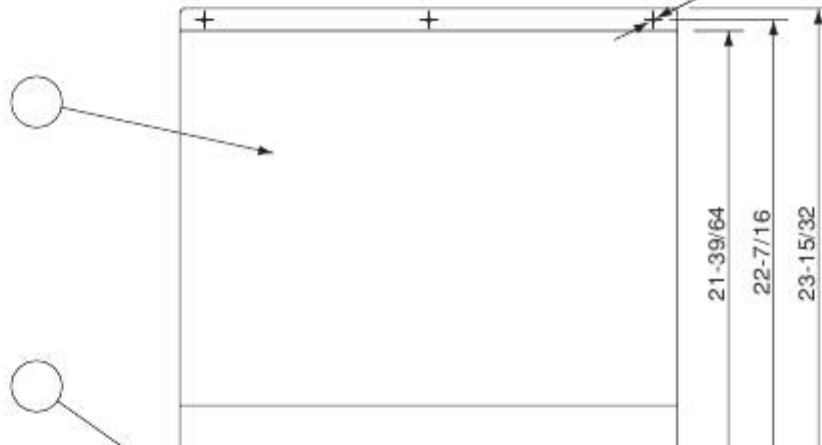

1  
Unit: inch  
1-1/8  
Unit: inch

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1  
...  
16  
17  
18  
19  
20  
21  
22  
23

Quick Links:

[Indoor Unit](#)

[Outdoor Unit](#)

[Trouble Diagnostics](#)

## Related Manuals for Sanyo 26 series

[Air Conditioner Sanyo Big PACi 18 Series Technical Data & Service Manual](#)

Big pack i dc inverter (275 pages)

[Air Conditioner Sanyo C4272R Service Manual](#)

Sanyo split system air conditioner service manual (181 pages)

[Air Conditioner Sanyo C4272R S/C Installation Instructions Manual](#)

Sanyo split system heat pump air conditioner installation instructions (111 pages)

[Air Conditioner Sanyo C3072R Parts List](#)

Outdoor unit (4 pages)

[Air Conditioner Sanyo CH3672R Parts List](#)

Outdoor unit (4 pages)

[Air Conditioner Sanyo 000-31 Specifications](#)

Concealed duct air conditioner & heat pump 24,000-31,200 btu/h 13.9-14.9 seer  
(2 pages)

[Air Conditioner Sanyo 26KS72R Specifications](#)

Wall mounted air conditioner (2 pages)

[Heat Pump Sanyo 26THW72R Specifications](#)

Ceiling suspended heat pump (2 pages)

[Air Conditioner Sanyo 26UW72R Specifications](#)

Concealed duct air conditioner (2 pages)

[Air Conditioner Sanyo 26KHS72R Submittal Data](#)

Wall mounted heat pump (2 pages)

[Air Conditioner Sanyo 36UW72R Specifications](#)

Concealed duct air conditioner (2 pages)

[Air Conditioner Sanyo KHHS2672R Specifications](#)

Wall mounted heat pump with heater (2 pages)

[Air Conditioner Sanyo KHS3072R Specifications](#)

Wall mounted air conditioner (2 pages)

[Air Conditioner Sanyo KHS3672R Datasheet](#)

Wall mounted air conditioner (2 pages)

[Air Conditioner Sanyo THW3672R Specifications](#)

Ceiling suspended air conditioner (2 pages)

[Air Conditioner Sanyo XHW2672R Specifications](#)

Ceiling recessed air conditioner (2 pages)

## Related Content for Sanyo 26 series

[Mini ECO-i 85464359981002 Dimensions Of Snow Ducting](#)

Sanyo Mini ECO-i 85464359981002

[C2432A Wind Shield For "CI" Model](#)

Sanyo C2432A

[SAP-CMRV1426EH Outer Dimensions Of Outdoor Unit](#)

Sanyo SAP-CMRV1426EH

[SAP-KMRV74EH Outer Dimensions Of Outdoor Unit](#)

Sanyo SAP-KMRV74EH

[SPW-C0705DZH8 Dimensions Of Wind Ducting](#)

Sanyo SPW-C0705DZH8

[C4272R Dimensions Of Wind Ducting](#)

Sanyo C4272R

[SPW-C256VH Dimensions Of Wind-Proof Duct](#)

Sanyo SPW-C256VH

[SPW-CR365GXH56 Dimensions Of Snow Ducting Reference Diagram For Snow-Proof Vents \(Field Supply\) Stk-Bdr140U For Spw-](#)



[Cr365/485/605Gx\(H\)56\(A/B\)](#)

Sanyo SPW-CR365GXH56

This manual is also suitable for:

[30 series](#) [36 series](#) [Split system](#) [heat pump](#) [air conditioner](#) [Ch2672r](#) [Ch3072r](#) [Ch3672r](#) ... [Show all](#)