

Installing The Rear Panel On The Wall - Sanyo 26 series Installation Instructions Manual

Split system heat pump air conditioner

1

2

3

4

5

Table Of Contents

6

7

8

9

10

11

12

13

14

 
15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110




•

[Table of Contents](#)

•

Bookmarks

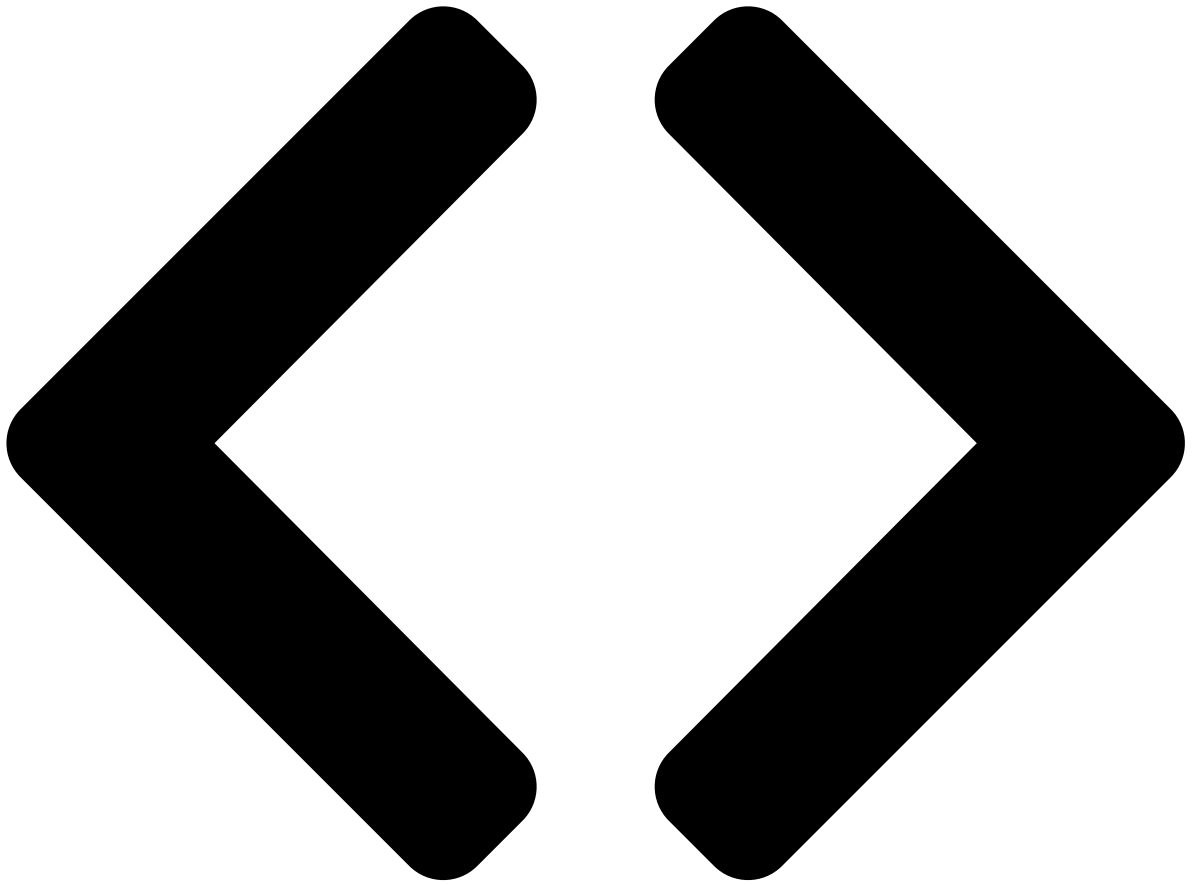

Enlarged version

3-12. Installing the Rear Panel on the Wall

KH2672R

Be sure to confirm that the wall is strong enough to suspend the unit.


See either [Item a\)](#) or [b\)](#) below depending on the wall type.

a) If Wooden Wall

(1) Attach the rear panel to the wall with the 10 screws provided. (Fig. 3-34)

If you are not able to line up the holes in the rear panel with the beam locations marked on the wall, use toggle bolts to go through the holes on the panel or drill 3/16 in. dia. holes in the panel over the stud locations and then mount the rear panel.

(2) Double-check with a ruler or carpenter's level that the panel is level. This is important to install the unit properly.

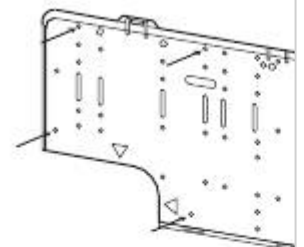

(Fig. 3-35)

(3) Make sure the panel is flush against the wall. Any space between the wall and unit will cause noise and vibration.

b) If Block, Brick, Concrete or Similar Type Wall

Make 3/16" dia. holes in the wall. Insert rawl plugs for appropriate mounting screws. (Fig. 3-36)

KH3072R, KH3672R

Confirm that the wall is strong enough to support the unit.

a) If Wooden Wall

(1) Attach the wall fixture to the wall with the 12 screws provided. (Fig. 3-37) If you are not able to line up the holes in the wall fixture with the beam locations marked on the wall, use rawl plugs or toggle bolts to go through the holes on the panel or drill 3/16 in. dia. holes in the wall fixture over the stud locations.

(2) Check with a tape measure or carpenter's level that the wall fixture is level. This is important so that the unit is correctly installed.

(3) Make sure the wall fixture is flush against the wall. Any space between the wall and unit will cause noise and vibration.

b) If Block, Brick, Concrete or Similar Type Wall

Make 3/16 in. dia. holes in the wall. Insert rawl plugs for appropriate mounting screws. (Fig. 3-36)

37

Fig. 3-34

Fig. 3-35

1-3/16" or more

3/16"

dia. hole


Rawl plug

(Field supply)

Fig. 3-36

Wall fixture

Fig. 3-37

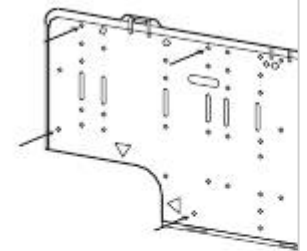

ManualsLib.com

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
34
35
36
37
38
39
40
41

Quick Links:

[Indoor Unit](#)

[Outdoor Unit](#)

[Trouble Diagnostics](#)

Related Manuals for Sanyo 26 series

[Air Conditioner Sanyo Big PACi 18 Series Technical Data & Service Manual](#)

Big pack i dc inverter (275 pages)

[Air Conditioner Sanyo C4272R Service Manual](#)

Sanyo split system air conditioner service manual (181 pages)

[Air Conditioner Sanyo C4272R S/C Installation Instructions Manual](#)

Sanyo split system heat pump air conditioner installation instructions (111 pages)

[Air Conditioner Sanyo C3072R Parts List](#)

Outdoor unit (4 pages)

[Air Conditioner Sanyo CH3672R Parts List](#)

Outdoor unit (4 pages)

[Air Conditioner Sanyo 000-31 Specifications](#)

Concealed duct air conditioner & heat pump 24,000-31,200 btu/h 13.9-14.9 seer
(2 pages)

[Air Conditioner Sanyo 26KS72R Specifications](#)

Wall mounted air conditioner (2 pages)

[Heat Pump Sanyo 26THW72R Specifications](#)

Ceiling suspended heat pump (2 pages)

[Air Conditioner Sanyo 26UW72R Specifications](#)

Concealed duct air conditioner (2 pages)

[Air Conditioner Sanyo 26KHS72R Submittal Data](#)

Wall mounted heat pump (2 pages)

[Air Conditioner Sanyo 36UW72R Specifications](#)

Concealed duct air conditioner (2 pages)

[Air Conditioner Sanyo KHHS2672R Specifications](#)

Wall mounted heat pump with heater (2 pages)

[Air Conditioner Sanyo KHS3072R Specifications](#)

Wall mounted air conditioner (2 pages)

[Air Conditioner Sanyo KHS3672R Datasheet](#)

Wall mounted air conditioner (2 pages)

[Air Conditioner Sanyo THW3672R Specifications](#)

Ceiling suspended air conditioner (2 pages)

[Air Conditioner Sanyo XHW2672R Specifications](#)

Ceiling recessed air conditioner (2 pages)

Related Content for Sanyo 26 series

[SAP-KMRV74EH Install The Rear Panel On The Wall](#)

Sanyo SAP-KMRV74EH

[KS3082 Install The Rear Panel On The Wall](#)

Sanyo KS3082

[COOL Install The Rear Panel On The Wall](#)

Sanyo COOL

[KMHS0772 Install The Rear Panel On The Wall](#)

Sanyo KMHS0772

[KS1852 Install The Rear Panel On The Wall](#)

Sanyo KS1852

[18KLS72 Install The Rear Panel On The Wall](#)

Sanyo 18KLS72

[18KHS72 Install The Rear Panel On The Wall](#)

Sanyo 18KHS72

[09KHS71 Install The Rear Panel On The Wall](#)

Sanyo 09KHS71

This manual is also suitable for:

[30 series](#)[36 series](#)[Split system](#)[heat pump](#)[air conditioner](#)[Ch2672r](#)[Ch3072r](#)[Ch3672r](#) ... [Show all](#)