Wiring Instructions - Sanyo 26 series Installation Instructions Manual


Split system heat pump air conditioner

```
2
3
4
5
Table Of Contents
6
7
8
9
10
11
12
13
14
15
```

Table of Contents





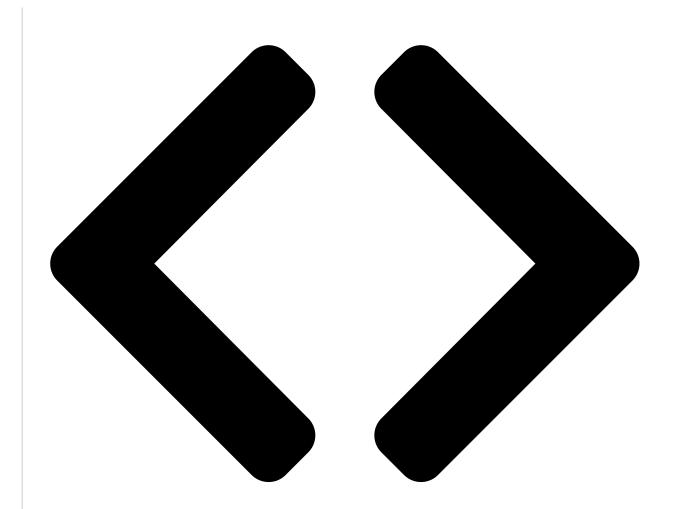

Enlarged version

KHH2672R

Tubing can be extended in 4 directions as shown in Fig. 3-54.

Arrangement for Left Tubing

(a) Cut out the left tubing out et. (Fig. 3-55)

Arrangement for Right Tubing

(a) Cut out the right tubing outlet using a hacksaw. (Fig. 3-56)

 
Arrangement for Left-rear and Right-rear Tubing

(a) It is not necessary to cut a hole.

Viring Instructions

I Precautions on Wiring

(1) Before wiring, confirm the rated voltage of the





unit as shown on its nameplate, then carry out the wiring closely following the wiring diagram.

- (2) Provide a power outlet to be used exclusively for each unit. A power supply disconnect and circuit breaker for overcurrent protection should be provided in the exclusive line.
- (3) To prevent possible hazards from insulation failure, the unit must be grounded.
- (4) All wiring must be connected tightly.
- (5) Do not allow wiring to touch refrigerant tubing, compressor, or any moving parts of the fan.

WARNIN

orized changes in the I wiring can be very ous. The manufacturer

will accept no responsibility for any damage or misoperation that occurs as a result of such unauthorized changes.

Left tubing Left-rear tubing Left tubing outlet

Fig. 3-55


42


Right-rear tubing (Recommended) Right tubing

Fig. 3-54

Fig. 3-56

 Right tubing outlet



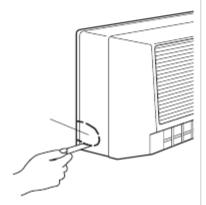

ManualsLib.con

Table of Contents

Previous Page Next Page

Quick Links:	
Indoor Unit Outdoor Unit	
Trouble Diagnostics	

Related Manuals for Sanyo 26 series

Air Conditioner Sanyo Big PACi 18 Series Technical Data & Service Manual

Big pack i dc inverter (275 pages)

Air Conditioner Sanyo C4272R Service Manual

Sanyo split system air conditioner service manual (181 pages)

Air Conditioner Sanyo C4272R S/C Installation Instructions Manual

Sanyo split system heat pump air conditioner installation instructions (111 pages)

Air Conditioner Sanyo C3072R Parts List

Outdoor unit (4 pages)

Air Conditioner Sanyo CH3672R Parts List

Outdoor unit (4 pages)

Air Conditioner Sanyo 000-31 Specifications

Concealed duct air conditioner & heat pump 24,000-31,200 btu/h 13.9-14.9 seer (2 pages)

Air Conditioner Sanyo 26KS72R Specifications

Wall mounted air conditioner (2 pages)

Heat Pump Sanyo 26THW72R Specifications

Ceiling suspended heat pump (2 pages)

Air Conditioner Sanyo 26UW72R Specifications

Concealed duct air conditioner (2 pages)

Air Conditioner Sanyo 26KHS72R Submittal Data

Wall mounted heat pump (2 pages)

Air Conditioner Sanyo 36UW72R Specifications

Concealed duct air conditioner (2 pages)

Air Conditioner Sanyo KHHS2672R Specifications

Wall mounted heat pump with heater (2 pages)

Air Conditioner Sanyo KHS3072R Specifications

Wall mounted air conditioner (2 pages)

Air Conditioner Sanyo KHS3672R Datasheet

Wall mounted air conditioner (2 pages)

Air Conditioner Sanyo THW3672R Specifications

Ceiling suspended air conditioner (2 pages)

Air Conditioner Sanyo XHW2672R Specifications

Ceiling recessed air conditioner (2 pages)

Related Content for Sanyo 26 series

KMS0772 Wiring Instructions

Sanyo KMS0772

KHS0951 Wiring Instructions

Sanyo KHS0951

SAP-KRV9AEH Wiring Instructions For The Outdoor Unit

Sanyo SAP-KRV9AEH

SAP-KRV9AEH Wiring Instructions For The Outdoor Unit

Sanyo SAP-KRV9AEH

SAP-KMRV74EH Wiring Instructions

Sanyo SAP-KMRV74EH

COOL Wiring Instructions

Sanyo COOL

SAP-CMRV1424EH Wiring Instructions

Sanyo SAP-CMRV1424EH

KS3082 Wiring Instructions

Sanyo KS3082

This manual is also suitable for:

30 series36 seriesSplit system heat pump air conditioneCh2672rCh3072rCh3672r ... Show all