

General; Tools Required For Installation (Not Supplied); Accessories Supplied With Outdoor Unit; Type Of Copper Tube And Insulation Material - Sanyo 26 series Installation Instructions Manual

Split system heat pump air conditioner

1

2

3

4

5

Table Of Contents

6

7

8

9

10

11

12

13

14

 
15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110



•

[Table of Contents](#)

•

Bookmarks



1. GENERAL

This booklet briefly outlines where and how to install the air conditioning system. Please read over the entire set of instructions for the indoor and outdoor units and make sure all accessory parts listed are with the system before beginning.

1-1. Tools Required for Installation (not supplied)

1.
Standard screwdriver
2.
Phillips head screwdriver

3. Knife or wire stripper
4. Tape measure
5. Level
6. Sabre saw or key hole saw
7. Hacksaw
8. Core bits
9. Hammer
10. Drill
11. Tube cutter
12. Tube flaring tool
13. Torque wrench
14. Adjustable wrench
15. Reamer (for deburring)

1-2. Accessories Supplied with Outdoor Unit

See Tables 1-1 to 1-9.

Table

1-1	4-Way Air Discharge Semi-Concealed
1-2	Wall-Mounted
1-3	Ceiling-Mounted
1-4	Concealed-Duct
1-5	Outdoor Unit
1-6	Wired Remote Controller
1-7	Wireless Remote Controller
1-8	Timer Remote Controller
1-9	System Controller

Type



ManualsLib.com

1-3. Type of Copper Tube and Insulation Material

Copper tubing for connecting the outdoor unit to the indoor unit is available in kits which contain the liquid and gas tubing, fittings and insulation. Consult your nearest sales outlet or A/C workshop.

If you wish to purchase these materials separately from a local source, you will need:

1. Deoxidized annealed copper tube for refrigerant tubing.
2. Foamed polyethylene insulation for copper tubes as required to precise length of tubing.

Wall thickness of the insulation should be not less than 5/16 in.

3. Use insulated copper wire for field wiring. Wire size varies with the total length of wiring. Refer to Section 5. "Electrical Wiring" for details.

CAUTION

1-4. Additional Materials Required for Installation

1. Refrigeration (armored) tape
2. Insulated staples or clamps for connecting wire (See your local codes.)
3. Putty
4. Refrigeration tubing lubricant
5. Clamps or saddles to secure refrigerant tubing
6. Scale for weighing

8

Check local electrical codes

and regulations before obtaining wire. Also, check any specified instructions or limitations.



ManualsLib.com

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
5
6
7
8
9
10
11
12

Quick Links:

[Indoor Unit](#)

[Outdoor Unit](#)

[Trouble Diagnostics](#)

Related Manuals for Sanyo 26 series

[Air Conditioner Sanyo Big PACi 18 Series Technical Data & Service Manual](#)

Big pack i dc inverter (275 pages)

[Air Conditioner Sanyo C4272R Service Manual](#)

Sanyo split system air conditioner service manual (181 pages)

[Air Conditioner Sanyo C4272R S/C Installation Instructions Manual](#)

Sanyo split system heat pump air conditioner installation instructions (111 pages)

[Air Conditioner Sanyo C3072R Parts List](#)

Outdoor unit (4 pages)

[Air Conditioner Sanyo CH3672R Parts List](#)

Outdoor unit (4 pages)

[Air Conditioner Sanyo 000-31 Specifications](#)

Concealed duct air conditioner & heat pump 24,000-31,200 btu/h 13.9-14.9 seer
(2 pages)

[Air Conditioner Sanyo 26KS72R Specifications](#)

Wall mounted air conditioner (2 pages)

[Heat Pump Sanyo 26THW72R Specifications](#)

Ceiling suspended heat pump (2 pages)

[Air Conditioner Sanyo 26UW72R Specifications](#)

Concealed duct air conditioner (2 pages)

[Air Conditioner Sanyo 26KHS72R Submittal Data](#)

Wall mounted heat pump (2 pages)

[Air Conditioner Sanyo 36UW72R Specifications](#)

Concealed duct air conditioner (2 pages)

[Air Conditioner Sanyo KHHS2672R Specifications](#)

Wall mounted heat pump with heater (2 pages)

[Air Conditioner Sanyo KHS3072R Specifications](#)

Wall mounted air conditioner (2 pages)

[Air Conditioner Sanyo KHS3672R Datasheet](#)

Wall mounted air conditioner (2 pages)

[Air Conditioner Sanyo THW3672R Specifications](#)

Ceiling suspended air conditioner (2 pages)

[Air Conditioner Sanyo XHW2672R Specifications](#)

Ceiling recessed air conditioner (2 pages)

Related Content for Sanyo 26 series

[SAP-KMRV74EH General](#)

Sanyo SAP-KMRV74EH

[SAP-CMRV3656EH General](#)

Sanyo SAP-CMRV3656EH

[KMS0772 General](#)

Sanyo KMS0772

[KHS0951 General](#)

Sanyo KHS0951

[SAP-KMRV74EH General](#)

Sanyo SAP-KMRV74EH

[SPW-C483GYH8 General Troubleshooting Flow Chart: Diagnosis And Remedy](#)

Sanyo SPW-C483GYH8

[SPW-T253GH56 General Troubleshooting Flow Chart: Diagnosis And Remedy](#)

Sanyo SPW-T253GH56

[SPW-U253GH56 General Troubleshooting Flow Chart: Diagnosis And Remedy](#)

Sanyo SPW-U253GH56

This manual is also suitable for:

[30 series](#) [36 series](#) [Split system heat pump air conditione](#) [Ch2672r](#) [Ch3072r](#) [Ch3672r](#) ... [Show all](#)