 


TOSHIBA

Toshiba Strata DK14 Quick Reference Manual

Strata dk digital business telephone systems

1
2
3
4
5
6
7
8
9
10
11
12
Table Of Contents
13



•

[Table of Contents](#)

•

Bookmarks

Quick Links

[1 Before You Begin](#)

[2 Do Not Disturb](#)

[Download this manual](#)

See also: [Programming Manual](#) , [System Administrator Manual](#)



726+,%\$

TOSHIBA

BUSINESS


TELEPHONE

SOLUTIONS

Digital Business Telephone Systems

EKT-Series

Electronic Telephone

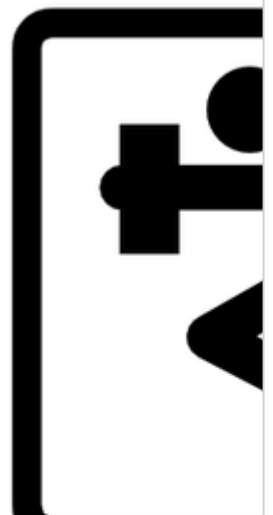

Quick Reference Guide

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba Strata DK14

[Telephone Toshiba STRATA DK14 Installation And Maintenance Manual](#)

(724 pages)

[Telephone System Toshiba Strata DK14 General Description Manual](#)

Digital business telephone solutions (514 pages)

[Telephone System Toshiba Strata DK14 Installation And Maintenance Manual](#)

Strata dk series. digital business telephone solutions (383 pages)

[Telephone Toshiba Strata DK14 Programming Manual](#)

(209 pages)

[IP Phone Toshiba Strata DK 2000-series User Manual](#)

Toshiba digital telephone user guide (164 pages)

[IP Phone Toshiba DK User Manual](#)

Includes lcd, add-on module, and direct station selection console (163 pages)

[IP Phone Toshiba Strata DK User Manual](#)

Digital business telephone systems includes lcd, add-on module, and direct station selection console (136 pages)

[IP Phone Toshiba CT User Manual](#)

Includes lcd, add-on module, and direct station selection console (136 pages)

[Telephone Toshiba Strata DK User Manual](#)

Electronic telephone (134 pages)

[Cordless Telephone Toshiba Strata DK User Manual](#)

Cordless digital telephone (107 pages)

[Telephone Toshiba Strata DK System Administration Manual](#)

(60 pages)

[IP Phone Toshiba Strata DK User Manual](#)

Digital single line telephone (60 pages)

[Telephone System Toshiba Strata DK14 System Administrator Manual](#)

Strata dk digital business telephone systems (56 pages)

[Telephone Toshiba Strata DK User Manual](#)

Standard telephone (50 pages)

[Telephone System Toshiba Strata DK14 Installation And Maintenance Manual](#)

Digital business telephone solutions (46 pages)

[Telephone Toshiba Strata DK EKT-Series Quick Reference Manual](#)

Digital business telephone systems electronic telephone (7 pages)

Summary of Contents for Toshiba Strata DK14

[Page 1](#) 726+,%\$ B U S I N E S S T E L E P H O N E S O L U T I O N S Digital Business Telephone Systems EKT-Series Electronic Telephone Quick Reference Guide...

[Page 2](#) Telephone Directory Name Number...

[Page 3: Before You Begin](#)

Telephones This guide applies to electronic key telephones (EKTs), not digital telephones (DKTs), connected to Strata DK14, DK16, DK16e, DK40, DK40i, DK280, DK424 and DK424i systems (release 3.0 or higher). New telephone model numbers are on the bottom of the phone.

[Page 4: Outside Line Access](#)

Outside Line Access ▶ To access an outside line ▶ &2 Press ...or a [DN] and dial a line access code. System Size Line Access Code (Ä '□ □'□#Ä DK14 Ä&□□ □Ä&□□# (Ä '□ □'□ DK16e, DK16 Ä&□□ □Ä&□□' (Ä '□ □' !Ä...

[Page 5: Account Code Calls](#)

Account Code Calls ▶ To enter a Forced Account Code Access an outside line. Enter the Forced Account Code. Listen for dial tone. Busy tone indicates an invalid code. If you are dialing with Least Cost Routing, you will not hear dial tone. Dial a telephone number.

[Page 6: Automatic Callback](#)

Automatic Callback ▶ To activate Automatic Callback After dialing a busy station, busy trunk group, or station in the Do Not Disturb \$&% mode, press ...or Hang up. The system calls you back when the station or trunk group becomes available. ▶...

[Page 7: Call Park Orbits](#)

NNN = [DN] where calls are forwarded. XX = The amount of time (08~60 secs.) that the telephone should ring before it forwards. This entry is optional: you can skip XX, but you 63.5 must press (or) + Ä You can only Call Forward a [PDN] or Note [PhDN] that is "owned"...

[Page 8: Call Pickup](#)

If you have an LCD telephone, enter and the system automatically selects an available orbit. Enter the Paging Access Code and make your announcement. Hang up. Call Pickup Applies to [DN] calls which are ringing or on hold, not parked. ▶...

[Page 9: Call Transfer With Camp-On](#)

Call Transfer with Camp On ▶ To Transfer a call &21)□7516 While on a call, press Dial the [DN] where the call is to be transferred. Announce the call, then hang up. If the station is busy, hang up and the call "camps on"...

[Page 10: Do Not Disturb](#)

Do Not Disturb ▶ To activate/deactivate Do Not Disturb ▶ To activate, press (LED ON). Ä ▶ To deactivate, press again (LED OFF). Hold ▶ To place a call on Hold ▶ +2/' Press ▶ To retrieve a held call ▶...

[Page 11: Repeat Last Number Dialed](#)

▶ To answer a Message Waiting at your station The flashing MW/FL LED indicates Message Waiting. ▶ 0:□)/ Lift the handset, press . If the message sender does not answer, go on-hook and repeat this step to skip to the next message.

[Page 12: Saved Number Redial](#)

Enter a CO line access code (optional) plus the telephone number, then press (or). 726+,%\$ Toshiba America Information Systems, Inc. Telecommunication Systems Division 9740 Irvine Boulevard, Irvine, CA 92618-1697 http://telecom.toshiba.com DKA-QR-EKTEL-VC 4010358 Version C.1, May 2000 (DK424i)

This manual is also suitable for:

[Strata dk16](#)[Strata dk16e](#)[Strata dk40](#)[Strata dk40i](#)[Strata dk280](#)[Strata dk424](#) ... [Show all](#)