



# Name And Functions Of Indications On Remote Controller - Toshiba RAS-13SKV2-E Service Manual

 
Split type



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67  
68

69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111



•

[Table of Contents](#)

•

## Bookmarks







### 9-4-3. Name and Functions of Indications on Remote Controller

[Display]

All indications, except for the clock time indicator, are displayed by pressing the

**1**

Transmission mark

This transmission mark  
remote controller transmits signals to the indoor  
unit.



**2**

Mode indicator

Indicates the current operation mode.



(AUTO : Automatic control, A : Auto changeover control,  
: Cool,

3

Temperature indicator  
Indicates the temperature setting.  
(17°C to 30°C)

4

FAN speed indicator  
Indicates the selected fan speed.  
AUTO or five fan speed levels

(LOW

, LOW

+

HIGH

Indicates AUTO when the operating mode is either AUTO or

9

12

1

10

11

6

3

indicates when the

: Dry,

: Heat)

, MED

, MED

+

) can be shown.


: Dry.

2 13

8

4

7

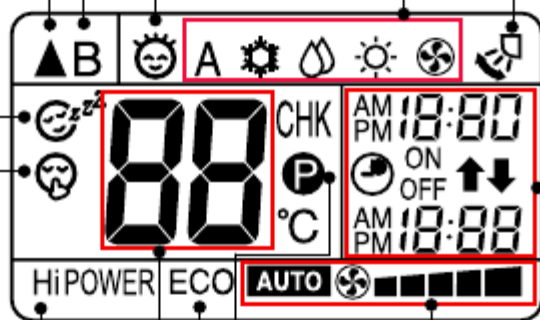

ManualsLib.com

# 5

TIMER and clock time indicator

The time setting for timer operation or the clock time is indicated.

The current time is always indicated except during TIMER operation.

# 6

Hi-POWER indicator

Indicates when the Hi-POWER operation starts.

Press the Hi-POWER button to start and press it again to stop the operation.

# 7

(PRESET) indicator

Flashes for 3 seconds when the PRESET button is pressed during operation.

The button for more than 3 seconds while the mark is flashing.

Press another button to turn off the mark.

# 8

ECO indicator

Indicates when the ECO is activated.

Press the ECO button to start and press it again to stop operation.

# 9

A, B change indicator remote controller

When the remote controller switching function is set, "B" appears in the remote controller display.

(When the remote controller setting is "A", there is no indication at this position.)

# 10

Comfort sleep

Indicates when comfort sleep is activated.


Press comfort sleep button to select

# 11

Quiet

Indicates when quiet is activated.

Press quiet button to start and press it again to stop operation.

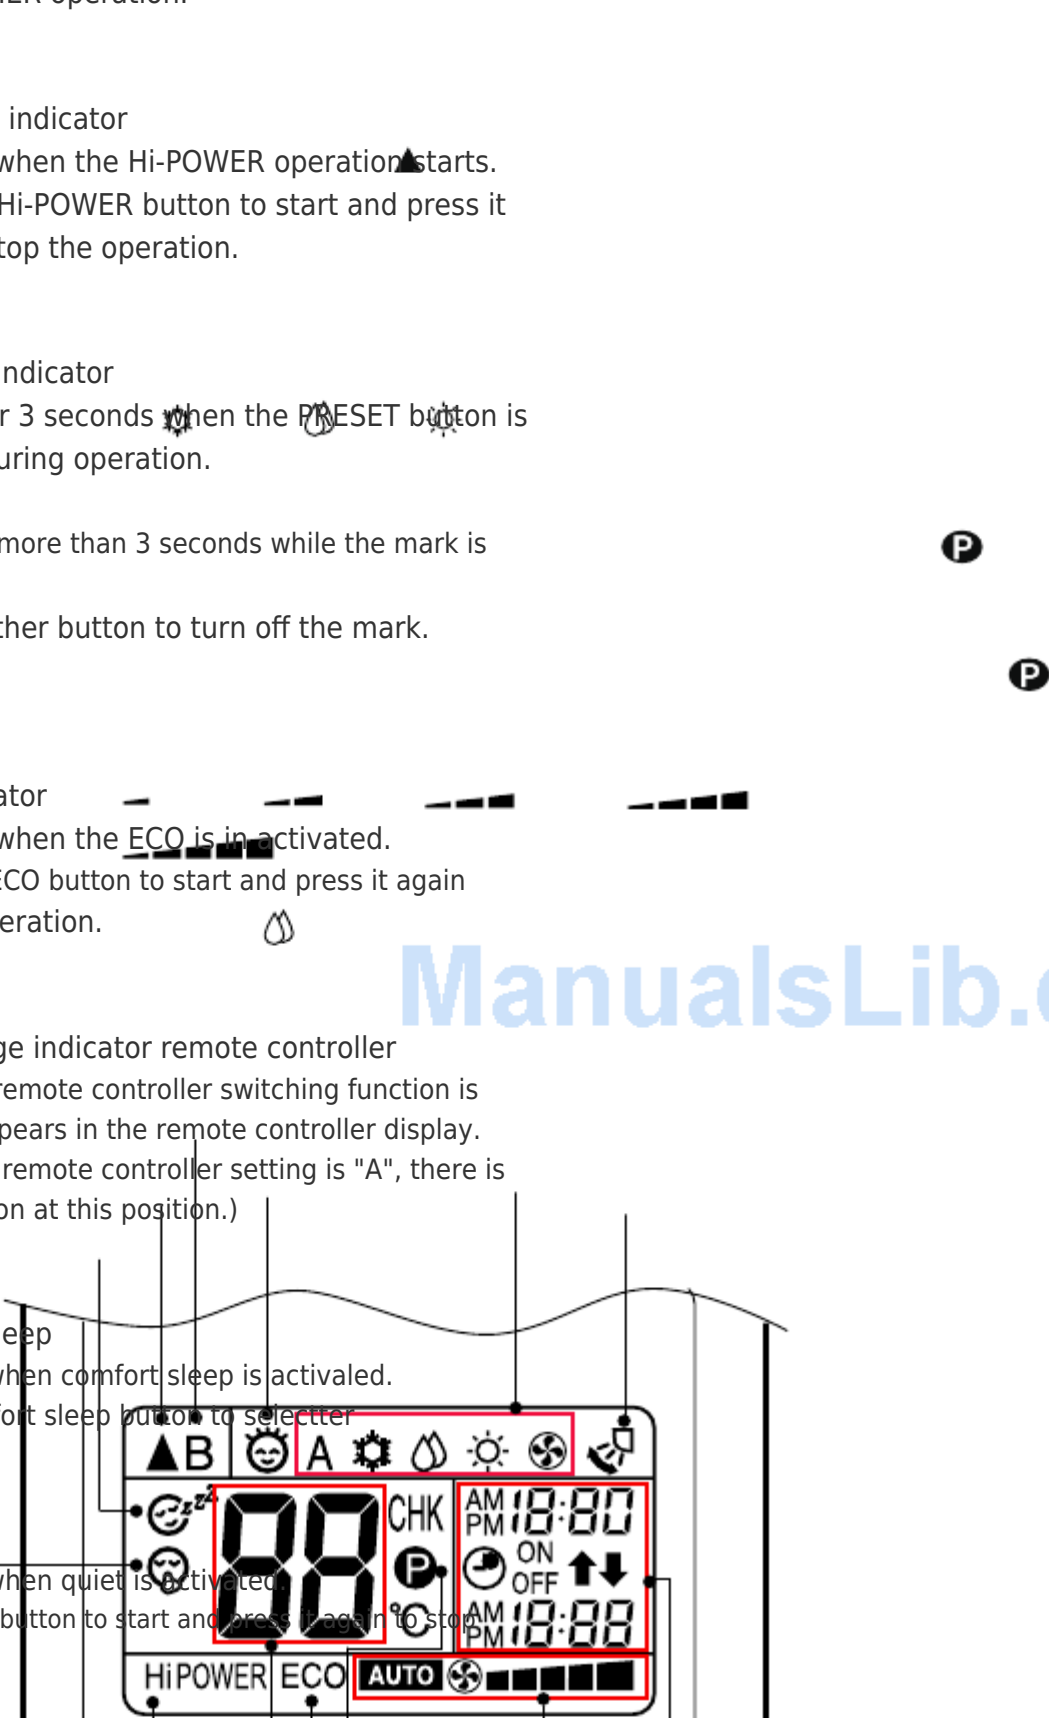

# 12

## One-Touch

Indicates when one touch comfort is activated.  
Press one-touch button to start the operation.

# 13

## Swing

Indicates when louver is swing.  
Press swing button to start the swing operation  
and press it again to stop the swing operation. ▲

# 5

- 51 -

## FILE NO. SVM-10001

button.

mark is shown when holding down the   

[Table of Contents](#)



[Previous Page](#)  
[Next Page](#)

1  
...  
48  
49  
50  
**51**  
52  
53  
54  
55



Quick Links:

[Service Manual](#)

[Specifications](#)

[Operation Description](#)

[How to Diagnose the Trouble](#)

## Chapters

[Service Manual 2](#)

[Auto Restart Function 29](#)

### Related Manuals for Toshiba RAS-13SKV2-E

[Air Conditioner Toshiba RAS-B10UFV-E Service Manual](#)

Air conditioner split type (127 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type; for general public use (31 pages)

[Air Conditioner Toshiba RAS-10SAVP-E Service Manual](#)

(119 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(19 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Owner's Manual](#)

(61 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Installation Manual](#)

(132 pages)

[Air Conditioner Toshiba RAS-M14GAV-E Owner's Manual](#)

Split type (7 pages)

[Air Conditioner Toshiba RAS-13SKV-E Service Manual](#)

Indoor/outdoor unit, split type air conditioner (120 pages)

[Air Conditioner Toshiba RAS-13SKHP-E Service Manual](#)

Split wall type air conditioner (70 pages)

[Air Conditioner Toshiba RAS-13SKVR-E2 Service Manual](#)

Split type (107 pages)

[Air Conditioner Toshiba RAS-10SKVP2-E Service Manual](#)

Split type indoor unit high wall, heat pump type outdoor unit heat pump type (111 pages)

[Air Conditioner Toshiba RAS-10SKH-ES Service Manual](#)

Split wall type (68 pages)

[Air Conditioner Toshiba RAS-B10 Series Installation Manual](#)

(68 pages)

[Air Conditioner Toshiba RAS-10S3KV-E Owner's Manual](#)

(7 pages)

[Air Conditioner Toshiba RAS-10S3KHS-EE Installation Manual](#)

(20 pages)

[Air Conditioner Toshiba RAS-B10S4KVP-G-E Installation Manual](#)

(24 pages)

## Related Content for Toshiba RAS-13SKV2-E

[RAS-M07G3DV-E Name And Functions Of Indications On Remote Controller](#)

Toshiba RAS-M07G3DV-E

[RAS-M07N4KVRG-E Name And Functions Of Indications On Remote Controller](#)

Toshiba RAS-M07N4KVRG-E

[RAS-25G3KVSG-ND Name And Functions Of Indications On Remote Controller](#)

Toshiba RAS-25G3KVSG-ND

[RAS-25E2KVG-ND Name And Functions Of Indications On Remote Controller](#)

Toshiba RAS-25E2KVG-ND

[RAS-B05BKVG-E Name And Functions Of Indications On Remote Controller](#)

Toshiba RAS-B05BKVG-E

[RAS-B05E2KVG-E Name And Functions Of Indications On Remote Controller](#)

Toshiba RAS-B05E2KVG-E

[RAS-M05J2KVSG-E Name And Functions Of Indications On Remote Controller](#)

Toshiba RAS-M05J2KVSG-E

[RAS-25N4KVRG-ND Name And Functions Of Indications On Remote Controller](#)

Toshiba RAS-25N4KVRG-ND

This manual is also suitable for:

[Ras-16skv2-eRas-16sav2-eRas-10skv2-eRas-10sav2-eRas-13sav2-e](#)

[Save PDF](#)