



Sanyo A5514SA Basic Manual


1
2
3
4
5
6
7
8
9

Table Of Contents

10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

 68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104



•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

[Download this manual](#)

Quick Links



Basic Manual

Table of Contents

[Next Page](#)

1
2
3
4
5

Related Manuals for Sanyo A5514SA

[Cell Phone Sanyo A5514SA Operating Instructions Manual](#)

(30 pages)

[Cell Phone Sanyo A5527SA Basic Manual](#)

(92 pages)

[Cell Phone Sanyo A1303SA Operating Instructions Manual](#)

(22 pages)

[Cell Phone Sanyo au W22SA Basic Manual](#)

(106 pages)

[Cell Phone Sanyo SANYO Innuendo User Manual](#)

(140 pages)

[Cell Phone Sanyo Sprint SCP-7200 User Manual](#)

Pcs vision ready link phone (197 pages)

[Cell Phone Sanyo SCP-2700 User Manual](#)

Sprint cell phone (160 pages)

[Cell Phone Sanyo Cell Phone User Manual](#)

Sprint pcs vision phone (256 pages)

[Cell Phone Sanyo SCP-3200 User Manual](#)

(141 pages)

[Cell Phone Sanyo Sprint SCP-3810 User Manual](#)

(160 pages)

[Cell Phone Sanyo SCP-6200 Specifications](#)

Sanyo scp-6200: specifications (2 pages)

[Cell Phone Sanyo Sprint KATANA User Manual](#)

Sprint service (198 pages)

[Cell Phone Sanyo SCP-3100 User Manual](#)

Pcs vision phone (270 pages)

[Cell Phone Sanyo SCP-2400 User Manual](#)

Sanyo cell phone user guide (140 pages)

[Cell Phone Sanyo SCP-7000 User Manual](#)

Sanyo scp-7000: users guide (254 pages)

[Cell Phone Sanyo SCP-3810 Operating Manual](#)

(68 pages)

Summary of Contents for Sanyo A5514SA

[Page 2](#) Thank you very much for purchasing the A5514SA. Before using, read the A5514SA "Basic Manual (this PDF manual)" to ensure correct use of your A5514SA. After you have finished reading, store this PDF manual and the printed manuals in a safe place so that you can retrieve them whenever you need.

[Page 3: Cellphone Etiquette](#)

Cellphone Etiquette Cellphones emit weak radio waves at all times even if you just turn the power on. Enjoy and safely use your cellphone without forgetting those around you. Some places forbid the use of cellphones. Using cellphones while driving is dangerous and forbidden

by law.

[Page 4: What You Can Do With The A5514Sa](#)

What You Can Do with the A5514SA Mail Camera You can send mail to other You can take photos or movies and cellphones or personal computers. send them easily by E-mail. Page 44
Page 56 EZnavi EZweb You can access position information using the functions ®...

[Page 5: Silent Mode And In-Phone Ans Machn](#)

Silent Mode and In-Phone Ans Machn Silent Mode In-Phone Ans Machn You can use the silent mode to turn incoming You can play answering message and record rings and other tones off to prevent others caller' s message when you cannot answer a from being inconvenienced.

[Page 6: Do Not Use The Cellphone While Driving](#)

Do Not Use the Cellphone While Driving Using cellphone while driving is subject to penalties. Holding a cellphone in a hand and use it for a call or gazing at a screen to see mails, etc. while driving is subject to penalties. (November 1, 2004 Implementation of the Revised Road Traffic Law) Holding a cellphone in a Gazing at a screen to see...

[Page 7: Watch Out For Junk Mail And One-Ring Calls](#)

Watch Out for Junk Mail and One-Ring Calls! If you receive junk mail... ;Mail Filter Using the mail filter function, you can reject mails sent from specific addresses or mails that contain " (Unsolicited Ad)" in the title, which is the biggest source of junk mail. The following mail functions are available for preventing arrival of junk mail: ;...

[Page 8: Disaster Message Board Service](#)

Disaster Message Board Service About Disaster Message Board When a big scale disaster occurs, you can register your safety information through EZweb. The registered safety information can be confirmed from anywhere in Japan through EZweb or Internet. ;When a big scale disaster occurs, you can register your safety information such as your condition and Registering comments from au cellphone to the "...

[Page 9](#) Safety Top screen of information Disaster Message registration Board screen Register Safety information confirmation screen Confirm * The maximum preservation period of the registered information is 72 hours. * The maximum available number of each registration is 10. * The demonstration of this service can be referred to anytime by accessing EZ Top Menu (Charges, application and information) (The demonstration of Disaster Message Board)

[Page 10: Table Of Contents](#)

Contents Cellphone EtiquetteWhat You Can Do with the A5514SA2 Silent Mode and In-Phone Ans Machn3 Check the Power, Radio Waves, and Battery!3 Do Not Use the Cellphone While Driving.....4 Watch Out for Junk Mail and One-Ring Calls!.....5 Disaster Message Board Service

[Page 11](#) What You Can Do with the Camera 56 Camera Taking a Photo58 Recording a Movie59 Sending Photos or Movies by E-mail61 About EZweb62 EZweb Accessing Sites63 ® Downloading Chaku-Uta and Set It as a Ringer for Incoming Calls ..

[Page 12: Before Use](#)

Before Use Confirming the Packed Contents ;A5514SA Main Unit ;Battery Pack ;Desktop Holder (Installed in the main unit) ;AC Adapter ;SANYO Flat-type Stereo Earphones 04 ;Basic Manual (Japanese) ;Manual (Japanese) ;Warranty (Japanese) ;Precautions in Use (Japanese) ;GLOBAL PASSPORT Owner's Manual...

[Page 13: Names Of Parts](#)

Names of Parts Receiver Main Display Center Key Clear/Manner Key Cursor Keys Talk/Pair Key Power/End Key Dial Keys Speaker-Phone/Light Key Memo Key Sub Display Camera Lens Infrared Port Flash Charge Indicator Speaker Close-Up Switch Battery Pack Cover (Battery Pack is installed) Incoming Indicator Flat-type Earphone- Charger Connector...

[Page 14: How To Charge The Battery Pack](#)

Fold out Fold out Desktop Holder Connector To Charge Using the AC Adapter Connect the AC adapter to the external terminal of the A5514SA and plug the power plug into a power outlet. Charge Indicator ;Red light is on Charging ;Light is off...

[Page 15: Turn The Power On/Off](#)

Turn the Power On/Off Standby screen To Turn the Power On Press for more than one second. The standby screen is displayed. To Turn the Power Off Press for more than one second. Confirming the Reception State and Remaining Battery Power Check here for the reception state! Out of Strong...

[Page 16: Basic Operation](#)

Basic Operation Key Functions Cursor Keys Cursor ;Move cursor or screen ;In the standby screen, display Dialed calls log by pressing right or Received calls log by pressing left Cursor keys are indicated in this manual as follows: Center Key Down Left Right...

[Page 17](#) Executing Functions Displayed at the Bottom The functions displayed at the bottom of the screen correspond with the keys as follows: Pressing the key executes the function displayed at the lower right. Pressing the key executes the function displayed at the lower left.

[Page 18: Viewing The Screen](#)

Indication in the Main Screen The following icons are displayed in the main screen and indicate the status of your A5514SA. Icons and the number of cases are displayed when you have received missed calls or mails. During a call...

[Page 19: About Menu](#)

About Menu About Main Menu Pressing in the standby screen launches the Main Menu. Each function can be accessed by using to select an image and pressing <Example> Accessing Camera from Main Menu Standby screen Main Menu screen Camera function screen to select "Camera"...

[Page 20: Setting The Language To English](#)

Setting the Language to English Press in the standby screen. to select " " and press to select " " and press to select "Set Language" and press...

[Page 21](#) to select "English" and press ;You can set the language to Japanese by pressing in turn from the standby screen.

[Page 22: Initial Setting For E-Mail And Ezweb](#)

Initial Setting for E-mail and EZweb To use E-mail and EZweb services, you need to subscribe to the EZweb service. If you did not subscribe it when you purchased your phone, please contact au Customer Service Center or au shop for further information.

[Page 23: Confirming Your Cellphone Number/E-Mail Address](#)

Confirming Your Cellphone Number/E-mail Address Press in the standby screen. to select "Functions" and press [Select]. to select "Profile" and press [Select]. Your cellphone number and E-mail address are displayed. ;You can also display them from the standby screen by pressing , and then...

[Page 24: Changing Your E-Mail Address](#)

Changing Your E-mail Address E-Mail Address Domain ezweb.ne.jp Changeable part Press in the standby screen. to select "E-Mail Settings" and press [Select]. to select "Other Settings" and press [Select]. to select "E (Change E-mail Address)" and press [OK].

[Page 25](#) Enter your lock code, press [Set], use to select (Send), and press [OK]. ;Lock code is the 4-digit number you wrote in the application form when purchasing. ;No setting operation is allowed until the next day if you enter the incorrect lock code 3 times in a day. to select "...

[Page 26: Phone Call](#)

Phone Call Making a Call From the standby screen, press to enter a phone number. ;To call a regular phone, enter a phone number starting with the area code. Press To end the call, press To Select the Way of Dialing After entering a phone number, press [Dial], use...

[Page 27: Answering A Call](#)

Answering a Call Press to answer the call. To end the call, press On-screen display for Incoming calls Phone The caller notifies his/her phone number number. If the caller is already saved in the Address book, his/her name or image is also displayed.

[Page 28: Calling Back \(Dialed/Received\)](#)

Calling Back (Dialed/Received) <Example> Calling back from Received log Press in the standby screen. Received calls log is displayed. to select a desired number and press Phone starts dialing the phone number you selected. ;To call back to a number from dialed calls log, press in the standby screen.

[Page 29: Adjusting The Caller's Voice Volume](#)

Adjusting the Caller's Voice Volume Press during a call. The volume can be adjusted in 5 levels. turns the volume up turns the volume down...

[Page 30: Adjusting The Ringer Volume](#)

Adjusting the Ringer Volume Press in the standby screen. to select "Functions" and press [Select]. to select "Sound/Vibration" and press [Select]. to select "Incoming Call" and press [Select]. The actual volume is displayed in incoming call setting screen.

[Page 31](#) to select "Volume" and press [Select]. The volume can be adjusted in 5 levels. turns the volume up turns the volume down ;To confirm the volume, press [Confirm]. ;To mute the ringer, set the volume to S (OFF). ;To set Step down/Step up, press Step down : The volume turns down step by step.

[Page 32: Changing The Ringer Type](#)

Changing the Ringer Type <Example> Setting the ringer type in "Original" After the step 4 on page 28, to select "Sound" and press [Select]. to select "Original" and press [Select]. Ringer list is displayed. ;To confirm the selected ringer, press [Confirm].

[Page 33: Setting The Silent Mode](#)

Setting the Silent Mode When the silent mode is set, your cellphone vibrates to notify you of incoming calls and records the caller's message in the In-Phone Ans Machn when you cannot answer a call. Press for more than one second in the standby screen.

[Page 34: Using The In-Phone Ans Machn](#)

Using the In-Phone Ans Machn When the In-Phone Ans Machn is set, you can play answering message and record caller's message. Setting the In-Phone Ans Machn Press for more than one second in the standby screen. In-Phone Ans Machn is set and appears in the standby screen.

[Page 35](#) Playing Back the Recorded Messages When a message is recorded in the In-Phone Ans Machn, the standby screen notifies you. (Mesgs) and the number of recorded messages are displayed. to select (Mesgs) and press Playback screen is displayed. ;To delete a message, press [Delete].

[Page 36: Using Overseas](#)

Using Overseas You can use the A5514SA overseas with global functions. Setting Area (Country) Press in the standby screen. to select "Global Functions" and press [Select]. to select "Roam. Area Setup" and press [Select]. to select an area (country) and press...

[Page 37](#) Calling to Japan from Overseas From the standby screen, enter a phone number and press [Submenu]. to select "Intl. Call:toJapan" , press [Select], and press ;Although the preferred roaming list (PRL) is already stored in the phone at the time of purchase, the list may be updated several times a year.

[Page 38: Address Book](#)

Address Book Saving to the Address Book You can save phone numbers to which you call frequently, names, and E-mail addresses. <Example> Saving a name, phone number and E-mail address less for more than one second in the standby screen. Address book registration screen is displayed.

[Page 39](#) Enter a phone number and press [Set]. ;Enter the area code when saving a regular phone number. to select a type of phone number and press [Select]. The icon of selected type is displayed. ;If you do not enter E-mail address, go to step 10.

[Page 40](#) Press [Set]. Pop-up screen which indicates Memory No. is displayed. Press [Complete]. Saving to the Address Book is completed. ;Up to 1000 entries can be saved. ;You can also save some information such as group, image and address. ;An entry can contain up to 3 phone numbers and 3 E-mail addresses. ;The smallest available memory number from 000 to 999 is automatically assigned.

[Page 41: Making A Call From The Address Book](#)

Making a Call from the Address Book Press in the standby screen. Address book list is displayed. to select a person to call and press ;Use to select the number 1 to 3 when the entry has some numbers. Press...

[Page 42: Editing An Entry In The Address Book](#)

Editing an Entry in the Address Book From the standby screen, press , use to select an entry to edit, and press [Select]. Address book detailed screen is displayed. Press [Submenu], use select "Edit" and press [Select]. Address book registration screen is displayed.

[Page 43: Saving From Dialed/Received Log](#)

Saving from Dialed/Received Log <Example> Saving from Received log From the standby screen, press , use to select an entry to save, and press [Submenu]. to select "Save to AddBk." and press [Select]. to select "New" and press [Select]. Address book registration screen is displayed.

[Page 44: Setting A Pair Person](#)

Setting a Pair Person You can select 5 persons from saved entries in the Address Book and set them as pair persons. This function allows you to call or send mail easily to them. Press in the standby screen. Pair menu is displayed. to select a number, to select "Save..."

[Page 45: Making A Call To A Pair Person](#)

Making a Call to a Pair Person Press in the standby screen. Pair menu is displayed. to select a person to call, to select "Phone" and press [Select]. ;You can also send E-mail and C-mail.

[Page 46: Mail About E-Mail](#)

* Sending or receiving mails with attached file may take more time than usual, depending on its size or radio wave condition. E-mail is sent using an E-mail address. (Ex.) ezweb.ne.jp Send E-mail can be sent to other cellphones or personal computers that support E-mail. A5514SA...

[Page 47: Creating And Sending An E-Mail](#)

Creating and Sending an E-mail Press in the standby screen. E-Mail Menu is displayed. to select "Create New" and press [Select]. Create Mail screen is displayed. to select , press [Edit] and press [Edit]. Input Address screen is displayed. to select "Go To Address Book"...

[Page 48](#) to select a recipient, press [Select] and press [Select]. ;Use to select 1 to 3 when the entry has some E-mail addresses. Press [Finish]. Press [Complete]. E-mail address is entered. to select and press [Edit]. Subject input screen is displayed. Enter a subject and press [Set].

[Page 49](#) to select and press [Edit]. Body text input screen is displayed. Enter a body text and press [Set]. Body text is entered. Press [Send]. Select Send Method screen is displayed. ;See "Using Photo Mail" (p.61) about sending a Photo Mail. "My Pictograph"...

[Page 50: Reading A Received E-Mail](#)

Reading a Received E-mail (E-Mail) and the number of E-mail are displayed. to select (E-Mail) and press Inbox screen is displayed. ;The color is changed and with the number of E-mail is displayed when the folder has a new mail. to select “...

[Page 51](#) How to view a received mail Mail' s sender Received date and time Mail' s subject Body text Attached file Displaying an E-mail in Inbox From the standby screen, press , use to select “Inbox” , and press [select]. Inbox screen is displayed. Follow the steps 2 to 3 on page 48 to display a mail.

[Page 52: Replying To A Received E-Mail](#)

Replying to a Received E-mail After the step 3 on page 48, press [Reply]. Create Mail screen is displayed. The recipient is entered and the subject and body text of the received mail is quoted. ;Subject is prefixed with “Re:”. ;Subject can be edited.

[Page 53: Blocking Junk Mail](#)

Blocking Junk Mail Using E-mail, you may receive mails from unknown persons, or unwanted solicitation mails which are called “Junk Mail” .The following ways are available for preventing arrival of junk mail. Mail Filter Press in the standby screen. Select “E-Mail Settings” and press [Select] Select “Other Settings”...

[Page 54: About C-Mail](#)

) or phone numbers in the C-mail body text. This function is valid by default. What do you C-mail is sent using a phone number. want for dinner? (Ex.) 090-0001-x x x x C-mail can be sent to au cellphones that support C-mail I want A5514SA hamburg steak...

[Page 55: Creating And Sending A C-Mail](#)

Creating and Sending a C-mail Press for more than one second in the standby screen. C-Mail Menu is displayed. to select “Create New” and press [Select]. Create Mail screen is displayed. to select and press [Edit]. Input Address screen is displayed. to select “Go To Address Book”...

[Page 56](#) to select a recipient and press [Select]. ;Go to step 7 when the entry has only one phone number. ;Use to select the number 1 to 3 when the entry has some phone numbers. Press [Select]. to select and press [Edit].

[Page 57: Reading A Received C-Mail](#)

Reading a Received C-mail When a C-mail is received, the standby screen notifies you. (C-Mail) and the number of E-Mail are displayed. to select (C-Mail) and press Received mail is displayed. ;The newest mail is displayed when you have some new mails. You can display a previous or next mail by pressing ;To reply to the sender, press [Reply].

[Page 58: What You Can Do With The Camera](#)

Camera What You Can Do with the Camera Take photos and movies You can take photos and movies with this 1.31-megapixel camera. Edit You can edit taken photos or movies as you like, by adding words or images on them. I am John I am John I am John...

[Page 59](#) 96×80 dot size Medium size 128×96 dot size Large size 176×144 dot size is the same size as the main display of A5514SA. * The default value is for the mode for taking photo, and for the mode for recording movie.

[Page 60: Taking A Photo](#)

Taking a Photo From the standby screen, press , use to select “Camera” , and press [Select]. Camera functions are displayed. to select “Photo” and press [Select]. ;To switch to movie, press [Movie]. Press [Shoot]. Shutter sounds and taken photo is displayed.

[Page 61: Recording A Movie](#)

Recording a Movie After the step 1 on page 58, to select “Movie” and press [Select]. ;To switch to photo, press [Photo]. Press [Rec.]. Shutter sounds and starts recording. Recording is finished after 15 seconds or by pressing [Stop] while recording. ;To cancel and start recording again,

press [Cancel].

[Page 62](#) Viewing Photos or Movies <Example> Viewing a taken photo From the standby screen, press , use to select “Data Folder” , and press [Select]. to select “Photo Folder” and press [Select]. Photo Folder list is displayed. ;All photos are saved in “All Photo” . to select a folder which contains a photo to view, and press...

[Page 63: Sending Photos Or Movies By E-Mail](#)

Sending Photos or Movies by E-mail After taking a photo (follow the steps 1 to 3 on page 58) or recording a movie (follow the steps 1 to 2 on page 59), press [E-Mail]. Create Mail screen appears with a taken photo or recorded movie attached.

[Page 64: About Ezweb](#)

Setting for E-mail and EZweb” (p.20) about the initial setting. EZweb is an information service for enjoying the Internet on your cellphone. You can obtain Chaku-Uta ® and the latest news from information sites. ® Chaku-Uta Wallpaper Information sites Games Latest Weather news report Traffic information Fair A5514SA...

[Page 65: Accessing Sites](#)

Accessing Sites Displaying the EZ Top Menu From the standby screen, press , use select “Top Menu” , and press [Select]. EZ Top Menu is displayed. au style Introduces au-recommended information and sites. (Valuable Information) Offers gifts and free valuable information to EZweb service subscribers. (Latest information) Introduces new topics and daily information such as weather and fortunetelling.

[Page 66](#) Basic Operation while Using EZweb ;You can display the next screen by using to select an item and pressing ;You can return to the previous screen by pressing , and you can go back to EZ Top Menu by pressing it for more than one second. ;You can scroll the screen by pressing (Up) or (Down) when it continues.

[Page 67: Downloading Chaku-Uta](#)

® Downloading Chaku-Uta and Set It as a Ringer for Incoming Calls ® You can download Chaku-Uta from information site and set it as a ringer for incoming calls. You can also download wallpaper and set it to the standby screen and others. From EZ Top Menu, use select “...

[Page 68](#) Press [Play]. Downloaded data is played. Press [Set]. Select Set Target screen is displayed. to select “Sound Setup” and press [Select]. Registration destinations of the selected target are displayed. to select “Incoming Call” and press [Select]. Downloaded data is set as ringer for “Incoming Call” . ;...

[Page 69: Registering Frequently-Accessed Sites](#)

Registering Frequently-Accessed Sites You can access information sites easily by registering frequently- accessed sites to “Favorite Site” . Registering to Favorite Site Display a site you want to register and press [BsrMnu]. Browser menu is displayed. to select “New bookmark” and press [OK].

[Page 70](#) Viewing a Site Registered to Favorite Site Press in the standby screen. EZ Menu is displayed. to select “Favorite Site” and press [Select]. Favorite site list is displayed. to select a site you want to view and press [Select]. You are connected to the selected information site.

[Page 71: Inquiring Toll](#)

Inquiring Toll From the standby screen, press in turn. to select a menu you want to confirm and press [OK]. ;The on-screen call or communication charge should be used only as a guide.

[Page 72: What You Can Do With Eznavi](#)

“Position Search” allows you to confirm the current position of your kid This service allows you to confirm with your A5514SA the current position of other au cellphones that support Position Search. “ (Position Search Mail)” (charge-free) allows you to send a message to the other au cellphone to ask the position.

[Page 73](#) “EZ Navi Walk” is useful when you go out Various useful menus can be displayed

when you go out. The latest news and recommended information * “ ” provides a demo of voice navigation. Searchable source of train transfer and timetable information Voice navigation to a destination and “My Spot”...

[Page 74: What You Can Do With Security Navi](#)

What You Can Do with Security Navi What You Can Do with Position Search You can easily confirm the current position of your kid in a map when he/she has not come home yet and you are worried about if he/she got lost.

[Page 75](#) What You Can Do with Area Message When your kid enters a (or goes outside) preset area during a specified period of time, a message with alarm is sent automatically from his/her cellphone to your cellphone. Area Message You can set your mind at ease without worrying about your kid when he/she is coming from after-school activities.

[Page 76: How To Use The Ez Fm](#)

You can use the A5514SA as FM radio. How to Use the EZ FM Connecting SANYO Flat-type Stereo Earphones 04 Open the cover of Flat-type Earphone-Microphone Jack and connect SANYO Flat-type Stereo Earphones 04. Flat-type Earphone-Microphone Jack SANYO Flat-type Stereo Earphones 04...

[Page 77: Volume Adjustment](#)

How to Operate ;EZ FM screen Press , use to select an item and press Connection to the EZ FM ;Pressing it connects to the EZ FM sites. Frequency ;Pressing tunes the frequency. To tune automatically, press it for more than one second . NOW ON AIR information ;Normally, a station name is displayed.

[Page 78: About Infrared Communication](#)

Infrared Communication About Infrared Communication This function allows you to exchange data in the Address Book and Profile, or photos and movies in Data Folder among au cellphones that support the infrared communication function. When Making Infrared Communication... To make infrared communication, ensure that the receiver gets ready before the sender sends data.

[Page 79: Using Infrared Communication](#)

Using Infrared Communication Receiving Data <Example> Receiving one data From the standby screen, press , use to select “Tools”, and press [Select]. to select “Rem Cont/Infrared” and press [Select]. to select “Recv IR Data” and press [Select]. Data is received. After receiving data, use select “Yes”...

[Page 80: Sending Data](#)

Sending Data <Example> Sending Profile Data After displaying Profile (See p.21), press [Detail]. Press [Submenu]. to select “Send IR Data” and press [Select]. Data is sent.

[Page 81](#) ;Copyrighted data cannot be sent or received. ;Some data may not be sent or received depending on the other cellphone even if it supports the infrared communication function. ;Infrared communication may not be made in direct sunlight, under fluorescent light, or near other infrared equipment.

[Page 82: About Smart Mode](#)

Smart Mode About Smart Mode Setting Smart Mode allows you to simplify operation to the frequently used functions such as phone function, Address Book, Camera, Mails, and EZweb. Setting Smart Mode Press in the standby screen. to select “Smart Mode” and press [Select].

[Page 83](#) Canceling Smart Mode Press in the standby screen. Smart Menu is displayed. to select “Functions” and press [Select]. to select “Cancel Smart Mode” and press [Select]. Confirmation screen is displayed. to select “Yes” and press [Select]. Smart Mode is canceled. ;Setting Smart Mode may change what you have set in normal mode.

[Page 84](#) Screen Display during Smart Mode Indication in the Standby Screen Missed Call New E-mail* New C-mail* New memo in the In-Phone Ans Machn To Smart Menu Silent Mode is ON is displayed when you have a mail from pair person. Displaying Guide In Smart Mode, a guide of a

focused item is displayed at the bottom of the screen.

[Page 85](#) Smart Menu In Smart Mode, functions are accessed from Smart Menu. Press in the standby screen. Smart Menu is displayed. Phone Address Book Save to or search in the Address Book Rcvd Calls Log Display received calls history Dialed Log Display dialed calls history In-Phone Ans Machn Set/Release the In-Phone Ans Machn...

[Page 86: Using Smart Mode](#)

Using Smart Mode Saving to the Address Book In Smart Mode, you can save names, readings, phone numbers, and E-mail addresses. From Smart Menu, use select "Phone" , press [Select], use to select "Address Book" , and press [Select]. Address book list is displayed. Press [New].

[Page 87](#) to select "Manually" and press [Select]. Enter a phone number and press [Set]. The ways of entering E-mail address are displayed. ;Enter the area code when saving a regular phone number. ;If you do not enter E-mail address, go to step 8 by pressing [Next].

[Page 88](#) Creating and Sending an E-mail From Smart Menu, use select "Mail" and press [Select]. Select mail type screen is displayed. to select "E-Mail" and press [Select]. E-mail Menu is displayed. to select "Create New" and press [Select]. Enter Address screen is displayed. to select "Go To Address Book"...

[Page 89](#) Enter a subject and press [Set]. Body text input screen is displayed. Enter a body text and press [Set]. Create Mail screen is displayed. ;To edit a focused item, press [Edit]. ;To save the created mail in Outbox, press [Save]. Press [Send].

[Page 90](#) Taking a Photo/Recording a Movie Taking a Photo From Smart Menu, use select "Camera" and press [Select]. Camera functions are displayed. to select "Photo" and press [Select]. ;To switch to movie, press [Movie]. ;To change the photo size, press [Mode]. Press [Shoot].

[Page 91](#) Recording a Movie After the step 1 on page 88, to select "Movie" and press [Select]. ;To switch to photo, press [Photo]. ;To change the movie size, press [Mode]. Press [Rec.]. Shutter sounds and starts recording. Recording is finished when the maximum record time has passed, or by pressing [Stop] while...

[Page 92: About Inputting Characters](#)

Inputting Characters About Inputting Characters It is necessary to input characters when saving an entry to the Address Book, or creating an E-mail, for instance. Kanji, Hiragana, Katakana, English, numbers, pictograms, emoticons, symbols, and phrases can be inputted. Changing the Character Input Mode Pressing in a text input screen displays a list of character input mode.

[Page 93](#) Key Assignment of Characters Several characters are assigned to one key. Pressing a key repeatedly displays a character you want to input. Input Kana/Kanji Katakana English Number mode (Full-sized) (Full-sized/Half-sized) (Full-sized/Half-sized) (Full-sized/Half-sized) Voiced sound symbol Semi-voiced sound symbol Switch between uppercase and lowercase Switch to a list of pictograms, emoticons and symbols Enter (Linefeed)

[Page 94: How To Input Characters](#)

How to Input Characters Inputting Kana or Kanji <Example> Inputting " " in a name input screen of the Address Book In a text input screen, press 5 times press once (makes a cursor move) press once press (voiced sound symbol) press twice ;You can input a character by pressing a key.

[Page 95](#) Inputting English Characters <Example> Inputting "tottori" in an E-mail address input screen of the Address Book In a text input screen, press once press 3 times press once (makes a cursor move) press once press 3 times press 3 times press 3 times ;To consecutively input characters assigned to a same key, move the cursor to the right.

[Page 96](#) Inputting Phrases <Example> Inputting "@ezweb.ne.jp" in an E-mail address input screen Press [Submenu] in a text input screen. to select "Phrases" and press [Select]. Groups of phrases are displayed. to select " (Internet)" and press [Select]. A list of phrases is displayed. to select "@ezweb.ne.jp"...

[Page 97](#) Inputting Pictograms, Emoticons and Symbols <Example> Inputting a pictogram Press in a text input screen. A list of input mode is displayed. ...Pictogram ...Emoticon ...Symbol to select and press [Select]. A list of pictograms is displayed. ;To change categories, press ;To switch between pictograms, emoticons and symbols, press ;To input consecutively, press...

[Page 98: Troubleshooting](#)

Troubleshooting Symptom What to check Solution Page The power Did you press for more than Press for more than one cannot be one second? second. turned on. Is the battery pack exhausted? Charge the battery pack. Is the battery pack inserted Insert the battery pack properly.

[Page 99: Before Losing](#)

Set the operating condition of the remote auto lock in case that you lose the A5514SA. Receiving a specified number of calls from a specified number in a specified time locks automatically your A5514SA, which prevents other person' s use.

[Page 100](#) ;Even if the receiver answers when you make a call to set the remote auto lock, it is also counted as Number of Rings. ;Up to 3 phone numbers can be specified. ;Remote auto lock cannot be launched when your A5514SA is powered off or when it cannot receive radio waves.

[Page 101: Other Features](#)

Other Features The A5514SA has other useful features which are not presented in this Basic Manual. Standby Screen Settings You can set photos taken by the camera and images obtained via the Internet or E-mail as the standby screen. E-mail/C-mail Settings You can set the E-mail/C-mail environment.

[Page 102: Index](#)

Index Number 184+Dial24 E-mail 186+Dial24 Creating 45 E-mail Menu45 Initial Setting20 Reading 48 AC Adapter10,12 Receiving48 Address Book Replying 50 Editing 40 Sending45,61,86 Making a Call

[Page 103](#) Reception State13 Remote Auto Lock97 Ringer Adjusting the Volume....28 Kana/Kanji 92 Changing30 Key Functions14 SANYO Flat-type Stereo Earphones 04 .. 10,74 Language 18 Sending C-mail53 E-mail45 Mail Photo/Movie61 C-mail