



# User's Guide To Operations; Ups Startup And Shutdown; Button Operation - Toshiba 1000 Series User Manual

Reliability in motion single phase 1000/1200 va



1

2

3

Table Of Contents

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
52  
53  
54  
55  
56  
57  
58  
59  
60

--

---

•

[Table of Contents](#)

- 

Troubleshooting

•

## Bookmarks







## 5. User's Guide to Operations

Normal ongoing ~~TOSHIBA~~ UPS operation requires little or no user input. Startup and shutdown requirements of the user are discussed in this section.

### 5.2 UPS Startup and Shutdown

#### Starting the UPS

- 

Ensure that installation is correct and that the input power cable is connected to a properly grounded outlet.

- 

Start the UPS by pressing the On/Off button on the front panel.

- 

The UPS will start the inspection of internal functions, main synchronization, and inverter startup. A successful completion allows for output power via the

outlets.

- 

During the startup inspection the LCD will display Ready On. The LED will light up when output power has started and the LCD display will show Line Mode.

- 

Switch on the load.

### Shutting Down the UPS

- 

Shut off and disconnect the load.

- 

Press and hold the UPS On/Off button for five seconds. The alarm will sound and the UPS will shut down.

- 

The LCD will momentarily display UPS OFF.

Note: In emergency situations the EPO should be used.

## 5.3 Button Operation

1. "

" is the Load ON/OFF button.

(a) Press and hold the Load ON/OFF button for at least 3 seconds to turn on the UPS.

(b) While the UPS is operating, press and hold the Load ON/OFF button for at least 3 seconds to turn off the UPS.

20

[Previous Page](#)  
[Next Page](#)

1  
...  
39  
40  
41  
42  
43  
44  
45  
46

## Related Manuals for Toshiba 1000 Series

### [Laptop Toshiba 1000-S157 User Manual](#)

1000-s157 user's guide (246 pages)

### [Controller Toshiba V Series User Manual](#)

Integrated controller, loop controller (158 pages)

### [Laptop TOSHIBA Satellite 1000 Series User Manual](#)

Toshiba satellite portable personal computer (126 pages)

### [Laptop Toshiba Satellite 1000 User Manual](#)

Toshiba satellite 1000 notebook (126 pages)

### [UPS Toshiba 1000 SERIES User Manual](#)

(64 pages)

### [UPS Toshiba RELIABILITY IN MOTION 1000 Series User Manual](#)

Single phase 1000 va to 3000 va uos (54 pages)

### [UPS Toshiba UT1A1A010C6 User Manual](#)

User guide (51 pages)

### [UPS Toshiba 1000 Series Installation Instructions](#)

Toshiba power supply user manual (4 pages)

### [UPS Toshiba 1000 SEREIS Brochure & Specs](#)

1000 series (2 pages)

### [UPS Toshiba 1000 Series Specification](#)

Ups rack-mount 2u rail kit (2 pages)

### [UPS Toshiba 1500 Series Operation Manual](#)

(32 pages)

### [UPS Toshiba 1500 Plus Series Operation Manual](#)

6/.8/1.0 kva 220v uninterruptible power system (31 pages)

### [UPS Toshiba 1600 Series Instruction Manual](#)

Single phase - 2.4/3.6/6/8 kva plus (49 pages)

### [UPS Toshiba 1600XP SERIES Installation And Operation Manual](#)

1600xp series single phase - 3.6/6/8/10/14/18/22 kva (100 pages)

### [UPS Toshiba 1600XPi Series Installation And Operation Manual](#)

8-22kva battery cabinet (23 pages)

### [UPS Toshiba 1800 Series User Manual](#)

1800 series uninterruptible power systems (ups) 1500/2000/2400va (52 pages)

## Related Content for Toshiba 1000 Series

### [G9000 SERIES Appendix A - Installation Planning Guide \(Ipg\)](#)

Toshiba G9000 SERIES

### [4400 Series Appendix C - Installation Planning Guide](#)

Toshiba 4400 Series

### [4300 series Appendix A - Installation Planning Guide](#)

Toshiba 4300 series

[431A 431M - Mbs Cabinet Installation Guide](#)

Toshiba 431A

[4200FA XT User Notification Leds](#)

Toshiba 4200FA XT

[4200FA User Notification Leds](#)

Toshiba 4200FA