



Toshiba AT10LE-A Series User Manual

1	
Table Of Contents	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	
17	

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103

•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

--

Quick Links

[1 Table of Contents](#)

[2 Check the Components](#)

[3 Charging the Battery](#)

[Download this manual](#)



TOSHIBA User's Manual

Leading Innovation >>>

TOSHIBA AT10LE-A/AT10PE-A

series **TOSHIBA**

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba AT10LE-A Series

[Tablet Toshiba AT1S5-SP0101M User Manual](#)

7" tablet (123 pages)

[Tablet Toshiba AT105-SP0160M User Manual](#)

At105-sp0160m user's guide (132 pages)

[Tablet Toshiba AT105-SP0102C Manual Del Usuario](#)

User guide 2 (142 pages)

[Tablet Toshiba PDA01U-00501F Brochure](#)

Brochure (3 pages)

[Tablet Toshiba Thrive AT105-T108S Specifications](#)

Toshiba thrive tablet detailed product specification (3 pages)

[Tablet Toshiba PDA01U-00101F Brochure](#)

Brochure (3 pages)

[Tablet Toshiba Thrive AT105-T10162 Specifications](#)

Toshiba thrive tablet detailed product specification (3 pages)

[Tablet Toshiba Thrive AT105-T1016G Specifications](#)

Toshiba thrive tablet detailed product specification (3 pages)

[Tablet Toshiba Thrive 32GB User Manual](#)

Toshiba thrive 32gb: user guide (131 pages)

[Tablet Toshiba Thrive 10.1 8GB User Manual](#)

Toshiba thrive 10.1 8gb: user guide (131 pages)

[Tablet Toshiba AT100 User Manual](#)

(86 pages)

[Tablet Toshiba AT1S0 User Manual](#)

(82 pages)

[Tablet Toshiba Excite Pure AT10 User Manual](#)

A series (132 pages)

[Tablet Toshiba AT10-B User Manual](#)

(86 pages)

[Tablet Toshiba AT10-C User's Information Manual](#)

(18 pages)

[Tablet Toshiba Excite Write Specifications](#)

(3 pages)

Summary of Contents for Toshiba AT10LE-A Series

[Page 1](#) User's Manual TOSHIBA AT10LE-A/AT10PE-A series...

[Page 2: Table Of Contents](#)

Table of Contents Chapter 1 Legal & Regulatory Copyright1-1 Disclaimer
.....1-1 Trademarks 1-2 H.264/AVC, VC-1 and MPEG-4 License Notice
.....1-2 FCC information1-3 CE compliance1-4 Working environment
.....1-4 Additional environments not related to EMC1-5 REACH - Compliance
Statement

[Page 3](#) Email 5-7 Gallery5-9 The Google Play™ Music App

.....5-10 People	5-10 Service Station	5-11 TOSHIBA Media Player
..... 5-13 TOSHIBA File Manager	5-14 TOSHIBA TruNote	5-17 TOSHIBA TruCapture
.....5-17 Online Manual	5-18...	

Page 4 Chapter 8 Troubleshooting Problem solving process	8-1 Hardware and system checklist	8-2 TOSHIBA Support	8-4 Chapter 9 Specifications Physical Dimensions	9-1 Environmental Requirements	9-1 Chapter 10 Information for Wireless Devices Wireless Technology Interoperability	10-1 CAUTION about Wireless Devices
--	---	---------------------------	--	--------------------------------------	--	---

[Page 5: Legal & Regulatory Copyright](#)

Chapter 1 Legal & Regulatory Copyright © 2013 by TOSHIBA Corporation. All rights reserved. Under the copyright laws, this manual cannot be reproduced in any form without the prior written permission of TOSHIBA. No patent liability is assumed, with respect to the use of the information contained herein.

[Page 6: Trademarks](#)

Until the date that is three years after you acquired the Software, you may obtain a copy of the source code corresponding to the binaries for GPL- licensed file by sending a request to TOSHIBA customer service at [[http:// support.toshiba-tie.co.jp/android/index_e.htm](http://support.toshiba-tie.co.jp/android/index_e.htm)], and TOSHIBA will send you a link to such source code.

[Page 7: Fcc Information](#)

Only peripherals complying with the FCC class B limits may be attached to this equipment. Operation with non-compliant peripherals or peripherals not recommended by TOSHIBA is likely to result in interference to radio and TV reception. Shielded cables must be used between the external devices and the device's Universal Serial Bus (USB 2.0) ports and microphone/...

[Page 8: Ce Compliance](#)

Residential, Commercial & Light Industry Environment. Any other working environment has not been verified by Toshiba and the use of this product in these working environments is maybe restricted or cannot be recommended. Possible...

[Page 9: Additional Environments Not Related To Emc](#)

Medical environment: The compliance to the Medical Product Directive has not been verified by Toshiba, therefore this product cannot be used as a medical product without further verification. The use in usual office environments e.g. in hospitals should be no problem if there is no restriction by the responsible administration.

[Page 10: Following Information Is Only Valid For Eu-Member States](#)

For more detailed information about the collection and recycling programmes available in your country, please visit our website (<http://eu.computers.toshiba-europe.com>) or contact your local city office or the shop where you purchased the product. Disposal of batteries and/or accumulators...

[Page 11: Following Information Is Only For India](#)

Note that Canadian Department of Communications (DOC) regulations provide, that changes or modifications not expressly approved by TOSHIBA Corporation could void your authority to operate this equipment. This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

[Page 12](#) The number of possible pixel failures of your display is defined according to ISO 9241-307 standards. If the number of pixel failures is less than this standard, they will not be counted as defect or failure. Battery is a consumption product, since the battery time depends on the usage of your tablet.

[Page 13: Introduction](#)

Introduction Welcome and thank you for choosing a TOSHIBA product. About the guide For your convenience, your TOSHIBA product is furnished with two guides: a Quick Start Guide, and this comprehensive PDF User's Manual We recommend making a backup of this User's Manual in case of future reference.

[Page 14: Chapter 3 Getting Started](#)

Some of the features described in this manual may not function properly if you use an operating system that was not pre-installed by TOSHIBA. Check the components Check to make sure you have all of the following items:...

[Page 15](#) Figure 3-1 Grand tour of the tablet 1. Display screen 2. Web Camera (front) 3. Ambient light sensor (not shown) 4. Microphones 5. Power button 6. Headphone/Microphone combo jack 7. Volume down/up button 8. Memory media slot 9. SIM card slot* 10.

[Page 16](#) able to manually adjust the LCD brightness during the auto dimming period. Camera Your tablet is equipped with a front Web Camera and a back camera used for recording video or taking photographs. Both cameras may have different resolutions. Ambient light sensor Ambient light sensor can detect the light quality and intensity outside and can use this information to automatically adjust the display screen...

[Page 17](#) Memory media slot This slot lets you insert a micro SD™ Card which enables you to transfer data from devices, such as digital camera, onto your tablet. Please refer to the Memory media slot section in "Optional Accessories" chapter for details. Keep foreign metal objects, such as screws, staples and paper clips, out of the memory media slot.

[Page 18: Hardware](#)

Hardware This section identifies various components and the hardware of the tablet - it is recommended that you become familiar with each before you operate the tablet. The actual specifications may vary depending on the model you purchased. Content that is copyright protected or has limited access rights, cannot be played on this tablet.

[Page 19: Using The Tablet For The First Time](#)

Display The tablet's internal display panel supports high-resolution video graphics and can be set to a wide range of viewing angles for maximum comfort and readability. Display panel 25.7cm (10.1") LCD screen configured with the following resolution: 2560 horizontal x 1600 vertical pixels Graphics controller The graphics controller maximizes display performance.

[Page 20](#) Always use the TOSHIBA AC adaptor that was included with your tablet, or use AC adaptors specified by TOSHIBA to avoid any risk of damage to the tablet. Use of an incompatible AC adaptor could cause fire or damage to the tablet possibly resulting in serious injury.

[Page 21: Turning On The Power](#)

Never place your tablet or AC adaptor on a wooden surface, furniture, or any other surface that could be marred by exposure to heat since the tablet base and AC adaptor's surface increase in temperature during normal use. Always place your tablet or AC adaptor on a flat and hard surface that is resistant to heat damage.

[Page 22: Initial Setup](#)

Figure 3-4 Turn on the tablet 1. Power button Initial Setup The Setup Screen will be the first screen displayed when you turn on the power. Setup your tablet according to the following steps: Choose your preferred system language and tap Start to begin with the initial setup process.

[Page 23: Care And Use Of The Battery](#)

Never turn off the power while an application is running. Doing so could cause loss of data. Never turn off / disconnect the power , or remove external storage media during data read/write. Doing so can cause data loss. Turn off or remove any peripheral devices connected to the tablet. Press &...

[Page 24: Charging The Battery](#)

Celsius. Otherwise, the electrolyte solution might leak, battery performance might deteriorate and the battery life might be shortened. Never try to remove or replace the battery by yourself which may possibly result in serious injury. Please contact an authorized Toshiba service provider, if necessary. Charging the battery When the battery power becomes low, you must charge it to avoid losing any data.

[Page 25](#) Battery type Time Battery (2 cell, 33Wh) about 9.5 hours (in use) about 7 days (sleep mode) Please be aware that the battery exhausted time will be affected by how you are using the tablet. Battery charging notice The battery may not begin charging immediately under the following conditions: The battery is extremely hot or cold (if the battery is extremely hot, it might not charge at all).

[Page 26: Basics](#)

Chapter 4 Basics This chapter describes the basic operations of your tablet and the Home screen. Using the touch screen You can use your finger to manipulate icons, buttons, menu items, the onscreen keyboard, and other items on the touch screen. Simply tap your finger on the touch screen to act on items on the screen, such as application and settings icons, to type letters and symbols using the onscreen keyboard, or to tap onscreen buttons.

[Page 27](#) Figure 4-1 Stylus Pen 1. Eraser button 2. Side button 3. Pen point Eraser button You can use this button as an eraser in some applications that support eraser function. These applications enable you to select and delete notes or sketches with a one-touch action. Side button You can use this button as function button.

[Page 28: Pen Actions](#)

Do not continue to use a broken pen point as this may result in scratching of the display screen. TOSHIBA is not liable for any problems arising on the products due to the use of the Stylus Pen in an environment where the above conditions are not satisfied or because of its use by unspecified number of users.

[Page 29: Getting To Know The Home Screen](#)

When the pen tip breaks, replace it with one of the refills delivered with the Stylus Pen. When these refills have run out, you can purchase a new pen set from a TOSHIBA authorized dealer.

[Page 30: Home Screen Overview](#)

Figure 4-3 Home screen 1. System bar 2. App shortcuts 3. All Apps 4. Memo button* 5. Favorite tray 6. Back 7. Home 8. Recent apps * Provided with some models. Item Description System bar The System bar is located permanently at the top of the screen.

[Page 31: Opening And Switching Applications](#)

The Back, Home and Recent apps icons may fade away or shrink into dots after a short period of time without operation, depending on which apps you are using. To bring them back, tap their locations. Swipe left or right to see more Home screen panels. Use panels to organize your widgets and app shortcuts.

[Page 32: Quick Settings](#)

Status icons The icons in the right of the system bar indicate the status of your tablet, such as current time. Notification icons The icons in the left of the system bar indicate different types of notifications. In addition to system notification icons, applications you installed on your tablet may use their own notification icons.

[Page 33: Managing Notifications](#)

You can also open the Quick Settings panel in the lock screen if Screen lock is set to Slide. Managing Notifications Notification icons report the arrival of new messages, calendar events, and alarms, as well as ongoing events. When you receive a notification, its icon appears in the left of System bar. You can open the Notifications panel to view a list of all your notifications.

[Page 34: Locking Your Screen](#)

Power and Volume down button for about 2 seconds. The tablet will show the preview for a few seconds and save it. All the screenshots you captured can be viewed in Gallery or TOSHIBA File Manager. For more information, please refer to Chapter 5, Applications.

[Page 35: Removing An Item From The Home Screen](#)

Drag the resize handle to resize the widget. The number of widgets you can add depends on the size of each widget. If there is not enough room, the widget can't be added. Moving an item on the Home screen To move an item on the Home screen, follow the steps below: Press &...

[Page 36: Changing The Screen Orientation](#)

Changing the Screen Orientation You can change the screen orientation from Landscape to Portrait mode by rotating the tablet sideways (and vice versa). The screen orientation automatically changes according to the rotation angle detected. You can lock the auto rotation and use the tablet always in Portrait or Landscape mode.

[Page 37: Factory Reset](#)

Depending on your settings, your tablet will be recognized as a removable MTP (Media Transfer Protocol) device or PTP (Picture Transfer Protocol) device allowing you to access its contents from a computer. If your computer does not support MTP, try using PTP instead. To remove this tablet from a computer: Make sure all file operations are finished.

[Page 38: Analog Clock](#)

Chapter 5 Applications This chapter describes the usage of applications & widgets. Your tablet has some Google Mobile™ services installed and the availability of the applications may vary depending on your country or region. Some applications will be automatically hidden after the first power Analog clock Analog clock is a widget to display a clock on the Home screen based on the system time so that you can watch time directly.

[Page 39: Open A New Browser Window](#)

The Browser might connect to a “mobile” website by default rather than a “PC” web site. Depending on the website, if you want to access the PC website, please tap Menu () and check Request desktop site. Zoom in or zoom out on a webpage You can zoom in or out a webpage in either of the following ways.

[Page 40: Calculator](#)

Tap a page in the list to open it. View your Browser history As you browse the web, Browser will keep track of the pages you visit, to help you find your way back later. Tap the bookmark icon () at the upper right corner of the screen.

[Page 41: Calendar](#)

Open Calculator by tapping All Apps -> Calculator. Enter numbers and arithmetical operators on the basic screen. Press & hold the Calculator's display to select Copy or Cut the numbers. Tap Clear icon () to delete the last number or operator you entered.

[Page 42](#) Figure 5-1 Camera screen 1. Photo/Video options 2. Take a photo/video 3. Choose photo, video or panorama mode Panorama mode Panorama mode allows you to take multiple subsequent photos and the tablet automatically join them together to create a single image with a wide- angle view.

[Page 43: Clock](#)

Video options Similarly, in Video mode, the following options are available on video record screen. White balance (): Adjust for lighting conditions. Quick settings (): Adjust the Scene mode, Store location and Picture size. Time lapse: Choose a time interval for time lapse recording. Video quality: Tap to select the quality of the videos you take.

[Page 44: Downloads](#)

Volume buttons: Tap to open a dialog where you can choose if you want your Volume buttons to Snooze, Dismiss, or Do nothing. Setting a timer Tap the timer icon (Enter the period of time you want. Tap Clear icon () to delete the last number you entered.

[Page 45: Send An Email](#)

recently, it will display the contents of your Inbox (if you have only one account) or the Accounts screen (if you have multiple accounts). If you have configured Email to send and receive emails from more than one account, you can view all emails sent to all accounts in your Combined Inbox.

[Page 46: Gallery](#)

To edit an email account settings: Tap the icon () and select Settings. You can make any changes to general, notification or server settings from this screen. Gallery You can use Gallery

to view pictures and play videos that you've taken with the Camera, downloaded or copied onto your tablet.

[Page 47: Playing Music](#)

The app supports a wide variety of audio file formats so it can play music that you purchase from online stores, or copied from external storage and so on. For the details of supported formats, please refer to TOSHIBA Media Player in this chapter.

[Page 48: Search For A Contact](#)

If you have contacts stored in vCard format in the Internal storage, you can import them into Contacts on your tablet. You can also copy contacts from SD card by TOSHIBA File Manager. You can export contacts in vCard format to the internal storage for backup using TOSHIBA File Manager.

[Page 49: Main Window](#)

Main Window The main window of this application includes four areas: Menu, Buttons, Information and Check for Updates. Menu Tap Menu icon (), you can access the following options: Select All Applications, View Hidden Update(s), View Hidden Alert(s), View Access Agreement and About. Buttons Two buttons are displayed in this area: Software Updates: Tap to check the System and application updates.

[Page 50: Installing Updates](#)

TOSHIBA Media Player supports common multimedia playback such as video (e.g. H.264/AVC, MPEG-4), music (e.g. MP3, AAC-LC) and photo (e.g. JPEG, PNG). To open TOSHIBA Media Player, tap All Apps -> Media Player from the Home screen. User's Manual 5-13...

[Page 51: Toshiba File Manager](#)

It allows you to create, rename, copy, cut, paste or delete files and folders stored in both internal and external storage. To open TOSHIBA File Manager, tap All Apps -> File Manager from the Home screen. System files cannot be accessed by TOSHIBA File Manager.

[Page 52](#) Storage Structure The following table lists the description of each storage device icon in the Device panel. TOSHIBA File Manager only shows the storage device connected to the tablet. Name Description...

[Page 53: Basic Operations](#)

Copy, Cut and Paste Tap Copy() or Cut() in the Control panel. After TOSHIBA File Manager exits the multi-selection mode, you can redirect to a folder where to paste the selected items. Tap Paste () in the Control panel to complete the operation.

[Page 54: Toshiba Trunote](#)

Only some options are supported in MUSIC, VIDEOS and PICTURES tabs. Adding folder shortcut Folder shortcut makes it faster to access the folder. TOSHIBA File Manager is designed to create folder shortcut in the Device panel. Press & hold a folder to select it, and then tap to open the menu.

[Page 55: Online Manual](#)

The Tutorial providing the information about how to use this feature will appear. You can also find it by tapping the Menu () and selecting Tutorial on the main screen of TOSHIBA TruCapture. Online Manual Online Manual is an application to launch the pre-installed online manual (this manual) for this tablet.

[Page 56: Settings](#)

Chapter 6 Settings This chapter describes the Settings app - a quick and easy access to the global options that allows you to configure how your tablet communicates and functions. A scrollbar is displayed on the right side of the screen. This scrollbar is only used to show the position of the displaying area.

[Page 57: Wi-Fi Networks](#)

Tethering & portable hotspot settings You can share your tablet's mobile data connection with

other devices (up to 8) via USB, Bluetooth, or by turning your tablet into a portable Wi-Fi hotspot. Tap to adjust these settings. This function is only supported by 3G models. Some models support NFC (Near Field Communication) which allows you to share data between devices when they touch each other or are brought into close proximity.

[Page 58](#) Slide the Wi-Fi switch to the ON position. The tablet scans for available Wi-Fi networks and displays the names of those it finds. Secured networks are indicated with a lock icon. If the tablet finds a network that you connected to previously, it will connect to it automatically.

[Page 59: Advanced Wi-Fi Settings](#)

Proxy server settings may be required for some internal or external network connection. By default, the Wi-Fi networks you add are not configured to connect via a proxy server, but you can change that for each Wi-Fi network you've added. Proxy settings are used by Browser and may not be used by other apps.

[Page 60: Wi-Fi Direct](#)

Keep Wi-Fi on during sleep Tap this option to change the setting: Always: Stay connected to Wi-Fi always. Only when plugged in: Stay connected to Wi-Fi only when the tablet is connected to the AC adaptor. Never: never to stay connected to Wi-Fi during sleep. When your tablet supports 3G, Never option is likely to increase mobile data usage.

[Page 61: Turning Bluetooth On Or Off](#)

Turning Bluetooth on or off Open the Settings app from All Apps. Under WIRELESS & NETWORKS, tap Bluetooth. Slide the Bluetooth switch to the ON position to turn on the Bluetooth and slide left to switch OFF . Changing your tablet's Bluetooth name Your tablet has a generic Bluetooth name by default, which is visible to other devices when you connect them.

[Page 62: Mobile Networks](#)

In the list of Bluetooth devices, tap a paired but unconnected device. If the device you expected isn't displayed, tap SEARCH FOR DEVICES. When your tablet and this device are connected, this device is shown as connected in the Paired Devices list. Configuring a Bluetooth device Some Bluetooth devices have multiple profiles.

[Page 63: Data Usage](#)

When you finished, tap Save. If you have created a new APN, tap it in the APNs screen to start using it. Data usage Some of the features described in this section apply only to models with 3G modules. Data usage refers to the amount of data uploaded or downloaded by your tablet during a given period.

[Page 64: Device](#)

reaches the limit, mobile network will be turned off automatically. You will receive a notification. Managing data usage by app Some apps transfer data in the background and restricting background data usage for individual apps can sometimes be a useful way to reduce your overall data usage (however, this may also affect the app's performance or cause it to malfunction).

[Page 65](#) Wallpaper Tap to select a wallpaper source and change wallpaper. Sleep Tap to open a dialog where you can set the time of inactivity before the tablet goes to sleep. Daydream Slide the Daydream switch to the ON position. You can choose one of the following options shown on the screen when the tablet is in sleep mode.

[Page 66](#) Audio enhancement Slide the switch to the ON position to enable Audio enhancement powered by Toshiba and DTS Technologies. You can adjust audio enhancement powered by Toshiba and DTS Technologies Some contents, devices and applications may not be supported by the audio enhancement function.

[Page 67](#) The solution suppresses audio from crosswise direction. Toshiba Beamforming may reduce the volume. Uncheck this option if the volume is reduced too much. Toshiba Audio Source Filtering information Toshiba Audio Source Filtering has been designed for private use and entertainment in your home environment.

[Page 68: Internal Storage](#)

Internal storage Internal storage contains the following options: Total Space Shows the total memory space of internal storage in your tablet. Available Shows the free space of internal storage. The following options will be displayed under the current user: Apps The amount of application data of internal storage.

[Page 69: Power Management](#)

USB computer connection You can choose how the USB port works by tapping the Menu icon (and select USB computer connection. Please refer to the Connecting to a computer section for more details. Battery Battery allows you to check what is using the battery and the battery usage data.

[Page 70: Users](#)

) and select Sort by size to switch the order of the lists in Downloaded or All tabs. This tablet does not support another Operating System. TOSHIBA cannot guarantee or support applications that are installed by a user. Users You can share your tablet with family and friends. Each new user you set up here can use a separate space on the tablet with its own Home screen, account, apps, settings and so on.

[Page 71: Personal](#)

The performance and response of the tablet may slow down when background users are running applications. New users cannot be created when the storage space is not enough in the tablet. Add a user To add a user, you must be the owner. Tap the ADD USER on the top right of the user's screen.

[Page 72: Location Access](#)

Location access You can use Location access settings to configure location related settings. Location access contains the following options: Location access Slide the Access to my location switch to the ON position to allow the apps that have asked your permission to use your location information.

[Page 73](#) Encryption Encrypt tablet Tap to open a dialog where you can set numeric PIN or password to decrypt your tablet each time you power it on. A PIN or password must be set (using Screen lock option) before encrypting your tablet. SIM Card Lock Set up SIM card lock Tap to open a screen where you can configure the tablet to...

[Page 74](#) Language & input You can use Language & input settings to select the language for the text, voice input and voice output on your tablet and for configuring the onscreen keyboard, including words that you've added to its dictionary. Language Tap to select the system language from a list.

[Page 75: Stylus Pen](#)

Speech Voice Search Tap to open a screen where you can set the voice recognition function. Text-to-speech output Tap to open a screen where you can set the text-to-speech engine required for text-to-speech function. Mouse/Trackpad Pointer speed Tap to configure the mouse pointer speed by dragging the slider left or right.

[Page 76: Accounts](#)

Personal Data Factory data reset Tap to erase all user data in the internal storage. Follow the on- screen instructions to reset it. Please note that data in the removable media won't be erased. Please refer to the section Factory Reset in "Basic"...

[Page 77: Accessibility](#)

Select time zone Tap to open a dialog where you can set the time zone. Use 24-hour format Check this option to display the time using 24-hour time format - for example, 13:00 rather than 1:00 pm. Choose date format Tap to open a dialog where you can select the format for displaying dates.

[Page 78: Accessibility Shortcut](#)

Accessibility shortcut Slide the switch to the ON position to turn on this feature, which allows you to touch your tablet's screen and hear what's under your finger via spoken feedback. This

feature is helpful to blind users. When this feature is turned on, you can quickly enable accessibility features by the following steps: 1.

[Page 79](#) Baseband version Display the baseband version. This function is only supported by 3G models. Kernel version Display the kernel version. Build number Display the build number. User's Manual 6-24...

[Page 80: Optional Accessories](#)

SIM card Peripheral devices USB device HDMI device Toshiba Keyboard Cover Memory media slot The tablet is equipped with a Memory media slot that can accommodate some kinds of memory media with various memory capacities so that you can easily transfer data from devices, such as digital cameras and Personal Digital Assistants.

[Page 81: Media Care](#)

Memory media format New media cards are formatted according to specific standards. If you wish to reformat a media card, be sure to do so with a device that uses media cards. Formatting microSD/SDHC/SDXC memory cards microSD/SDHC/SDXC memory cards are sold already formatted in conformity to specific standards.

[Page 82: Removing A Memory Media](#)

Turn the memory media so that the contacts (metal areas) are facing Insert the memory media into the memory media slot on the tablet. Push the memory media gently until you hear a click. Figure 7-1 Inserting a memory media 1.

[Page 83: Inserting A Sim Card](#)

This section only applies to models with 3G modules. Inserting a SIM card This section explains how to insert a SIM card: Do not carry out the following operations when the tablet is powered on, otherwise the SIM card may be damaged. Turn the SIM card so that the contacts (metal areas) are facing down.

[Page 84: Hdmi Device](#)

To connect a USB device, you must purchase a Micro A plug - A receptacle cable. This item is available from your reseller or TOSHIBA dealer. Make sure the connector is properly aligned with the socket. Do not try to force the connection, doing so can damage the connecting pins.

[Page 85: Toshiba Keyboard Cover](#)

TOSHIBA Keyboard Cover provides Bluetooth keyboard with powerful features and great convenience when using your tablet. Grand tour The following figure shows an overview of TOSHIBA Keyboard Cover. Figure 7-4 Grand tour 1. Hole for tablet back camera 2. Holder 3.

[Page 86](#) Icon Item Function Battery Full charged: Glows white indicator Charging: Glows amber Low battery: Blinks amber Bluetooth Power on: Glows blue for three seconds indicator and then off Searching: Blinks blue until pairing is finished Setting up the Keyboard Cover Fit your tablet into the Keyboard Cover properly.

[Page 87](#) Plug one end of the bundled micro USB to micro USB cable into the micro USB port on your tablet. Plug the other end of the bundled micro USB to micro USB cable into the micro USB port on the keyboard. A full charge takes about 2.5 hours.

[Page 88](#) Now the Keyboard Cover is ready for use. If you want to pair more than one Toshiba Keyboard Cover with your tablet, it is recommended to do pairing one by one. One tablet only support one Toshiba Keyboard Cover in Bluetooth connecting.

[Page 89: Function Keys](#)

Function keys The Keyboard Cover provides function keys enabling you to operate your tablet from the Keyboard. Some function keys are not provided depending on the model you purchased. Icons Function Returns to the previous screen. Returns to the Home screen. Displays recently launched application(s).

[Page 90: Optional Toshiba Accessories](#)

AC adaptor to be kept at each site. Stylus Pen Stylus Pen can be purchased from your TOSHIBA dealer for use as spare items (spare pen tips and a tip draw-out tool are included).

[Page 91](#) Not all the accessories are available in your region. Please contact your reseller or TOSHIBA dealer for more information. User's Manual 7-12...

[Page 92: Troubleshooting](#)

In reality many problems can be solved simply, but a few may require help from TOSHIBA Support - if you find you need to consult others, be prepared to describe the problem in as much detail as possible.

[Page 93: Hardware And System Checklist](#)

Always try to make detailed notes of your observations and keep them in a permanent error log - this will help you to describe your problems to TOSHIBA Support. In addition, if a problem recurs, the log you have made will help to identify the problem faster.

[Page 94: Sound System](#)

Check the software volume settings. Check to see if system sound is muted. Check to make sure the headphone connection is secure. Recorded sound Disable Toshiba Noise Suppressor setting. volume is low Disable Toshiba Beamforming setting. Recorded sound Disable Toshiba Noise Suppressor setting.

[Page 95: Toshiba Support](#)

-> Bluetooth. TOSHIBA Support If you require any additional help using your tablet or if you are having problems operating the tablet, you may need to contact TOSHIBA for additional technical assistance. Before you call Some problems you experience may be related to software or the operating system so it is important that you investigate other sources of assistance first.

[Page 96: Specifications](#)

Chapter 9 Specifications This chapter summarizes the tablet's technical specifications. Physical Dimensions Size Approximately 261 (w) x 179 (d) x 10.5 (h) millimeters (not including parts that extend beyond the main body). Environmental Requirements Conditions Ambient temperature Relative humidity Operating 5°C (41°F) to 35°C 20% to 90% (95°F)

[Page 97: Information For Wireless Devices Wireless Technology Interoperability](#)

) certification as defined by the Wi-Fi ® Alliance TOSHIBA does not guarantee compatibility of this device with all equipment using Bluetooth wireless technology. This device is designed to be interoperable with any product with Bluetooth wireless technology that is based on Frequency Hopping Spread Spectrum...

[Page 98: Wireless Devices And Your Health](#)

Because wireless products operate within the guidelines found in radio frequency safety standards and recommendations, TOSHIBA believes Wireless products is safe for use by consumers. These standards and recommendations reflect the consensus of the scientific community and result from deliberations of panels and committees of scientists who continually review and interpret the extensive research literature.

[Page 99](#) Italy: For private use, a general authorization is required if WAS/ RLAN's are used outside own premises. For public use, a general authorization is required. Luxembourg: Implemented General authorization required for network and service supply. Norway: Implemented This subsection does not apply for the geographical area within a radius of 20 km from the centre of Ny-Alesund.

[Page 100](#) Luxembourg: Implemented General authorization required for network and service supply Russian Limited e.i.r.p 100mW. Permitted to use Federation: only for indoor applications, closed industrial and warehouse areas, and on board aircraft. Permitted to use for local networks of aircraft crew service communications on board aircraft in area of the airport and at all stages of...

[Page 101: Important Notice](#)

in such a manner that the potential for human contact during normal operation is minimized. In the usual operating configuration, the distance between the antenna and the user should not be less than 20cm. Please refer to the tablet user's manual for the details regarding antenna location.

[Page 102](#) If this equipment causes RF interference to other radio stations, promptly change the frequency being used, change the location of use, or turn off the source of emissions. Contact an authorized TOSHIBA service provider if you have problems with interference caused by this product to Other Radio Stations.

[Page 103: Device Authorization](#)

This equipment is approved to the radio standard by the countries/regions in the following table. If you use this equipment in the countries/regions which are not listed in the table blow, please contact TOSHIBA Support. As of April 2013 Austria...

This manual is also suitable for:

[At10pe-a series](#)[At10-a series](#)