



# Toshiba Control panel module for monitor 20550 User Manual

Business phones



1  
2  
3  
4  
5  
6  
7  
8

Table Of Contents

9

|  |
|--|
|  |
|--|

•

[Table of Contents](#)

•

Bookmarks

|  |
|--|
|  |
|--|


## Quick Links

[1 Ring Volume Settings](#)

[2 Ringer Mute](#)

[3 Change Ringer Type](#)

[Download this manual](#)

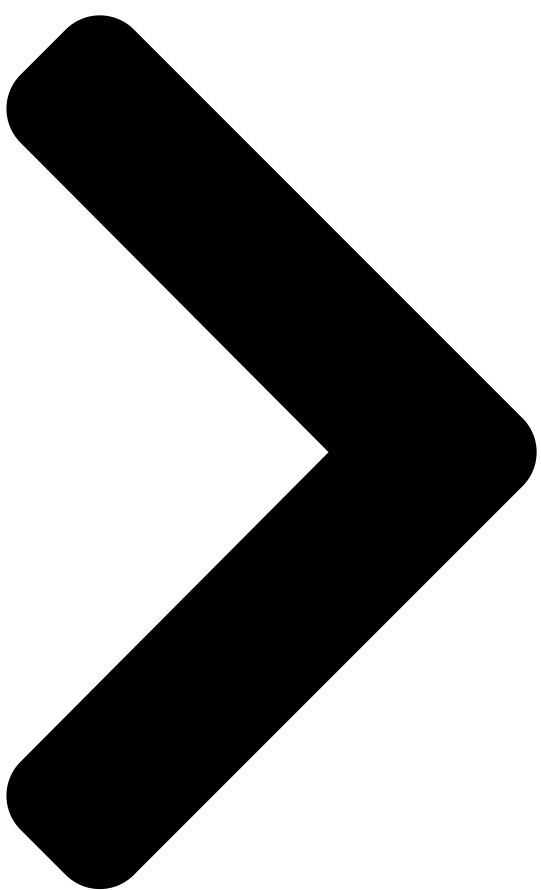

DKT 2404-DECT

User Guide

(337) 234-2828

"Business phones that  
build business"



U N I V E  
**COM**  
L O U I S I A N A

*Expanding To*

## [Table of Contents](#)

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Toshiba Control panel module for monitor 20550

### [Telephone Toshiba Strata DK/CTX 2020-SD Quick Reference Manual](#)

Toshiba strata dk/ctx 2020-sd station set (1 page)

### [Telephone Toshiba 2020-SD Quick Reference Manual](#)

Toshiba strata dk/ctx 2020-sd station set (1 page)

### [Telephone Toshiba 3000 series Quick Reference Manual](#)

Strata ctx dkt/ipt telephone (13 pages)

### [Toshiba 3000 Series, 2000 Series - DKT / IPT Business Telephone Quick Reference Guide with Button Codes](#)

(article)

### [Telephone Toshiba DKT 3000 Quick Reference Manual](#)

Digital telephone (2 pages)

### [Telephone Toshiba DP5022F-SD User Manual](#)

Digital business telephone with 4-line lcd display. hearing aid compatible (12 pages)

### [Telephone Toshiba DKT3220-SD - Digital Phone - Charcoal User Manual](#)

Ipt/dkt telephone (151 pages)

### [Telephone Toshiba DKT User Manual](#)

Strata ctx dkt/ipt telephone (116 pages)

### [Telephone Toshiba DP 5000 Series Quick Reference Manual](#)

(10 pages)

### [Telephone Toshiba IP5000-Series Quick Reference Manual](#)

Toshiba telephone quick reference guide (13 pages)

### [Telephone Toshiba DP5000-Series User Manual](#)

Strata cix telephone (142 pages)

### [Telephone Toshiba CTX IPT/DKT User Manual](#)

Strata cix and ctx ipt/dkt telephone (171 pages)

### [Telephone Toshiba DKT3000 Series User Manual](#)

Strata ctx digital business telephone systems (106 pages)

### [Telephone Toshiba CTX100-S Programming Manual](#)

Strata ctx digital business telephone systems (580 pages)

### [Telephone Toshiba TY-SP1 Operation Manual](#)

Pocket size wireless speaker and speakerphone (2 pages)

### [Telephone Toshiba CIX User Manual](#)

Strata cix and ctx ipt/dkt telephone (141 pages)

## Summary of Contents for Toshiba Control panel module for monitor 20550

## [Page 2: Making A Call To Another Extension](#)

Making a Call to Another Extension 1. Press the TALK button or the speaker-icon button on the handset. 2. Dial the extension number of the desired party (i.e. 201). NOTE: If you walk out of range of the base station, the handset emits an error tone and Out of Range is displayed for five seconds.

## [Page 3: Out Of Range](#)

Redial Press the TALK or the speaker-icon button; then press the Redial button. The last number called will be dialed, and the number displays in the LCD. NOTE: Redial digit length can be up to 32 digits. CIX No Service In cases when the TALK or speaker-icon button is pushed and connection to the CIX cannot be established, or if the base station doesn't respond, the handset goes into idle mode after blinking the following message for seven seconds:...

## [Page 4: Ring Volume Settings](#)

• In standby mode • Battery status icon changes to battery low. • “Charge Battery” message blinks on and off on the display. To restore your battery capacity, return the handset to the charging unit. After the handset is on the charging unit for one minute the battery icon stops blinking and the battery low tone stops.

## [Page 5: Ringer Mute](#)

Press the + (up) button to show the next screen(s). □ When the ringer volume is Off (Vibrate), the handset vibrates instead of ringing. If the handset is on the charger and a call comes in, the ringer outputs the low tone instead of vibrating.

## [Page 6: One-Touch Dialing](#)

One Touch Dialing The F9 – F12 buttons (bottom row of buttons on the phone) can be programmed as One Touch buttons. To Program One Touch / Flexible Button 1. Press the menu/MUTE button. The LCD shows the menu list. 2.

## [Page 7: Place A Call On Hold](#)

Place a Call on Hold 1. Press the Hold button. HOLD displays on the LCD. 2. To resume call, press the flashing function button. Transfer a Call □ Press Cnf/Trn. Dial the extension number in which you wish to transfer the call to.

[Page 8](#) 206 Rue Louis XIV Lafayette, LA 70508 337-234-2828 (Office) [service@uco-la.com](mailto:service@uco-la.com)  
Visit our Website for Video Tutorials: <http://UniversalComOneLA.com/User-Guides/> UCOLA - 061113...

This manual is also suitable for:

[Dkt 2404-dect](#)