

 
TOSHIBA

Toshiba 32L344*DG Quick Start Manual

Led backlight lcd satellite tv

1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26



•

•

Bookmarks

Quick Links

[Download this manual](#) See also: [Online Manual](#)



LED Backlight LCD Satellite TV

TOSHIBA
Leading Innovation >>>
This document is to provide you with an overview of your Toshiba TV.

It is expected that during the life of your TV firmware updates will

be made available to ensure that your TV maintains optimum

performance. You can download the latest version of

firmware from

TOSHIBA

www.toshiba-om.net/firmware.php

Leading Innovation >>>

Some features listed in this document are limited due to local

legislation and may not be available in all countries.

If you wish to view the advanced manual for this Toshiba TV, you can

"Register your TV online at:

www.toshiba-europe.com/registration"

Toshiba estimates that the initiative of making the advanced functions available online

will save over 100,000 trees per year (6.5 Million kg Co2).

If you wish to view the advanced functions but do not have access to a computer or

the internet then please contact your local Helpline number whose Contact details are

QUICK START GUIDE

32L344*DG / 32W344*DG

do so by visiting

www.toshiba-om.net

shown at the back of this book.

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba 32L344*DG

[LCD TV Toshiba 48L344 DG Online Manual](#)

Led backlight lcd satellite tv (50 pages)

[Satellite TV System Toshiba 24D154 DG Series Online Manual](#)

Led backlight lcd satellite tv (55 pages)

[Satellite TV System Toshiba 55L544 DG Series Online Manual](#)

Led backlight lcd satellite tv (60 pages)

Summary of Contents for Toshiba 32L344*DG

[Page 1: Quick Start Guide](#)

Some features listed in this document are limited due to local legislation and may not be available in all countries. If you wish to view the advanced manual for this Toshiba TV, you can do so by visiting www.toshiba-om.net "Register your TV online at: www.toshiba-europe.com/registration"...

[Page 2: Table Of Contents](#)

Using the Remote Control11 Using the Controls on the TV11 Initial Installation12 Network Settings, Portal and YouTube14 Configuring Network Settings14 Using the Toshiba Portal14 Using YouTube14 English - 1 -...

[Page 3: Safety Precautions](#)

Safety Precautions This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken to obtain the best results and for safety to be assured. Please read the points below for your own safety. They are of a general nature, intended to help with all electronic consumer products and some points may not apply to the goods you have just purchased.

[Page 4: Installation And Important Information](#)

Furthermore, under no circumstances shall Toshiba be liable for any consequential loss and/or damage including but not limited to the following, loss of profit, interruption of business, the loss of recorded data whether caused during normal operation or misuse of the product.

[Page 5: Important Safety Information](#)

Important safety information • Any function related to the digital television (with the DVB logo) is available only within the country or area where such signals are transmitted. Verify with the salesperson if it is possible to receive a DVB - T/C/S signal in the area where you live.

[Page 6](#) (3) After the screws are removed, hold the pedestal stand in place, then remove the pedestal stand and the plastic moulding from the TV by removing away from the TV. NOTE: Extreme care should always be used when removing the pedestal stand to avoid damage to the LCD panel. 32L344*DG or 32W344*DG models English - 5 -...

[Page 7: The Remote Control \(Tv - Dvd\)](#)

The Remote Control (TV - DVD) Simple at-a-glance reference of your remote control. 16. No function Standby Standby 17. Pause Numeric buttons Pause Numeric buttons 18. Play Play TV-AV / Channel list / Switches among broadcast types 19. Subtitle on-off (in Media Mute Browser mode and in DVB Mute...

[Page 8: Connecting External Equipment](#)

Connecting External Equipment Before connecting any external equipment, remove the mains plug from the wall socket. (*) Number of these inputs may change according to the model of

your TV. (**) Your TV may not be supported depending on the model. NOTE: Although this TV is able to connect to HDMI Aerial cable:.....

[Page 9: Connecting An Hdmi ® Or Dvi Device To The Hdmi Input](#)

Connecting an HDMI or DVI Device to the HDMI Input ® Connect a DVI Device The HDMI inputs on your TV receive digital audio and uncompressed digital video from an HDMI source Connect an HDMI-to-DVI cable (HDMI type A device or uncompressed digital video from a DVI connector) to the HDMI input socket and audio cables (Digital Visual Interface) source device.

[Page 10: To Connect A Computer](#)

Connecting a Computer Connecting a DVD Player To Connect a Computer Connecting to a DVD Player via YPbPr With either an RGB/PC or an HDMI connection, you Some DVD players are connected through can watch your computer's display on the TV and hear COMPONENT SOCKETS (YPbPr).

[Page 11: Connecting A Home Network](#)

The LAN port allows your TV to connect to your home network. You can use this networking system from the retail outlet or Toshiba service company. You to access photo, video and audio files that are stored can find the phone numbers of the local services on a media server and play/display them on your TV.

[Page 12: Controlling The Tv](#)

Controlling the TV A wide variety of external equipment can be connected via the sockets located on the side and back of the TV. Whilst all the necessary adjustments and controls for the TV are made using the remote control, the buttons on the Back of the TV may be used for some functions.

[Page 13: Initial Installation](#)

Initial Installation Before switching on the TV, put your decoder and media recorder to Standby if they are connected and ensure the aerial and/or Satellite dish is connected to your TV. To set up the TV, use the buttons on the remote control as detailed on page IMPORTANT: Ensure that the aerial...

[Page 14](#) Initial Installation - continued 10. The Auto tuning screen will appear and the After the available stations are stored, Channel List television will start to search for available stations. will be displayed on the screen. The progress bar will move along the line. You must allow the television to complete the search.

[Page 15: Network Settings, Portal And Youtube](#)

The adaptor can be purchased from the retail outlet OK. You may have to enter a password if the network or Toshiba service company. You can find the phone is password-protected. Enter the password and numbers of the local services on the back cover of choose OK on the virtual keyboard and press OK.

[Page 16: Dvd Mode](#)

DVD Mode If your television has a built-in DVD module. The following instructions are for correct operation of the integrated DVD unit. • Multi-Audio (up to 8) support (according to disc • Warning: Risk of exposure to radiation from content). class 1/class 3b visible and invisible laser beams.

[Page 17](#) DVD Mode You can operate DVD, movie CD, music or picture CD's content by using the buttons on your remote control. Below are the main functions of commonly used remote control buttons. Buttons on Movie Picture the Remote Music Playback Playback Playback Playback...

[Page 18: How To Watch A Dvd](#)

DVD Mode General Operation Notes on DVD Playback How to watch a DVD a. No sound will be heard during Rapid advance or NOTE: DVD mode cannot be accessed unless a DVD Rapid reverse. is inserted or a DVD control button is pressed. b.

[Page 19: Dvd Mode Configuration](#)

DVD Mode General Operation DVD Mode Configuration DOWNMIX 1. While in DVD source, press "MYBUTTON1 - " This mode can be selected when the digital audio button to access DVD Setup menu. This is only output of the TV is used. possible if there is no playback.

[Page 20: The Dvd Picture Quality Is Poor](#)

DVD Mode Troubleshooting & Tips The DVD picture quality is poor Notice 1. Make sure the DVD disc surface is not damaged This product incorporates copyright protection (no scratches, fingerprints etc.). technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright 2.

[Page 21: Appendix A: Dvd Mode Supported File Formats](#)

Appendix A: DVD Mode Supported file formats Format Supported File Media Extension Video Audio (Maximum resolution/Bit rate etc.) MPEG Layer MPEG1 .mpg/ .dat/ 1/2/3 .vob MPEG2 MPEG2 Movie XviD/ 3ivx PCM/MP3 XviD Version up to: 1.1.2 MPEG4 PCM/MP3 .avi MS ISO PCM/MP3 Support SP and ASP MPEG4...

[Page 22: Specifications And Accessories](#)

Side AV cable YPbPr Connection Cable Stand fixing cover P Clip Optional Accessories Wireless USB Adaptor - Toshiba WLM -30U2 and is available from the retail outlet or Toshiba service company. 32" W 32" L Energy Efficiency Class Visible Screen Size (approx.) 80cm / 32"...

[Page 23: License Information](#)

License Information • HDMI, the HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries. • DVB is a registered trademark of the DVB Project. • [1] EIA/CEA-861-D compliance covers the transmission of uncompressed digital video with high-bandwidth digital content protection, which is being standardized for reception of high-definition video signals.

[Page 24: Q & A Section](#)

Q & A Section Question Answer Check the TV is not in standby mode Why is there no sound or picture? Check the mains plug and all mains connections Check the volume has not been turned off or sound mute has Why is there a picture but no sound? not been selected does...

[Page 25](#) REACH in a concentration above 0.1 % weight by weight. Toshiba hereby declares that this product with an integrated Wireless Function is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC..

[Page 26](#) If you wish to view the advanced functions but do not have access to a computer or the internet then please contact your nearest owner's manual Helpline number from the numbers shown below. Country name locally Contact Number Österreich 0810 - 144 122 (7,3 ct/min aus dem Festnetz der Telekom Austria, Mobil ggf.

This manual is also suitable for:

32w344*dg