



Sanyo SK-ST4 Instruction Manual

4 slice cool touch toaster

1
2
3
4

--



•

Bookmarks

[Download this manual](#)

Quick Links



Instruction Manual

SK-ST4

4 Slice Cool Touch Toaster

Carefully read these instructions before using your appliance.



[Next Page](#)

1
2
3
4

Related Manuals for Sanyo SK-ST4

[Toaster Sanyo SK-SR2 Instruction Manual](#)

2-slice toaster (4 pages)

[Toaster Sanyo SK-X100 Instruction Manual](#)

(4 pages)

[Toaster Sanyo SK-SR4 Instruction Manual](#)

4-slice toaster (4 pages)

[Toaster Sanyo SK-ST2 Instruction Manual](#)

Stainless steel toaster (4 pages)

Summary of Contents for Sanyo SK-ST4

[Page 1](#) Instruction Manual SK-ST4 4 Slice Cool Touch Toaster Carefully read these instructions before using your appliance.

[Page 2](#) FOR YOUR SAFETY • Carefully read these instructions before using your appliance. • Do not immerse in water or other liquids. Ensure that the appliance does not get wet and do not use with wet hands. • Keep out of reach of children. This appliance is not intended for use by young children or infirm persons without supervision.

[Page 3](#) • Do not permit power cord to come in contact with hot objects. A damaged supply cord must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard. • Do not attempt to service this appliance yourself. Refer to qualified service personnel.

[Page 4](#) Do not operate the toaster without the crumb tray in place. • To clean the outer surface of the toaster, use a soft damp cloth and dry it afterwards with a dry towel. Clean and store only after unplugging the toaster from the mains supply. SANYO Electric Co., Ltd...