 


# Toshiba RAS-M14GAV-E Installation Manual

Split type



1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12



•

[Table of Contents](#)

•

## Bookmarks

## Quick Links

[1 Installation Manual](#)

[2 Table of Contents](#)


[3 Installation Diagram of Indoor and Outdoor Units](#)

[4 Indoor Unit](#)

[5 Outdoor Unit](#)

[Download this manual](#)

See also: [Service Manual](#) , [Installation Manual](#)

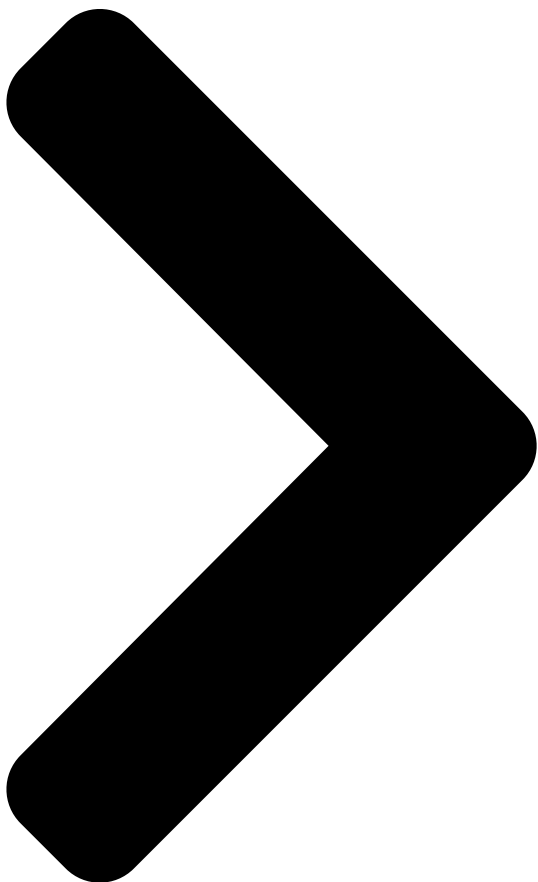



# INSTALLATION MANUAL

## AIR CONDITIONER (SPLIT TYPE)

Indoor unit

RAS-(B) 10, 13, 18UEV Series

Outdoor unit

RAS-10, 13, 18SAV Series

RAS-M14GAV-E

RAS-M18GAV-E

RAS-3M18SAV-E

RAS-3M26GAV-E1

# TOSHIBA

RAS-4M23SAV-E  
RAS-4M27GAV-E1  
RAS-5M34UAV-E

ISH  
ÑOL  
ÇAIS  
ANO  
SCH  
UGUÊS  
KI  
Y  
КИЙ  
TSKI  
AR  
ÇE  
PL  
DS  
A  
KI

# TOSHIBA



ManualsLib.com

Toshiba 1112150201 (CVF)

[Table of Contents](#)

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Toshiba RAS-M14GAV-E

[Air Conditioner Toshiba RAS-M10GDCV-E Owner's Manual](#)

(multi-split type) (164 pages)

[Air Conditioner toshiba RAS-B10GKVP-E Service Manual](#)

Split type heat pump type/cooling onlytype (134 pages)

[Air Conditioner Toshiba 16N3KVP Series Owner's Manual](#)

(105 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type air conditioner (91 pages)

[Air Conditioner Toshiba RAS-M07N3KV2 Series Installation Manual](#)

(78 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type (31 pages)

[Air Conditioner Toshiba RAS-B10GKVP-E Installation Manual](#)

Split type for general public use (20 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(19 pages)

[Air Conditioner Toshiba RAS-10 Owner's Manual](#)

18ufv series, 18sav series (19 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

Split type air conditioner (19 pages)

[Air Conditioner Toshiba RAS-M14GAV-E Installation Manual](#)

Outdoor unit multi-split type (16 pages)

[Air Conditioner Toshiba RAS-B10 SERIES Installation Manual](#)

(10 pages)

[Air Conditioner Toshiba RAS-B10N3KVP series Installation Manual](#)

Split type (9 pages)

[Air Conditioner Toshiba RAS-B10 Owner's Manual](#)

(8 pages)

[Air Conditioner Toshiba RAS-M14GAV-E Owner's Manual](#)

Split type (7 pages)

[Air Conditioner Toshiba RAS-B10N3KVP Owner's Manual](#)

Toshiba air conditioner (split type) owner's manual (5 pages)

## Summary of Contents for Toshiba RAS-M14GAV-E

### [Page 1: Installation Manual](#)

ČESKY РУССКИЙ HRVATSKI MAGYAR TÜRKÇE NEDERLANDS ΕΛΛΗΝΙΚΑ SVENSKA Indoor unit  
SUOMI RAS-(B) 10, 13, 18UFV Series NORSK Outdoor unit DANSK RAS-10, 13, 18SAV Series  
ROMÂNĂ RAS-M14GAV-E RAS-M18GAV-E БЪЛГАРСКИ RAS-3M18SAV-E EESTI RAS-3M26GAV-E1  
LATVISKI RAS-4M23SAV-E RAS-4M27GAV-E1 SLOVENČINA RAS-5M34UAV-E SLOVENŠČINA  
Toshiba 1112150201 (CVF)

### [Page 2: Table Of Contents](#)

Test İşlemi .....9 □ □ □ Probní Rad .....9 A Távirányítón az A-B Állás  
Kiválasztása.....9 Otomatik Yeniden Başlama Ayarı .....9 □ □ □ Postava za Automatsko

Ponovno Pokretanje .....9 Testtüzem .....9 □ □ Automatikus Újraindítás Beállítás .....9 □  
Toshiba 1112150201 (TOC)

[Page 3](#) Izbira Nastavitve A-B na Daljinskem Upravljalniku ....9 □ □ Darbības Pārbaude  
.....9 Testovacia Prevádzka .....9 □ □ Preizkus Delovanja .....9 Darbības  
Automātiskās Atsākšanas Funkcijas Iestatīšana ..9 Nastavenie Automatického Reštartu .....9  
Nastavitev za Samodejni Ponovni Zagon .....9 □ □ □ Toshiba 1112150201 (TOC)

#### [Page 4: Precautions For Safety](#)

• WHEN INSTALLING OR RE-INSTALLING THE AIR CONDITIONER, DO NOT INJECT AIR OR OTHER SUBSTANCES BESIDES THE DESIGNATED REFRIGERANT “R410A” INTO THE REFRIGERATING CYCLE. IF AIR OR OTHER SUBSTANCES ARE MIXED, AN ABNORMAL PRESSURE CAN OCCUR IN THE REFRIGERATING CYCLE, AND THIS CAN CAUSE AN INJURY DUE TO A PIPE RUPTURE. Toshiba 1112150201 (EN)

[Page 5](#) Please make absolutely sure that the installation of this appliance is reported to the local power supplier before installation. If you experience any problems or if the installation is not accepted by the supplier, the service agency will take adequate countermeasures. Toshiba 1112150201 (EN)

#### [Page 6: Installation Diagram Of Indoor And Outdoor Units](#)

(polyethylene foam, 8 mm thick) Putty, PVC tapes Air outlet each 90 mm 600 mm Drain outlet X  
When using a multi-system outdoor unit is used, refer to the installation manual provided with the model concerned. Toshiba 1112150201 (EN)

#### [Page 7: Indoor Unit](#)

1. After determining the pipe hole position, drill the pipe hole (Ø65 mm) at a slight downward slant to the outdoor side. NOTE • When drilling a wall that contains a metal lath, wire lath or metal plate, be sure to use a pipe hole brim ring sold separately. Toshiba 1112150201 (EN)

[Page 8](#) • Use stranded wire only. • Wire type : H07RN-F or 60245 IEC66 (1.0 mm or more) Do not put the Do not put the drain hose end drain hose end in into water. the drainage ditch. Toshiba 1112150201 (EN)

#### [Page 9: Concealed Installation](#)

Temperature indicator will light up for 5 seconds. - To cancel, press AIR OUTLET SELECT button for 20 seconds then, 5 beep sounds. Then indication at Temperature indicator will blink for 5 seconds. - To prevent dewfall, above plate angle should be narrow. Toshiba 1112150201 (EN)

#### [Page 10: Outdoor Unit](#)

9.52 0 to 0.5 1.5 to 2.0 13.2 33 to 42 3.3 to 4.2 such as from audio equipment, welders, and medical equipment. 12.7 0 to 0.5 2.0 to 2.5 16.6 50 to 62 5.0 to 6.2 Toshiba 1112150201 (EN)

#### [Page 11: Evacuating](#)

Connection to fixed wiring : A switch which disconnects all poles and • Securely tighten the valve stem cap with torque in the following table: has a contact separation of at least 3 mm must be incorporated in the fixed wiring. Toshiba 1112150201 (EN)

#### [Page 12: Others](#)

Note : 1. Repeat above step to reset Remote Control to be A. 2. Remote Control A has not “A” display. 3. Default setting of Remote Control from factory is A. “B” Display “00” Display PRESET Toshiba 1112150201 (EN)

This manual is also suitable for:

[Ras-3m26gav-e1Ras-m18gav-eRas-3m18sav-eRas-4m23sav-eRas-4m27gav-e1Ras-5m34uav-e ...](#) [Show all](#)