 


Precautions For Safety - Toshiba RAS-M14GAV-E Installation Manual

Split type

1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12



•

[Table of Contents](#)

•

Bookmarks



Be sure to read this installation manual carefully before installing.

Recommend to the owner to perform maintenance periodically when using over long periods of time.

Be sure to follow the precautions provided here to avoid safety risks. The symbols and their meanings are shown below.

DANGER : It indicates that incorrect use of this unit can result in a high possibility of severe injury (*1) or death.

WARNING : It indicates that incorrect use of this unit may cause severe injury or death.

CAUTION : It indicates that incorrect use of this unit may cause personal injury (*2), or property damage (*3).

*1 : A severe injury refers to blindness, injury, burns (hot or cold), electrical shock, bone fracture, or poisoning that leaves aftereffects and requires hospitalization or extended out-patient treatment.

*2 : Personal injury means a slight accident, burn, or electrical shock which does not require admission or repeated hospital treatment.

*3 : Property damage means greater damage which affects assets or resources.

Power supply cord of parts of appliance for outdoor use shall be at least polychloroprene sheathed flexible cord (design H07RN-F) or cord designation 60245 IEC66 (1.5 mm

or more) (Shall be installed in accordance with national wiring regulations).

CAUTION

• THIS AIR CONDITIONER USES THE NEW HFC REFRIGERANT (R410A), WHICH DOES NOT DESTROY THE OZONE LAYER.

R410A refrigerant is apt to be affected by impurities such as water, oxidizing membranes, and oils because the pressure of R410A refrigerant is approx. 1.6 times of refrigerant R22. As well as the adoption of this new refrigerant, refrigerating machine oil has also been changed. Therefore, during installation work, be sure that water, dust, former refrigerant, or refrigerating machine oil does not enter the refrigeration cycle of a new-refrigerant air conditioner. To avoid mixing refrigerant and refrigerating machine oil, the sizes of charging port connecting sections on the main unit are different from those for the conventional refrigerant, and different size tools are also required. For connecting pipes, use new and clean piping materials with highpressure withstand capabilities, designed for R410A only, and ensure that water or dust does not enter. Moreover, do not use any existing piping as its pressure withstand may be insufficient and may contain impurities.

DANGER

PRECAUTIONS FOR SAFETY

- FOR USE BY QUALIFIED PERSONS ONLY.
- MEANS FOR DISCONNECTION FROM THE SUPPLY HAVING A CONTACT SEPERATION OF AT LEAST 3 mm IN ALL POLES MUST BE INCORPORATED IN THE FIXED WIRING.
- TURN OFF MAIN POWER SUPPLY BEFORE ATTEMPTING ANY ELECTRICAL WORK. MAKE SURE ALL POWER SWITCHES ARE OFF. FAILURE TO DO SO MAY CAUSE ELECTRIC SHOCK.
- CONNECT THE CONNECTING CABLE CORRECTLY. IF THE CONNECTING CABLE IS CONNECTED WRONGLY, ELECTRIC PARTS MAY BE DAMAGED.
- CHECK THE EARTH WIRE THAT IT IS NOT BROKEN OR DISCONNECTED BEFORE INSTALLATION.
- DO NOT INSTALL NEAR CONCENTRATIONS OF COMBUSTIBLE GAS OR GAS VAPORS. FAILURE TO FOLLOW THIS INSTRUCTION CAN RESULT IN FIRE OR EXPLOSION.
- TO PREVENT OVERHEATING THE INDOOR UNIT AND CAUSING A FIRE HAZARD, PLACE THE UNIT WELL AWAY (MORE THAN 2 M) FROM HEAT SOURCES SUCH AS RADIATORS, HEATERS, FURNACE, STOVES, ETC.
- WHEN MOVING THE AIR CONDITIONER FOR INSTALLING IT IN ANOTHER PLACE AGAIN, BE VERY CAREFUL NOT TO GET THE SPECIFIED REFRIGERANT (R410A) WITH ANY OTHER GASEOUS BODY INTO THE REFRIGERATION CYCLE. IF AIR OR ANY OTHER GAS IS MIXED IN THE REFRIGERANT, THE GAS PRESSURE IN THE REFRIGERATION CYCLE BECOMES ABNORMALLY HIGH AND IT RESULTINGLY CAUSES BURST OF THE PIPE AND INJURIES ON PERSONS.
- IN THE EVENT THAT THE REFRIGERANT GAS LEAKS OUT OF THE PIPE DURING THE INSTALLATION WORK, IMMEDIATELY LET FRESH AIR INTO THE ROOM. IF THE REFRIGERANT GAS IS HEATED BY FIRE OR SOMETHING ELSE, IT CAUSES GENERATION OF POISONOUS GAS.
- WHEN INTALLING OR RE-INSTALLING THE AIR CONDITIONER, DO NOT INJECT AIR OR OTHER SUBSTANCES BESIDES THE DESIGNATED REFRIGERANT "R410A" INTO THE REFRIGERATING CYCLE. IF AIR OR OTHER SUBSTANCES ARE MIXED, AN ABNORMAL PRESSURE CAN OCCUR IN THE REFRIGERATING CYCLE, AND THIS CAN CAUSE AN INJURY DUE TO A PIPE RUPTURE.

PRECAUTIONS FOR SAFETY

For general public use

New refrigerant air conditioner installation

1

Toshiba 1112150201 (EN)

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
2
3
4
5
6
7
8

Quick Links:

[Installation Manual](#)

[Table of Contents](#)

[Installation Diagram of Indoor and Outdoor...](#)

[Indoor Unit](#)

[Outdoor Unit](#)

Related Manuals for Toshiba RAS-M14GAV-E

[Air Conditioner Toshiba RAS-M10GDCV-E Owner's Manual](#)

(multi-split type) (164 pages)

[Air Conditioner toshiba RAS-B10GKVP-E Service Manual](#)

Split type heat pump type/cooling onlytype (134 pages)

[Air Conditioner Toshiba 16N3KVP Series Owner's Manual](#)

(105 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type air conditioner (91 pages)

[Air Conditioner Toshiba RAS-M07N3KV2 Series Installation Manual](#)

(78 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type (31 pages)

[Air Conditioner Toshiba RAS-B10GKVP-E Installation Manual](#)

Split type for general public use (20 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(19 pages)

[Air Conditioner Toshiba RAS-10 Owner's Manual](#)

18ufv series, 18sav series (19 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

Split type air conditioner (19 pages)

[Air Conditioner Toshiba RAS-M14GAV-E Installation Manual](#)

Outdoor unit multi-split type (16 pages)

[Air Conditioner Toshiba RAS-B10 SERIES Installation Manual](#)

(10 pages)

[Air Conditioner Toshiba RAS-B10N3KVP series Installation Manual](#)

Split type (9 pages)

[Air Conditioner Toshiba RAS-B10 Owner's Manual](#)

(8 pages)

[Air Conditioner Toshiba RAS-M14GAV-E Owner's Manual](#)

Split type (7 pages)

[Air Conditioner Toshiba RAS-B10N3KVP Owner's Manual](#)

Toshiba air conditioner (split type) owner's manual (5 pages)

Related Content for Toshiba RAS-M14GAV-E

[RAV-GM561ATP-TR1 General Safety Precautions For Using R32 Refrigerant](#)

Toshiba RAV-GM561ATP-TR1

[RAS-B10S4KVDG-E Precautions For Safety](#)

Toshiba RAS-B10S4KVDG-E

[RAS-2M18G3AVG-TR Safety Precautions](#)

Toshiba RAS-2M18G3AVG-TR

[MMD-UP0031SPHY-E Precautions For Safety](#)

Toshiba MMD-UP0031SPHY-E

[RAS-2M10G3AVG-E Safety Precautions](#)

Toshiba RAS-2M10G3AVG-E

[RAS-5M34G3AVG-E Safety Precautions](#)

Toshiba RAS-5M34G3AVG-E

[MMU-UP0031YHP-ETR Precautions For Safety](#)

Toshiba MMU-UP0031YHP-ETR

[RAV-GV1101AT8P-TR General Safety Precautions For Using R32 Refrigerant](#)

Toshiba RAV-GV1101AT8P-TR

This manual is also suitable for:

[Ras-3m26gav-e1Ras-m18gav-eRas-3m18sav-eRas-4m23sav-eRas-4m27gav-e1Ras-5m34uav-e ...](#) [Show all](#)