



Toshiba DVD VIDEO / CD / VCD 5 DISC CAROUSEL CHANGER Owner's Manual

Dvd video / cd / vcd 5 disc carousel changer;

1

2

3

4

5

6

7

8

Table Of Contents

9

10

11

12

13

 
14

15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52



•

[Table of Contents](#)

•

Bookmarks

Quick Links

[1 Front Panel](#)

[2 Connecting to a Tv](#)

[3 Playing a Disc](#)

[4 Playing in Random Order](#)

[5 Before Calling Service Personnel](#)

[Download this manual](#)



Downloaded From Disc-Player.com Toshiba Manuals

© 2004 Toshiba Corporation

SD-5915SU **TOSHIBA**

SD-5915SC

Introduction

Connections

Basic playback

Advanced

playback



DVD VIDEO / CD / VCD

5 DISC CAROUSEL CHANGER

Function setup

Others

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba DVD VIDEO / CD / VCD 5 DISC CAROUSEL CHANGER

[CD Player Toshiba SD-5915SC Owner's Manual](#)

Toshiba dvd video / cd / vcd 5 disc carousel changer owner's manual sd-5915su, sd-5915sc (52 pages)

[Media Player Toshiba V Series Brochure](#)

Toshiba digital camera data specification (2 pages)

[Media Player Toshiba F Series Service Manual](#)

Hdd (53 pages)

[Media Player Toshiba MET401 User Manual](#)

Portable media player (124 pages)

[Media Player Toshiba Gigabeat F Series User Manual](#)

Digital audio players (225 pages)

[Media Player Toshiba gigabeat F60 Owner's Manual](#)

Toshiba hdd audio player (78 pages)

[Media Player Toshiba STOR.E TV+ User Manual](#)

(56 pages)

[Media Player Toshiba Gigabeat F Manual](#)

Rockbox firmware manual (254 pages)

[Media Player Toshiba BDX5400KC User Manual](#)

Blu-ray disc and online media player (45 pages)

[Media Player Toshiba BDX2400KC User Manual](#)

Blu-ray disc and online media player (45 pages)

[Media Player Toshiba HDD Portable Media Player Gigabeat S 30 Specifications](#)

Portable media player (2 pages)

Summary of Contents for Toshiba DVD VIDEO / CD / VCD 5 DISC CAROUSEL CHANGER

[Page 1](#) Introduction Connections Basic playback Advanced playback SD-5915SU Function setup SD-5915SC Others Downloaded From Disc-Player.com Toshiba Manuals © 2004 Toshiba Corporation...

[Page 2: Introduction](#)

- Consult the dealer or an experienced radio/TV technician for help. WARNING: Changes or modifications made to this equipment, not expressly approved by Toshiba, or parties authorized by Toshiba, could void the user's authority to operate the equipment. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 3](#) Be aware that this equipment is still powered even after the ON/STANDBY indicator turns off (standby mode) by pressing the ON/STANDBY button. To disconnect this equipment completely from the mains power, pull out the power plug from the wall outlet. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 4: Important Safety Instructions](#)

Downloaded From Disc-Player.com Toshiba Manuals...

[Page 5: Additional Safety Instructions](#)

23. The apparatus includes lead, an ingredient of solder used on the PCB, which is a harmful substance to human and the environment. When disposing of this apparatus, follow the rules and regulations in your area. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 6: Precautions](#)

To obtain a condensation will seldom occur. clear picture, we recommend regular inspection and maintenance (cleaning or parts replacement) every 1,000 hours of use depending on the operating environment. For Wall outlet details, contact your nearest dealer. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 7: Notes On Discs](#)

Do not store discs in place subject to moisture and dust Reverse engineering or disassembly is prohibited. such as a bathroom or near a humidifier. Store discs vertically in a case. Stacking or placing objects on discs outside of their case may cause warping. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 8: Playable Discs](#)

Inc. and Toshiba of Canada, Ltd. cannot guarantee that this player will play every feature of every DVD bearing the DVD logo. As one of the creators of DVD technology, Toshiba DVD players are manufactured to the highest standards of quality and, as a result, such incompatibilities are very rare.

[Page 9: Table Of Contents](#)

Locating a title using the top menu24 LIMITED WARRANTY DVD VIDEO Locating a desired section by entering the PLAYER 50 corresponding number 25 Skipping to next/previous chapter or track ..25 Downloaded From Disc-Player.com Toshiba Manuals...

[Page 10: Identification Of Controls](#)

Rear panel VIDEO OUT (Y/P (Component video) jacks VIDEO OUT jack 14 VIDEO OUT AUDIO OUT COAXIAL Power cord COAXIAL DIGITAL AUDIO OUT jack 17 ANALOG AUDIO OUT (L/R) jacks S VIDEO OUT jack 14 Downloaded From Disc-Player.com Toshiba Manuals...

[Page 11: Dvd Display](#)

Example Example TITLE Playing chapter 3 of title 2 Playing track 1 Playing track 6 Some discs may not display chapter Some discs may not display track numbers or elapsed time. numbers or elapsed time. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 12: Remote Control](#)

ENTER button * MENU button Use the MENU button to display the menu included on many DVD video discs. To operate a menu, follow the instructions in "Locating a title using the top menu". 24 Downloaded From Disc-Player.com Toshiba Manuals...

[Page 13: Loading Batteries](#)

• If the remote control does not function correctly or if the operating range becomes reduced, replace all batteries with new ones. • If battery leakage occurs, wipe the battery liquid from the Downloaded From Disc-Player.com Toshiba Manuals battery compartment, then insert new batteries.

[Page 14: Connections](#)

• Connect the DVD video player directly to your TV. If you connect the DVD video player to a VCR, TV/VCR combination or video selector, the playback picture may be distorted as DVD video discs are copy protected. • Analog audio out will not have sound if DTS playback is selected. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 15: Connecting To An Audio System And Tv Equipped With Component Video Inputs](#)

• Turn off the amplifier before you connect or disconnect the DVD video player's power cord. If you leave the amplifier power on, the speakers may be damaged. • Analog audio out will not have sound if DTS playback is selected. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 16: Connecting To Optional Equipment](#)

• Turn off the amplifier before you connect or disconnect the DVD video player's power cord. If you leave the amplifier power on, the speakers may be damaged. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 17: Connecting To An Amplifier Equipped With A Dolby Digital Decoder](#)

Surround Pro Logic COAXIAL To audio input To ANALOG * Connect one or two rear speakers. AUDIO OUT The output sound from the rear Audio cable speakers will be monaural even if you connect two rear speakers. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 18: Connecting To An Amplifier Equipped With A Dts Decoder](#)

MPEG2 audio decoder or MPEG2 audio processor. On-screen display Select Page Amplifier equipped with an "Raw" "Digital Out" MPEG2 audio decoder or "PCM" COAXIAL To COAXIAL type To COAXIAL digital audio input DIGITAL AUDIO OUT 75 Ω coaxial cable Downloaded From Disc-Player.com Toshiba Manuals...

[Page 19: Connecting To An Amplifier Equipped With A Digital Audio Input](#)

On-screen display Select Page system (right and left front speakers). "Digital Out" "PCM" Amplifier equipped with a digital audio input COAXIAL To COAXIAL type To COAXIAL digital audio input DIGITAL AUDIO OUT 75 Ω coaxial cable Downloaded From Disc-Player.com Toshiba Manuals...

[Page 20: Basic Playback](#)

DISC SKIP The disc on the selected disc tray cause the DVD video player to malfunction. will be played back automatically. • Do not place a disc which is unplayable in this DVD video player. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 21](#) • In many instances, a menu screen will appear after playback of a movie is completed. Prolonged display of an on- screen menu may damage your television set, permanently etching that image onto its screen. To avoid this, be sure to press STOP button on your remote control once the movie is completed. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 22: Variable Speed Playback](#)

Playing frame by frame To resume normal playback Press PAUSE/STEP during still playback. Press PLAY. Each time you press PAUSE/ PLAY PAUSE/STEP STEP button, picture advances one frame. Note The sound is muted during frame by frame playback. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 23: Playing In Slow-Motion](#)

• There may be a difference in the location where playback resumes depending on the disc. • Settings you changed using the on-screen displays while the DVD video player keeps a location in the memory may function only after the memory is cleared. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 24: Locating A Desired Section](#)

• This method of locating a title is available only on a ENTER designated number with the number disc that contains a top menu. buttons. • Instruction notes of discs may refer to the button that displays the top menu as TITLE button. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 25: Locating A Desired Section By Entering The Corresponding Number](#)

SKIP or SKIP button. Playback starts from the beginning of the current chapter or track. When you press twice in quick successions, playback starts from the beginning of the preceding chapter or track. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 26: Advanced Playback](#)

DVD video disc or off the DVD video player to clear the memory. within the current track of the VIDEO CD / audio CD. • You can move through the menu by pressing the buttons Downloaded From Disc-Player.com Toshiba Manuals...

[Page 27: Playing In A Favorite Order](#)

• The programmed selections will be cleared when you Press / / / to move the highlighted bar to turn off the DVD video player. Play Program, then press ENTER. The DVD video player starts program playback. ENTER Downloaded From Disc-Player.com Toshiba Manuals...

[Page 28: Playing Repeatedly](#)

(Rep A- (VIDEO CD). • There may be a slight difference between point A and the location where playback actually resumes depending on the 01:03:18 50:38:20 disc. Rep A-B Downloaded From Disc-Player.com Toshiba Manuals...

[Page 29: Playing In Random Order](#)

If you press REPEAT in random on mode, the DVD player automatically starts random playback after finishing the current title, chapter or track. The mode changes same as "Repeating title, chapter or track" Downloaded From Disc-Player.com Toshiba Manuals...

[Page 30: On-Screen Display Operation](#)

Angle quality. Subtitle Bit Rate setting setting Note DISPLAY is prohibited during MP3 / WMA playback. After settings, press DISPLAY again to return to the normal screen. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 31: Selecting A Language](#)

• Quantization bit of signals of 20 bit or higher which is output from the COAXIAL DIGITAL AUDIO OUT jack is 16 bit if they are in a copyright protected disc. Downloaded From Disc-Player.com Toshiba Manuals • Virtual Effect is selected.

[Page 32: Selecting Subtitles](#)

When you select a subtitle language which is not included on the disc, the DVD video player plays a prior are language programmed on the disc. • During some scenes, the subtitles may not appear immediately after you change the subtitle language. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 33: Selecting The Camera Angle](#)

• About two seconds later, playback continues from the new angle you selected. • If no button is pressed within 10 seconds, playback continues without changing the current angle. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 34: Zooming A Picture](#)

/ / / buttons. ENTER When you reach the edge of the image, the display will not shift anymore in that direction. Press ZOOM button repeatedly until the " " is displayed. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 35: Playing Mp3/Wma Files](#)

Constant Bit Rate) (including CD-R containing MP3/WMA files). Given the fact MP3: 32 kbps - 320 kbps (CBR - that technology in this area is still maturing, Toshiba cannot Constant Bit Rate) guarantee that all genre of recordable discs will produce •...

[Page 36: Viewing Jpeg Files](#)

Press SEARCH and enter the track SEARCH number to quickly select your image. To rotate an image Press ANGLE repeatedly. Search Track ---- The image rotates by clockwise ANGLE 90-degree. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 37: Viewing A Thumbnail View](#)

Discs whose compatibility with this DVD video player has • Playable discs: CD-ROM, CD-R (650MB / 74 been confirmed by TOSHIBA are as follows. min. only) CD-RW is not Many of these discs, when loaded, will make the DVD recommendable.

[Page 38: Function Setup](#)

• SETUP button is prohibited when the player is reading a JPEG disc or a folder list is displayed. SETUP button can only be accessed in tray opened position. Press to select the setting you want to change, then press ENTER. ENTER ENTER Downloaded From Disc-Player.com Toshiba Manuals...

[Page 39](#) Rating Password/Rating To create a personal security code. Turn the parental lock function on or off. Load Factory To return the initial settings such as Language, Video, Audio and etc. to the factory default. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 40: Setting Details](#)

Some DVD video discs may not include your pre-selected language. In this case, the DVD video player automatically displays disc menus consistent with the disc's initial language setting. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 41](#) Some DVD video discs may be include your pre-selected language than you selected. A prior language may be language. In this case, the DVD video player automatically programmed on the disc. displays disc menus consistent with the disc's initial language setting. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 42](#) CVBS. distorted during playback. Images will appear to be Progressive mode can only be on when YUV is horizontally compressed. Always be sure that your TV selected. shape conforms to the actual TV in use. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 43](#) Dolby Digital, DTS, MPEG1 or MPEG2 recording system. Note When you make a connection to a TV, or Dolby Surround Pro Logic or stereo system via the analog audio jacks, select "PCM" or "Raw". Downloaded From Disc-Player.com Toshiba Manuals...

[Page 44](#) Level 1 : Kid Safe Level 2 : Level 3 : Level 4 : PG_13 Level 5 : PG_R Level 6 : Level 7 : NC_17 Level 8 : Adult (parental lock is not active) Downloaded From Disc-Player.com Toshiba Manuals...

[Page 45: Table Of Languages](#)

Esperanto Maltese Tatar Estonian Burmese Basque Nauru Ukrainian Persian Nepali Urdu Finnish Norwegian Uzbek Fiji Occitan Vietnamese Faroese (Afan) Oromo Volapük Frisian Oriya Wolof Irish Panjabi Zhosha Scottish Gaelic Polish Yoruba Galician Pashto, Pushto Zulu Downloaded From Disc-Player.com Toshiba Manuals...

[Page 46: Others](#)

ENTER • If you replace the remote control's batteries, remember to reprogram the brand codes for TV. • Press DVD back if DVD operation is required. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 47](#) RUNCO (NEC) HALLMARK SAMSUNG HITACHI SANYO INFINITY SCOTCH SCOTT SEARS SHARP SONY MAGNAVOX SOUNDESIGN MARANTZ SUPREME MEGATRON SYLVANIA MEMOREX TANDY TECHNICS MIDLAND TECHWOOD MITSUBISHI TEKNIKA MOTOROLA VICTOR VIDIKRON NIKKO VIDTECH OPTIMUS WARDS OPTONICA ZENITH PANASONIC PENNEY Downloaded From Disc-Player.com Toshiba Manuals...

[Page 48: Before Calling Service Personnel](#)

• The remote control is too far from • Operate the remote control within about 7 m. the DVD video player. • The batteries in the remote control • Replace the batteries with new ones. are exhausted. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 49: Specifications](#)

2.0 V (rms), 680 Ω , pin jacks (L, R) x 1 Audio output (ANALOG) Outputs Audio/video cable1 Remote control (SE-R0131) 1 Batteries (AAA)2 • Designs and specifications are subject to change without notice. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 50: Player](#)

Limited United States Warranty y DVD Players - Exchange Warranty y Toshiba America Consumer Products, L.L.C. ("TACP") makes the following limited warranties to original consumers in the United States. THESE LIMITED WARRANTIES EXTEND TO THE ORIGINAL CONSUMER PURCHASER OR ANY PERSON RECEIVING THIS DVD PLAYER AS A GIFT FROM THE ORIGINAL CONSUMER PURCHASER AND TO NO OTHER PURCHASER OR TRANSFEREE PRODUCTS PURCHASED IN THE U.S.A.

[Page 51](#) 90 days from the date you discovered or should have discovered, the defect. This limitation does not apply to implied warranties arising under the law of any state of the U.S.A. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 52](#) CANADIAN WARRANTY GARANTIE CANADIENNE Toshiba of Canada Limited (TCL) makes the following limited 1) Toshiba du Canada Limit e (TLC) of fre au Canada les garanties warranties to original consumers in Canada. Please retain limit es suivantes aux consommateurs origin-aux. Veuillez your "Bill of Sale"...

This manual is also suitable for:

[Sd-5915suSd-5915sc](#)